

KETEC
PHAZOR
SYSTEM AND TAG
INSTALLATION GUIDE

PLEASE

READ

CAREFULLY

FCC COMPLIANCE

This equipment has been tested and found to comply with the limits stated in Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be required to correct the interference.

EQUIPMENT MODIFICATION

Any equipment changes or modifications not expressly approved by Ketec Inc. could void the user's authority to operate this equipment under Part 15 of the FCC Rules. Unauthorized changes or modifications will also void any warranty provided by Ketec Inc.

WARRANTY DISCLAIMER

Ketec Inc. makes no representation or warranty with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness of purpose. Further, Ketec Inc. reserves the right to revise this publication or make changes to its content without obligation to notify any person or company of such revision or change.

Copyright 2007

All rights reserved

No part of this manual may be reproduced in
any form without written permission from Ketec Inc.


Installation

Before installing any Ketec equipment, check all packing materials to be sure that all parts, hardware, manuals, etc., have been included. Be sure that there is sufficient room to install the system, and that there is a 120VAC outlet within 10 feet of the system.

A single aisle system will usually consist of (1) antenna panel and (1) wall-mount power supply.

Position the completed assembly at the area that you wish to protect, trying to keep away from any power, telephone, or computer wires. Fasten the antenna to the floor, with the appropriate hardware, through the mounting holes provided in the antenna base. Plug the power supply into an available 120 VAC wall outlet. THAT'S ALL!!

Phazor
Antenna Panel

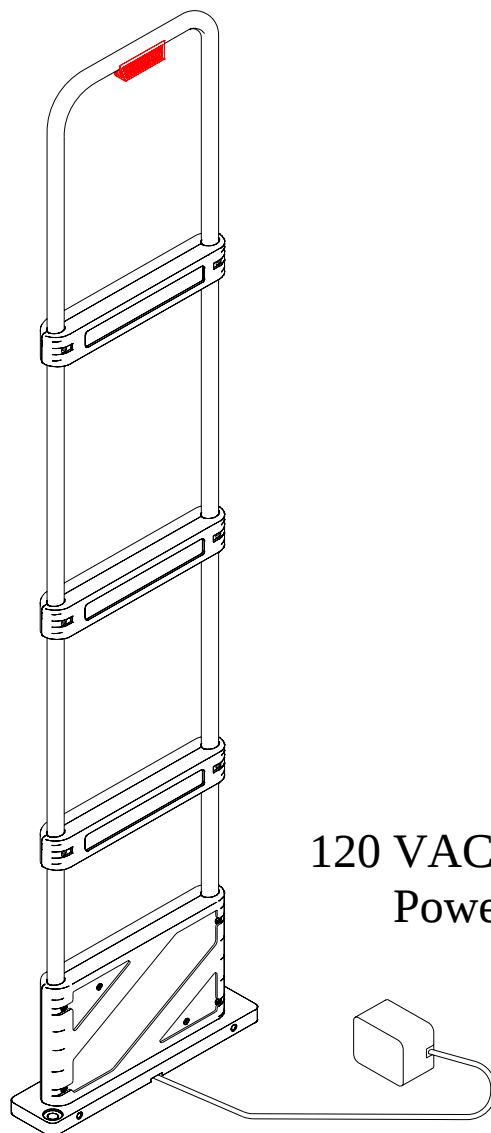

120 VAC Wall-Plug In
Power Supply


Tagging Guide

The Phazor is a hard and soft tag detection system that will respond to any tags within several feet of the antenna panel. Since the detection field extends from *both sides* of the panel, it is important to avoid placing any tagged merchandise within the protected area. As a general rule, tags should be at least 6 feet from all sides of the antenna panel.

REMEMBER: Hard tags used with this system must be removed at the cash register using the appropriate detacher. Failure to remove any tag will result in an alarm as the customer leaves the store.

Tagged Merchandise can
be placed in this area.

Tagged Merchandise can
be placed in this area.

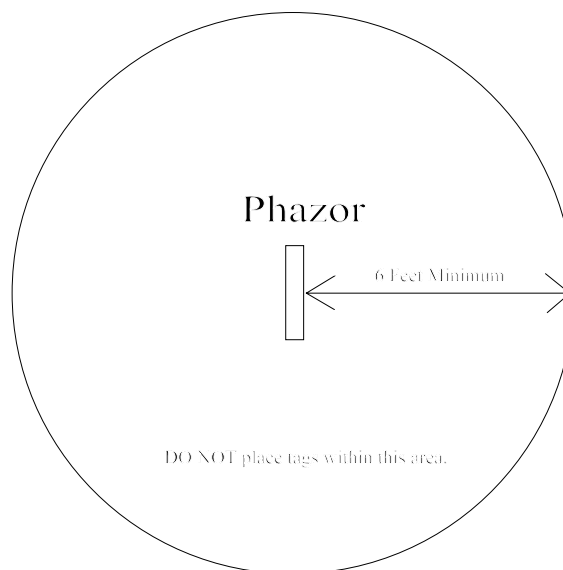

Tagged Merchandise can
be placed in this area.

Tagged Merchandise can
be placed in this area.