

## 6703

### THREE-BUTTON TRANSMITTER

The 6703 transmitter is a replacement RF transmitter. The transmitter comes with 3 push-button switches.

- 1). Press LOCK push-button switch on control first receiver (Your alarm system).
- 2). Press UNLOCK push-button switch to control second receiver (It can be an alarm system or electric device).
- 3). Press TRUNK push-button switch to control third receiver (It can be an alarm system or electric device).

#### TRANSMITTER BATTERY REPLACEMENT

If the range of your transmitter deteriorate, it is possible that you need to replace the battery.

- 1). Release the screw from the back of transmitter and move upper transmitter case.
- 2). Remove old battery from transmitter.
- 3). Install a new battery (12 volt) noting the (+) and (-) marks in the battery area of the transmitter.
- 4). Replace upper transmitter case with area, don't damage the inside components.
- 5). Tighten the screw on the back of transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference receiver, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment