



*Manual**4/4***TX220****TWO-BUTTON TRANSMITTER**

The TX220 transmitter is a replacement RF transmitter. The transmitter comes with 2 push-button switches.

- 1). Press  push-button switch on control first receiver (Your alarm system).
- 2). press  push-button switch to control second receiver (It can be an alarm system or electric device).

**TRANSMITTER BATTERY REPLACEMENT**

If the range of your transmitter deteriorate, it is possible that you need to replace the battery.

- 1).Release the screw from the back of transmitter and move upper transmitter case.
- 2).Remove old battery from transmitter.
- 3).Install a new battery (12volt) noting the (+) and (-) marks in the battery area of the transmitter.
- 4).Replace upper transmitter case with area, don't damage the inside components.
- 5).Tighten the screw on the back of transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference receiver, including interference that may cause undesired operation.