

Askey
ASK-SFE116
LTE Network Extender
User Guide

August 05, 2020

Version 1.1

Document History

Version	Date	Change	Verizon POC
0.8	07/27/20	Initial Version	
0.9	08/03/20	Pictures, Web Admin UI, Error Code List update	
1.0	08/04/20	Pictures and description update	
1.1	08/05/20	Picture 2.1 and Safety update	

Table of Contents


1	Getting Started	4
1.1	Inside the Box	4
1.2	Your Extender	4
1.3	Reset Button	5
1.4	Requirements	5
1.5	Safety	5
2	Setup	6
2.1	Extender.....	6
2.1.1	LCD Display	7
2.2	GPS	8
2.3	Wall Mount (Optional Outbox Accessory)	10
2.4	Making a Call.....	13
3	Web Admin UI	14
3.1	Admin Website Overview	14
3.2	Sign In	16
3.3	Home	19
3.4	Connected Devices	20
3.5	Settings	22
3.5.1	Network.....	22
3.5.2	Advanced.....	24
3.5.3	Time Zone.....	26
3.5.4	Reset.....	27
3.6	About	28
3.6.1	Status & Alarms	28
3.6.2	GPS	30
3.6.3	Support.....	31
4	Configuring Your Firewall	32
5	Troubleshooting	33
5.1	Capacity & Network Coverage	34
5.2	LCD Display Messages & Error Codes	34

1 Getting Started

Thank you for purchasing a Verizon LTE Network Extender. Your LTE Network Extender provides enhanced 4G LTE network coverage for Verizon wireless mobile devices, with a capacity of up to 14 active users and coverage radius up to 7500 square feet.


The LTE Network Extender is easy to install and works with existing Verizon mobile devices – simply connect the extender to an existing broadband network. The extender also features a built-in web server enabling IP settings to be customized. Please review this chapter to familiarize with your device then follow the setup instructions in the next chapter.

1.1 Inside the Box

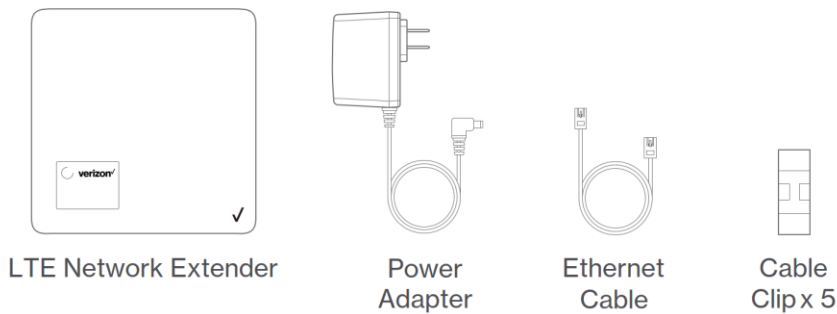

- LTE Network Extender
- Power Adapter
- Ethernet Cable
- Cable Clip x 5

1.2 Your Extender

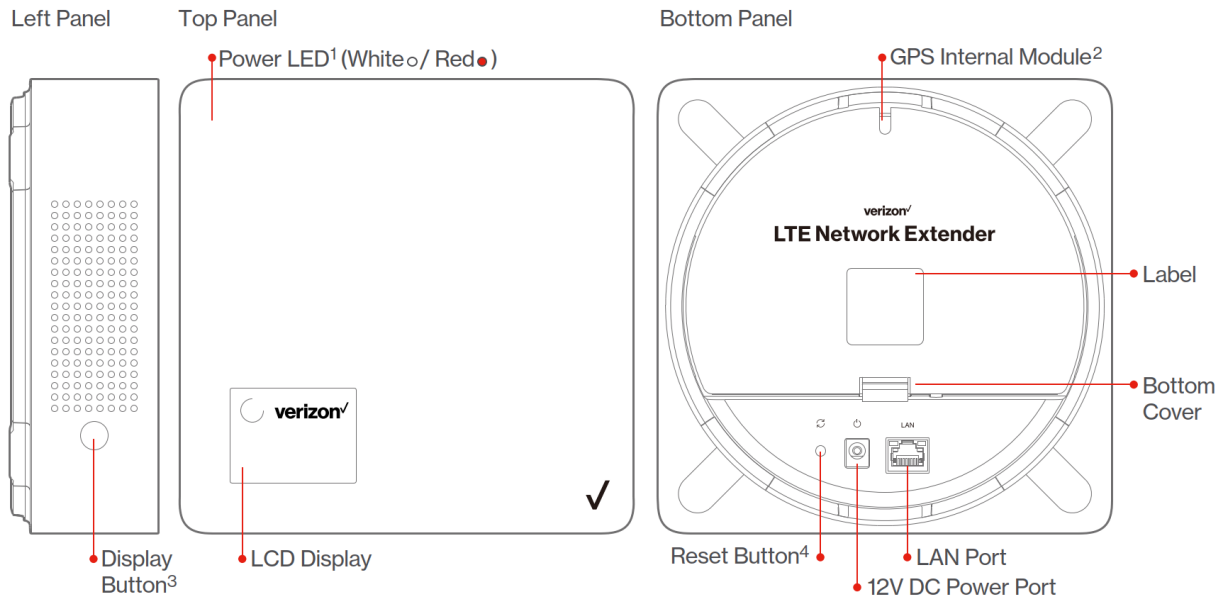

- The **Power LED** displays either white or red depending on device mode.
- The extender features an **internal GPS module** that can be accessed by removing the **bottom cover**. Refer to **2.2 GPS** for more information.
- The **LCD Display** shows status information regarding GPS satellites tracked and number of LTE devices connected.
- The **Display Button** toggles additional device information on the LCD display.


1.3 Reset Button

The extender's reset button is on the backside of the device, enables you to reset the device back to its original factory state. This can be useful for troubleshooting, resetting passwords, or if you experience any difficulty with your device. Performing a reset will reset **all settings and configurations (factory reset)**. To perform a reset, press and hold the reset button for at least 10 seconds, until the Power LED displays solid white, indicating a reset. Wait a few minutes for device to restart.

1.4 Requirements

- This device only supports Verizon Wireless 4G LTE mobile handsets with Advanced Calling turned on. Refer to **2.4 Making a Call** for more information.
- The 4G LTE Network Extender must be connected to an available LAN port on a router or modem with always-on Internet access with minimum download speed of 10 Mbps and an upload speed of 5 Mbps. Speeds of 20 Mbps download and 10 Mbps upload or higher are recommended.
- The 4G LTE Network Extender requires a continuous GPS signal from the provided GPS antenna. To find GPS at initial power up, four strong GPS satellite signals must be available. For better GPS signal strength, please pull out and unwrap 23' GPS extension cable which is stored at the back of the extender to position the GPS antenna as close to a window as possible. Refer to **2.2 GPS**
- Home satellite broadband access is not supported.

1.5 Safety

-  **WARNING:** Reproductive Harm www.P65Warnings.ca.gov
- **WARNING OF 911 LIMITATIONS:** 911 or enhanced 911 services may be limited in areas outside of wireless network coverage. This device extends the reach of wireless network coverage in your area. Therefore, in the event of an electrical power outage, broadband connection failure, termination of broadband service or other service disruption, you may not be able to make 911 calls using this device. Always be prepared to report your location to public safety.
- **FCC Radiation Exposure Statement:** To ensure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. This product should be installed and operated with minimum distance 20cm between the radiator and your body.
- Place your LTE Network Extender at least 10 feet away from products that generate electromagnetic radiation (e.g., microwave oven).
- Use only the included power adapter, using any other power source may damage the extender.


2 Setup

Your LTE Network Extender can be setup by following the procedures explained in this section. Before installing the LTE Network Extender, remember to confirm that your package contains all components, and review the Product Safety and Warranty document included in the package.


2.1 Extender

1. It's recommended to place the LTE Network Extender near a window or otherwise elevated location such as on a bookshelf or cabinet, for best results.

Note: In below picture, LTE Network Extender's power cord and Ethernet cable are marked in black; router's power cord and Ethernet cable are marked in gray.


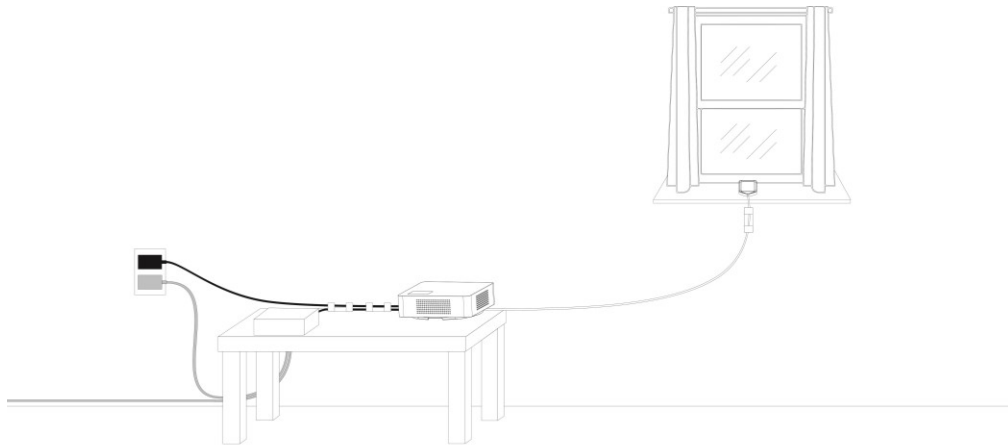


2. Using the provided Ethernet cable, connect an available LAN port on your router to the LAN port on your LTE Network Extender.
3. Connect the included power adapter to the LTE Network Extender's DC 12V power port and plug the power adapter into an available power outlet.



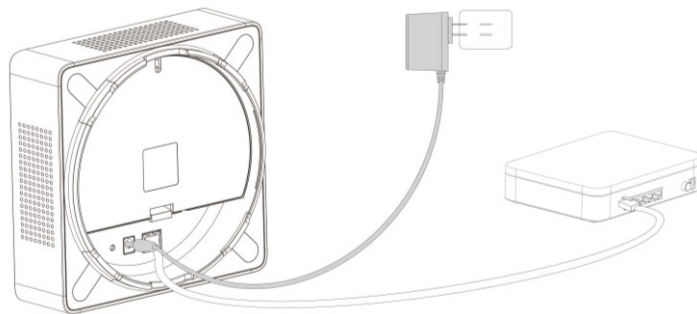


4. The Power LED should blink white when the LTE Network Extender is plugged in, to indicate the initialization and startup process. If the Power LED displays solid red, this indicates a hardware issue/problem.

- The extender will automatically begin the initialization and startup process after the power adaptor and the Ethernet cable are plugged into. This process may take 5 to 60 minutes depending on GPS signal conditions.



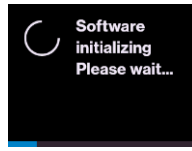
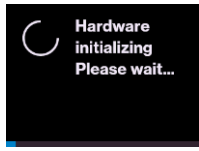


- During this process, the LTE Network Extender will attempt to acquire a local IP address, followed by connecting to the Verizon network, and then searching for a GPS signal.

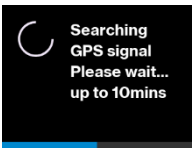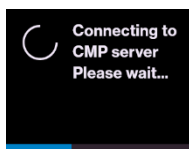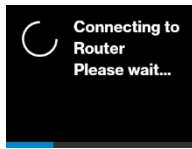



For proper operation and E911 service, a GPS signal is required. If a GPS signal is not acquired after 30 to 60 minutes, please refer to **2.2 GPS**. The GPS signal acquisition status can be checked using the Web Admin UI as shown in **3. Web Admin UI**

- To finish the startup process, the LTE Network Extender will download any necessary software updates and configuration data. When the startup process is complete, the Power LED will return to solid white and the LED Display will show "Service Active".

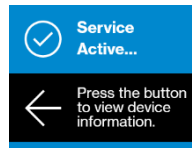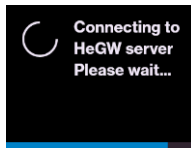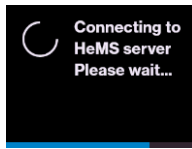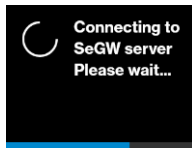

2.1.1 LCD Display

The LCD Display can display additional information: the LTE Network Extender IP address, MAC address, serial number, GPS Satellites connected, and mobile devices connected. Press the Display Button on the left panel of the extender to toggle through information screens.

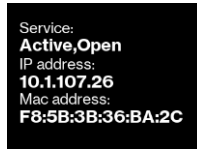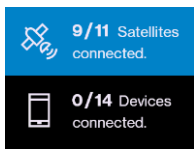






Refer to **5.2 LCD Display Messages & Error Codes** for more information on other messages or errors that the LCD may display.

2.2 GPS

If a GPS signal is not acquired after 30-60 minutes, you can use the internal GPS antenna to improve reception. It's recommended to position the GPS antenna beside a window. To take out and reposition the GPS antenna, follow the instructions below.


1. Turn off the LTE Network Extender.
2. Remove the rear cover on the 4G LTE Network Extender.
3. Take out the GPS antenna and unwrap the cable.
4. Return the plastic cable holder into place inside the extender.
5. Reattach the rear cover.
6. Ensure that the GPS cable is running through the notch in order to properly fasten the rear cover back into place.
7. Place the antenna close to a window. If needed you can use double-sided tape to secure the bottom of the GPS antenna in place, although take care not to cover the antenna with tape.
8. Turn your LTE Network Extender back on and wait for it to begin searching for a GPS signal. Four strong GPS satellite signals are required for a GPS location fix – the process may take up to 60 minutes.
9. If still encountering problems, check the GPS signal on the GPS page of the Web Admin UI. If you cannot verify that the extender can consistently track 4 or more strong GPS satellite signals, then try another location for the GPS antenna where the signal may be better.

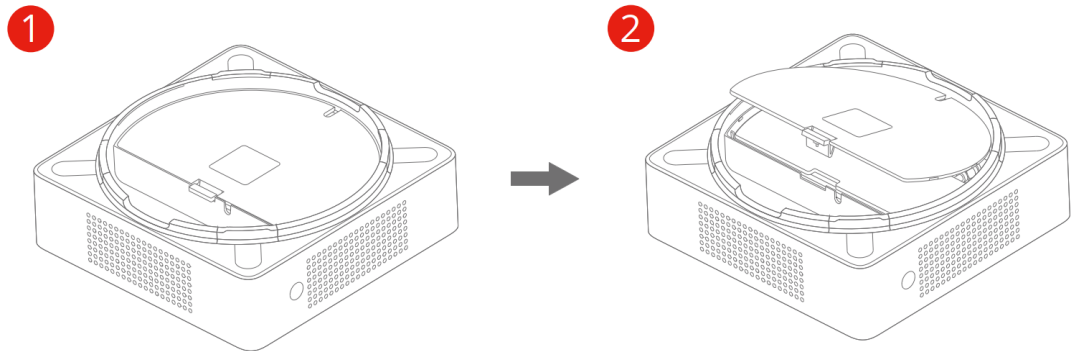

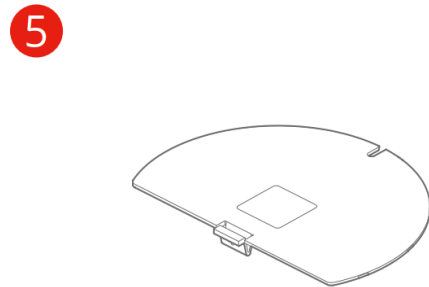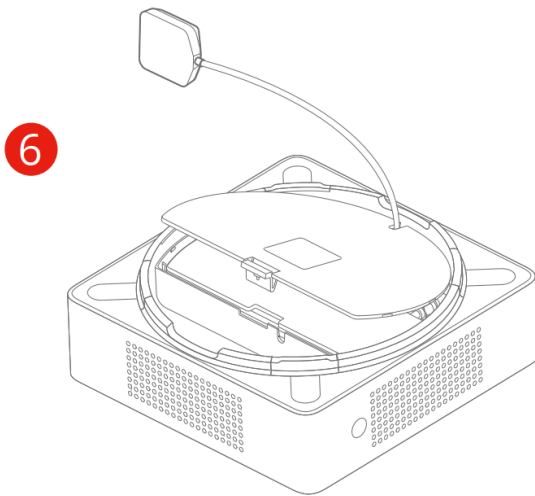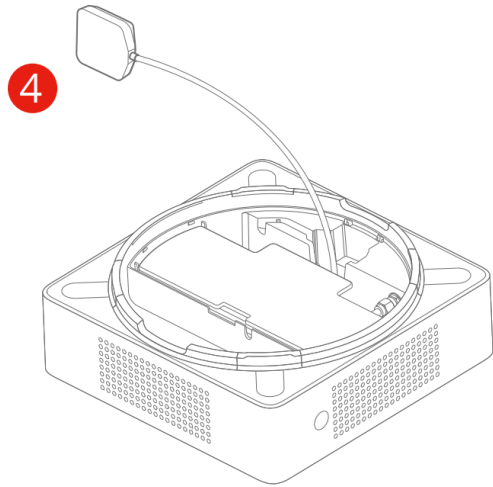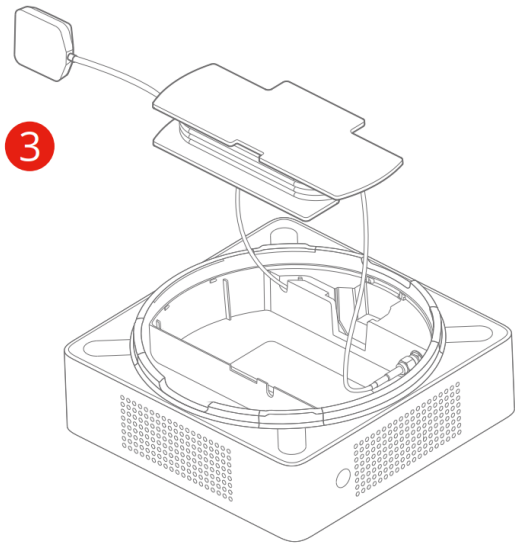

2.3 Wall Mount (Optional Outbox Accessory)

A separate wall-mount bracket package is available (sold separately) for your LTE Network Extender. This enables you to fix your extender directly to a wall for better positioning.

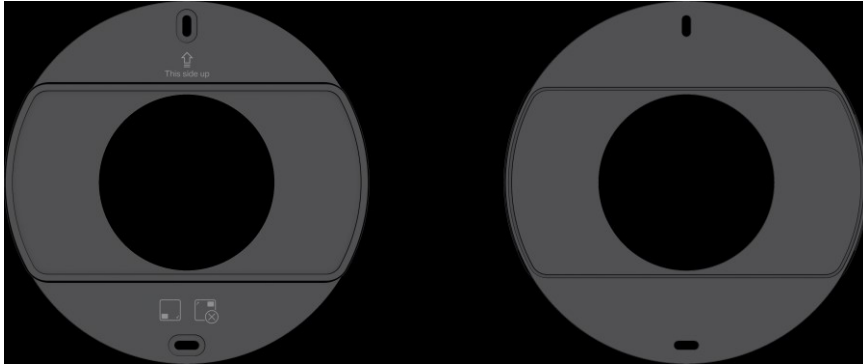

1. Screw the included wall mount bracket into desired position on a wall securely, ensuring it's the correct way up. (Screws are included with the wall-mount).





2. Make sure all cables are already connected to your 4G LTE Network Extender.



3. Align your extender to the bracket (your extender should be oriented with the LCD screen in the bottom left corner), and press firmly into place until it slots onto the bracket securely.



- The extender can be slightly rotated on the wall mount bracket if needed. Do not rotate your extender beyond 22.5 degrees to the left, or 30 degrees to the right on the wall mount bracket. Doing so can result in the extender falling from the bracket.

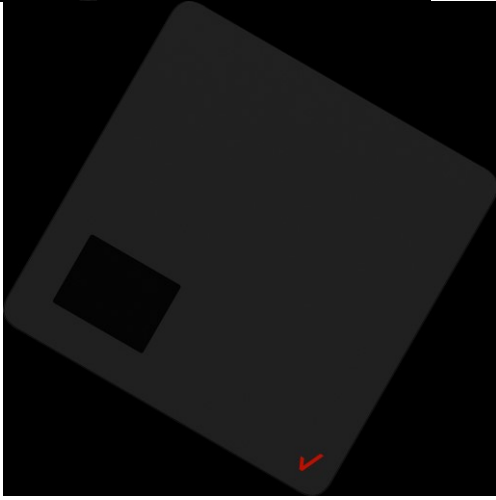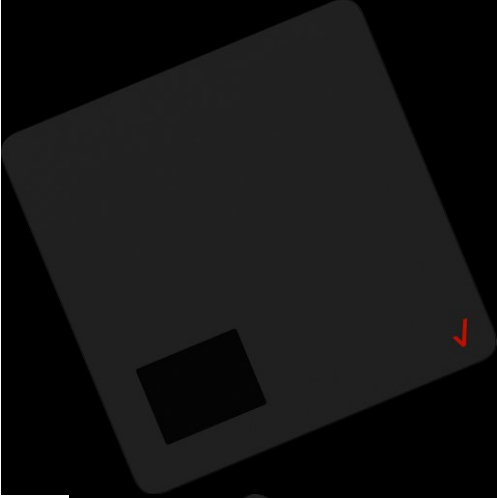

2.4 Making a Call

When your extender is operational, you can use it make calls with your Verizon mobile phone. To do so, your phone must be within 50 feet of the LTE Network Extender and have Advanced Calling switched on.

Advanced Calling settings vary according to operating systems:

- Android™: Go to Settings > Advanced Calling and turn on.
- Apple® iOS: Go to Settings > Cellular > Cellular Data Options > Enable LTE > Voice & Data. Additionally, on the “My Verizon” Mobile App, enable Advance Calling feature for your phones.
- Windows®: Go to Settings > Cellular + SIM > SIM settings and turn on Advanced Calling.
- On some devices, it may be found in Wireless Calling, HD Voice, VoLTE call or similar.

With Advanced Calling switched on, you can verify your Verizon phones are connected to the LTE Network Extender:

1. Dial #48 from your mobile phone
2. You should hear the following confirmation: “You are under LTE Network Extender coverage”
3. Some phones may show a home icon when connected to the LTE Network Extender.

The LTE Network Extender’s coverage can vary according to environmental factors, interference and strength of external cell towers.

3 Web Admin UI


The LTE Network Extender Web Admin UI enables you to configure features, see the extender's status and make changes to settings.

Using a computer connected to the same network (same router) as the LTE Network Extender, follow the steps below to access the Web Admin UI:

1. Toggle information on the extender's LCD Display by pressing the Display Button (left panel), until you see your extender's IP address displayed.
2. Enter the IP address into the address bar of a web browser e.g. `http://<LTE Network Extender IP Address>`
3. You will arrive to the Web Admin UI Home screen as shown in the next section.

3.1 Admin Website Overview

The Web Admin UI provides detailed status information and access to a range of functions and settings. Use the main menu on the left side to navigate. When you navigate to another page, or click the Sign In icon, you will be prompted to Sign In as shown in the next section.

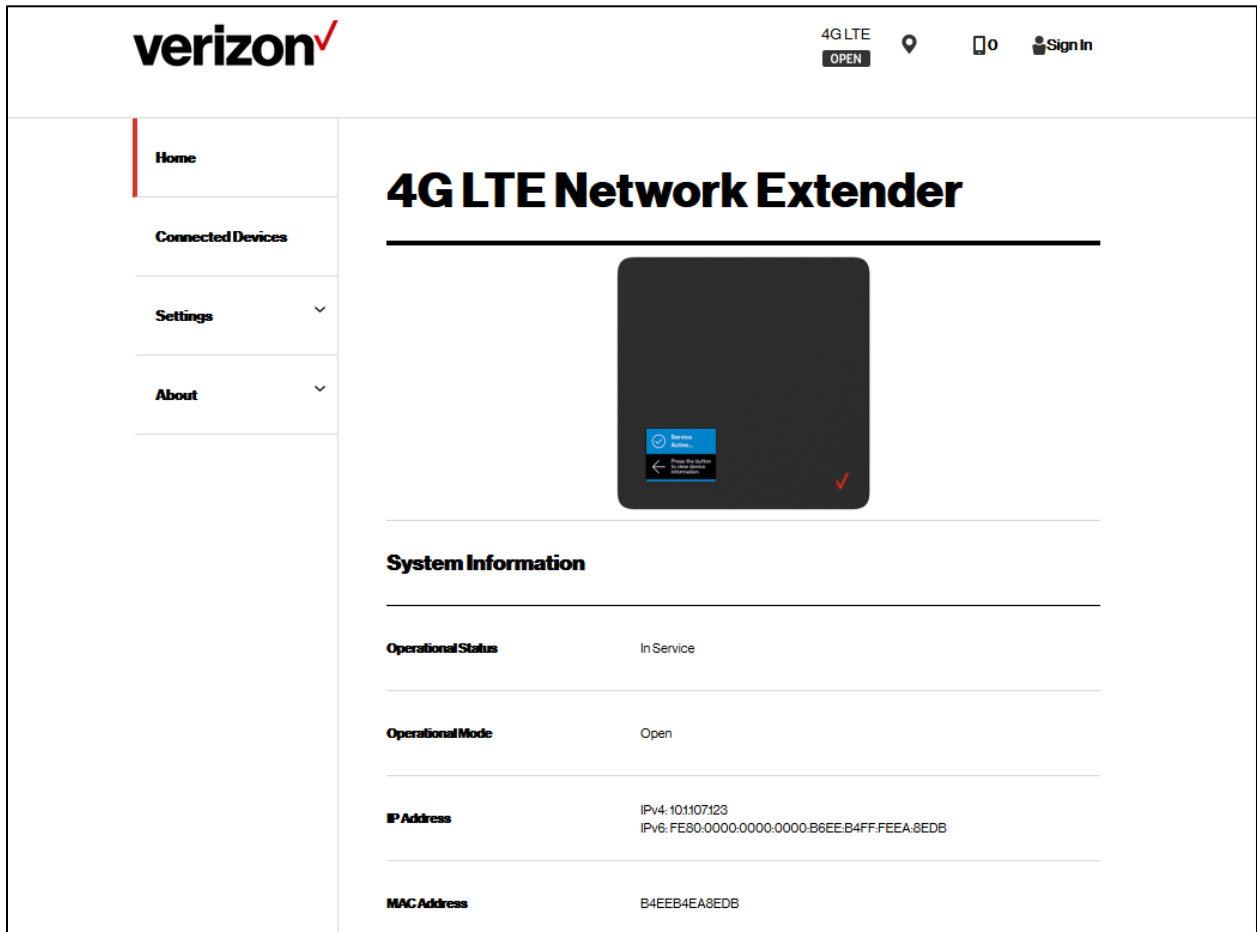

Icons in the top right corner of the Home screen provide a quick display of 4G Service Status, GPS Status, Connected Devices and Sign In Status.

Service Status GPS Status Connected Devices Sign In Status

4GLTE
OPEN



 **Sign Out**

4GLTE
OPEN

4GLTE
HYBRID

4GLTE
CLOSED

: In Service

 **OPEN**

 **HYBRID**

 **CLOSED**


: Not In Service

 **: GPS Lock Status**

 **: GPS Un-Lock Status**


3.2 Sign In

When you arrive to the Web Admin UI, you will need to sign-in with the admin password to continue. You'll be prompted to sign-in when you attempt to navigate to another page, or when you click the Sign-In icon in the top right.

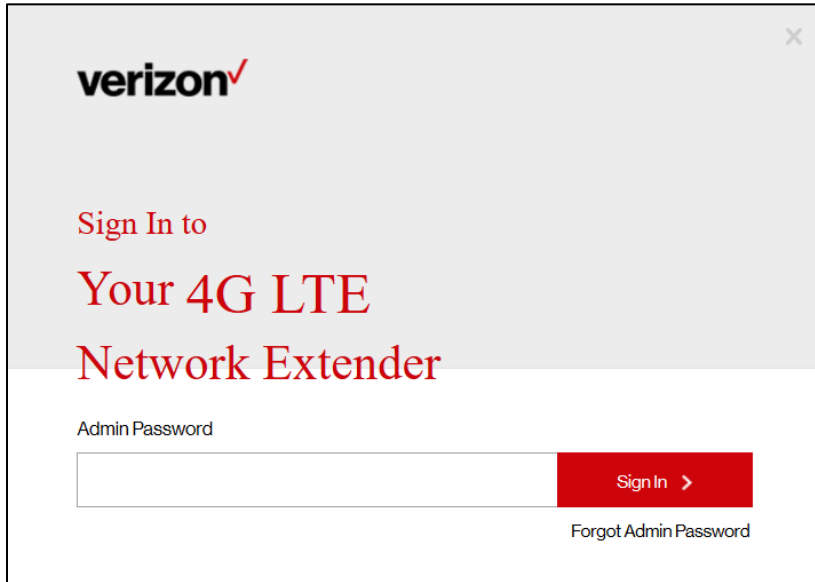


The image shows a web form for signing in to a Verizon 4G LTE Network Extender. At the top left is the Verizon logo. Below it, the text reads "Sign In to Your 4G LTE Network Extender". There is a text input field labeled "Admin Password" and a red "Sign In >" button. A link for "Forgot Admin Password" is located below the button. A close button (X) is in the top right corner of the form.

1. Enter the admin password and click Sign In. The default admin password is LTEFemto + last 4 digits of the extender's unique MAC ID (e.g., LTEFemtoBED0). You can find your extender's MAC ID displayed on the label on the back of the extender as shown below:

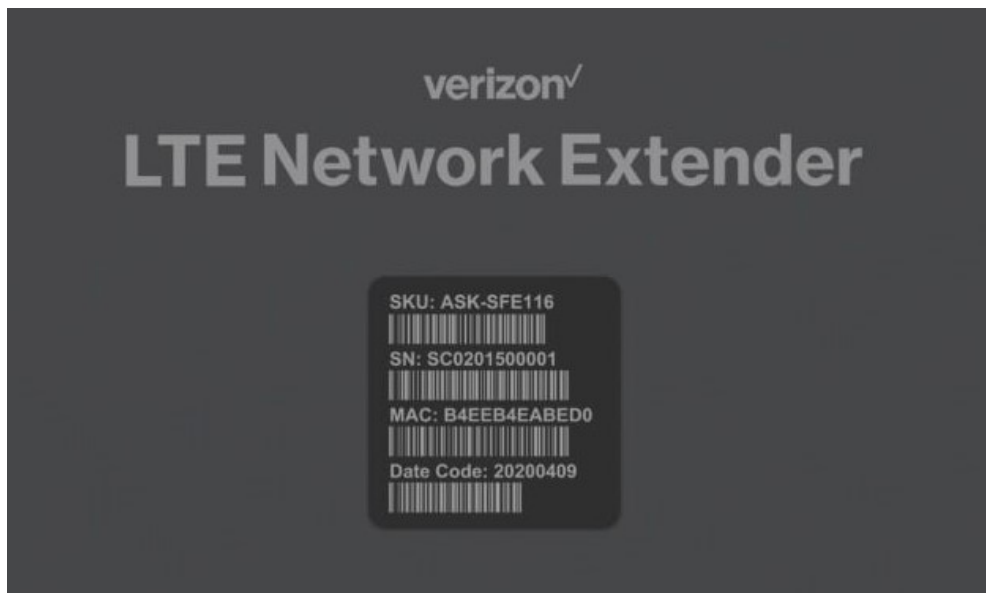

-
2. If you already changed the password and have forgotten it, use the [Forgot Admin Password](#) link. You will be prompted with the Security Challenge Question, which when answered correctly will reset the password back to default.

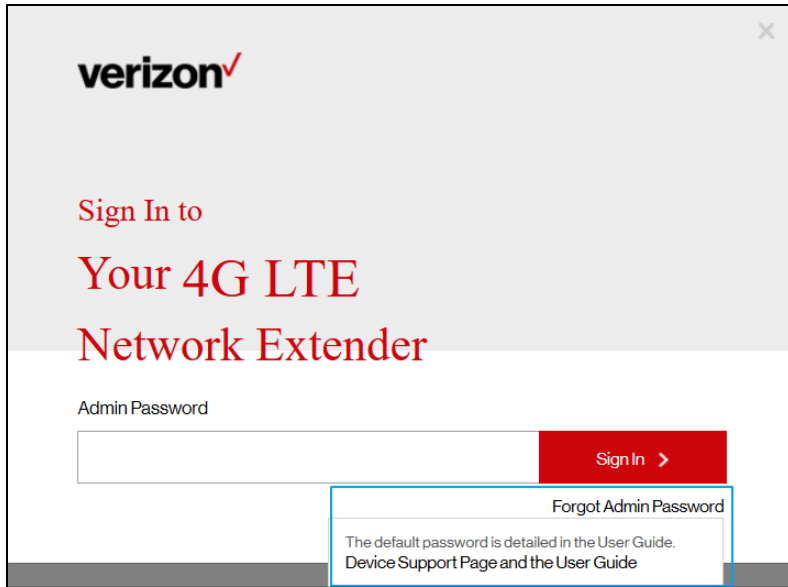

Take care that passwords are case sensitive – the last four digits of the MAC ID should be entered in UPPER case.

You can reset the password back to the default admin password anytime if needed, by resetting your extender back to its factory default settings. This resets all settings back to factory default state. Refer to **1.3 Reset Button** for more information.

3.3 Home

The Home page displays an overview of your extender's basic information such as Operational Status, IP Address and MAC Address and others.

The screenshot shows the Verizon 4G LTE Network Extender home page. At the top left is the Verizon logo. At the top right, there are status indicators: '4GLTE' with an 'OPEN' button, a location pin icon, a mobile phone icon, and a 'Sign Out' button. A left-hand navigation menu contains 'Home', 'Connected Devices', 'Settings', and 'About'. The main content area has a large title '4G LTE Network Extender' above a dark image of the device. Below the image is a 'System Information' section with the following details:

Operational Status	In Service
Operational Mode	Open
IP Address	IPv4: 10.1107.21 IPv6: FE80:0000:0000:0000:FA5B:3BFF:FE36:BA1D
MAC Address	F85B3B36BA1D
Software Version	V04.000.4712
Location	(Source: GPS) Map Latitude: 24.999194 Longitude: 121.487778 GPS Details

System Information

Operational Status	Current operational status of the LTE Network Extender.
Operational Mode	Current operational mode (Open, Hybrid, or Closed) of the LTE Network Extender.
IP Address	The Internet Protocol (IP) address of the LTE Network Extender.
MAC Address	Displays the MAC address of the extender. MAC address is a unique hardware identifier used to identify devices in a network. This MAC address can also be found on the back label of the LTE Network Extender.
Software Version	Displays the software version of the extender.
Location	Displays the GPS coordinates acquired by the extender's GPS antenna. This is the physical location of the LTE Network Extender and is provided for E911 calls.
Map	Links to the GPS location (above) on Bing Maps. Requires GPS Status to be "Location Acquired" (Refer to 3.6.2 GPS).

3.4 Connected Devices

The Connected Devices page displays information about connected devices (phone, tablets, or other 4G LTE devices).

The screenshot shows the Verizon Connected Devices web interface. At the top left is the Verizon logo. At the top right, there is a '4GLTE OPEN' indicator, a location pin icon, a notification icon with '2', and a 'Sign Out' button. The left sidebar contains navigation links: 'Home', 'Connected Devices' (highlighted with a red bar), 'Settings' (with a dropdown arrow), and 'About' (with a dropdown arrow). The main content area features the heading 'Connected Devices' followed by a horizontal line. Below the heading, it displays 'Last Data Refresh 07-27-2020 08:38:11 UTC' and 'This page will refresh every 15 seconds.' Underneath is the section 'Current Connections' with a table:

Total connections	2
Emergency Calls	0

Current Connections

Total Connections

Number of total wireless devices currently connected to the LTE Network Extender with an active call or data session.

Emergency Calls

Number of wireless devices currently connected to the LTE Network Extender with an active E911 call to emergency services.

3.5 Settings

3.5.1 Network

The Network page displays information about IPv4 and IPv6 settings. You can enable or disable DHCP Server for your extender to be dynamically allocated IP address settings, or manually set IP address and DNS values (when DHCP is disabled). Backhaul limit (affects uplink speeds served by the LTE Network Extender only) and MTU size can also be set here.

verizon

4GLTE
OPEN

Sign Out

Home

Connected Devices

Settings ^

Network

Advanced

Change Admin Password

Time Zone

Reset

About v

Settings: Network

Mode: IPv4 only

DHCP ⓘ

IPv4 Settings

Default Gateway: 10.1.06.1

IP Address: 10.1.07.21

Subnet Mask: 255.255.254.0

Primary DNS: 10.1.7.1 (Mandatory)

Secondary DNS: 8.8.8.8 (Optional)

MTU Size (1380-1500 Bytes): 1500

Cancel Save

Mode


Mode	IPv4 mode.
DHCP	DHCP is enabled by default. When enabled, IP configuration is provided by the local DHCP server. When disabled, specify a static IP configuration for the extender manually.

IPv4

Default Gateway	Displays default gateway IP address. When DHCP is disabled, enter the default gateway IP address here.
IP Address	Displays local IPv4 IP address of the extender. When DHCP is disabled, enter the IPv4 address here.
Subnet Mask	Displays subnet mask of the extender. When DHCP is disabled, specify a subnet mask here.
Primary DNS	Displays the primary DNS server IP address. When DHCP is disabled, enter the primary DNS server IP address here.
Secondary DNS	Displays the secondary DNS server IP address. When DHCP is disabled, enter the secondary DNS server IP address here.
MTU Size	Maximum Transport Unit (MTU) defines the maximum packet size for data transmission over the network. The default setting is recommended. When set too high, users may experience poor voice quality and increased latency. If set too low, overall bandwidth consumption will be increased and users may experience lower data speeds.

3.5.2 Advanced

Advanced Settings enables you to configure the LTE Network Extender's output power and view neighboring cell towers detected during initialization and startup. Provides information on extender positioning relative to other Verizon cell sites and LTE Network Extenders in the network, in the case of multiple network extender clusters.

4GLTE
OPEN📍📱 1👤 Sign Out

Home

Connected Devices

Settings ^

Network

Advanced

Time Zone

Reset

About v

Settings: Advanced

Last Data Refresh 07-27-2020 08:53:24 UTC

4G LTE Network Extender Information

Network ID - CELL ID	DEC: 46641-245 HEX: B631-F5
Physical CELL ID (PCI)	482
LTE EARFCN	5230

Automatic Transmit Power Mode

Transmit Power 0-100%

0% 10 dBm 10 mW 80% 18.0 dBm 63 mW 20 dBm 100 mW

Recommended 16.0 dBm 39 mW

Neighboring Cells Detected

as of 07-27-2020 08:53:24 UTC [update](#)

Network ID	EARFCN	Cell ID	PCI	Cell Type	RSRP (dBm)	
00101	5230	244	498	Extender	-72: OK	✓
00101	2050	298	486	Extender	-64: OK	✓

Cancel Save

Last Data Refresh	Local time when the page was last refreshed.
4G LTE Network Extender Information	Displays the extender's cell network identifier information: Network ID, CELL ID, Physical CELL ID (PCI) and EARFCN. Network ID (PLMN) and Cell ID (ECGI) are linked by a hyphen.
Transmit Power	The transmit power of the extender can be adjusted using the slider according to requirements, from maximum (100 % = 20dBm) to minimum (0 % = 10dBm). Digital attenuation in 0.1 dB steps from 10dBm to 20dBm is used to achieve this.
Neighboring Cells Detected	<p>Displays OTAR results. Can assist a multi-4G LTE Network Extender cluster with positioning and power selection.</p> <ul style="list-style-type: none"> • Network ID: PLMN of the detected cell. • EARFCN: This is the EARFCN of the detected cell. • Cell ID: ECGI of the detected cell. • PCI: PCI of the detected cell. • Cell Type: Displays "4G LTE Network Extender" if the Cell Tower ID is within range reserved for the 4G LTE Network Extender(s). Otherwise, displays "Macro". • RSRP: Displays the measured RSRP in dBm of the detected cell. An icon is provided alongside the RSRP value indicating if the detected cell is too-close (high RSRP) and may be causing interference; or if it is too far (low RSRP) and handover may be an issue. Note – the distance between two 4G LTE Network Extenders using the same band should be at least 170% of the distance of its coverage radius to avoid LTE interference. In other words, if an LTE Network Extender has a 100ft coverage radius in a given environment, the next closest LTE Network Extender using the same band should be at least 170ft away. If two LTE Network Extenders are using different bands from each other, they can be side by side.

3.5.3 Time Zone

The extender features built-in time zone and daylight savings settings to configure for your device. Time zone settings only affect timestamps and logs where featured throughout the Web Admin UI.

The screenshot displays the Verizon Web Admin UI. At the top left is the Verizon logo. At the top right, there are status indicators for 4GLTE, a location pin, a mobile phone icon, and a Sign Out button. A left-hand navigation menu includes Home, Connected Devices, Settings (expanded), Network, Advanced, Time Zone (highlighted), Reset, and About. The main content area is titled 'Settings: Time Zone' and is divided into two sections: 'Admin Web' and 'Connected Devices'. Each section has a 'Time Zone' dropdown menu, an 'Observe Daylight Saving?' checkbox, and a 'Current Time Zone Configured' status message. The 'Admin Web' section shows 'Coordinated Universal Time (UTC)' selected, with a status message 'No time zone has been configured - currently using UTC'. The 'Connected Devices' section shows 'Set by Verizon Network' selected, with a status message 'Set by Verizon Network'. Both sections have 'Cancel' and 'Save' buttons at the bottom.

Admin Web

Time Zone

Select your time zone (or closest) from the options in the drop-down menu.

Observe Daylight Saving?

Select whether to observe daylight savings or not for the selected time zone, using the check box. Daylight saving is not supported for Atlantic (AT), Samoa (ST) & Chamorro (ChT) time.

3.5.4 Reset

If the LTE Network Extender malfunctions or is not responding, it is recommended to restart the device or perform a factory reset. Using the Reset page interface you can perform a Complete Restart, Quick Restart or Factory Reset. Be aware that a factory reset will reset all settings and configurations back to factory default settings.

Complete Restart, Quick Restart and Factory Reset are rejected during active E911 calls on the extender.

You can also perform a factory reset using the physical reset button on the backside of the extender. Refer to **1.3 Reset Button** for more information.

verizon

OPEN 1

Home

Connected Devices

Settings ^

Network

Advanced

Time Zone

Reset

About v

Settings: Reset

Complete Restart

Use this button to remotely perform a complete restart of the 4G LTE Network Extender when it is not physically reachable. A complete restart will cause the 4G LTE Network Extender to perform a re-scan of the neighboring cell. If the 4G LTE Network Extender has active E911 calls, the reset will be rejected.

Complete Restart

Quick Restart

Use this button to remotely power reset the 4G LTE Network Extender when it is not physically reachable. If the 4G LTE Network Extender has active E911 calls, the reset will be rejected.

Quick Restart

Factory Reset

Use this button to remotely factory reset the 4G LTE Network Extender when it is not physically reachable. If the 4G LTE Network Extender has active E911 calls, the reset will be rejected. NOTE: Factory reset will revert all custom settings (e.g. Admin GUI password, Static IP configuration) to factory defaults.

Factory Reset

Complete Restart

Use this button to remotely perform a complete restart of the LTE Network Extender when it is not physically reachable. A complete restart will cause the LTE Network Extender to perform a re-scan of the neighboring cell. If the LTE Network Extender has active E911 calls, the reset will be rejected.

Quick Restart

Use this button to remotely power reset the LTE Network Extender when it is not physically reachable. If the LTE Network Extender has active E911 calls, the reset will be rejected.

Factory Reset

Use this button to remotely factory reset the LTE Network Extender when it is not physically reachable. If the LTE Network Extender has active E911 calls, the reset will be rejected. NOTE: Factory reset will revert all custom settings (e.g. Admin GUI password, Static IP configuration) to factory defaults.

3.6 About

3.6.1 Status & Alarms

The Status & Alarms tab on the About page shows the connectivity status, operational status and alerts that can be used for diagnostics and troubleshooting. If the connectivity status shows a server as “Not Reachable”, confirm that the Network Extender is properly connected to the router and has acquired an IP Address. For LAN/Routers with a firewall enabled, please see **Chapter 4 Configuring Your Firewall**.

The screenshot shows the Verizon LTE Network Extender's 'About: Status & Alarms' page. The page has a sidebar with navigation options: Home, Connected Devices, Settings, About (selected), GPS, Status & Alarms, and Support. The main content area displays the title 'About: Status & Alarms' and a 'Last Data Refresh' timestamp of 07-27-2020 10:08:30 UTC. Below this, there are two status cards: a blue card showing '7/9 Satellites connected' and a black card showing '1/14 Devices connected'. The 'Active Alarms' section contains a table with two entries:

No	Alarm	Description	Date & Time
1	Transmittional level exceeds	Alarm is raised when transmit signal level exceeds certain threshold.	07-27-2020 07:30:59 UTC
2	Disk full (Critical)	The Disk usage on the Femto exceeds the critical threshold	07-27-2020 07:30:37 UTC

The 'Alarm History' section includes a 'Show more' link and a table with three entries:

No	Alarm	Description	Date & Time
1	CPU overload (Major)	<i>[Cleared]</i> The CPU usage on the Femto exceeds the major threshold	07-27-2020 07:31:43 UTC
2	Memory full (Critical)	<i>[Cleared]</i> The memory usage on the Femto exceeds the critical threshold.	07-27-2020 07:08:38 UTC
		<i>[Cleared]</i> This alarm is an indication of un-	

Server Connectivity

Server	Status	IP Address & Port	Date & Time
DNS	Reachable	IP10.1.71 Port 53	06-11-2020 01:33:43 UTC
IPSec	Reachable, Not Connected	IP141.207.249.235 Port 4500	06-11-2020 03:46:32 UTC
Location Assistance	Not Reachable	IP - Not Available, Port - Not Available	06-11-2020 03:34:49 UTC

Active Alarms

No	Alarm	Description	Date & Time
1	SYS IPSEC_DOWN	The 4G LTE Network Extender has lost connectivity with the IPsec Server and is not in service.	06-11-2020 01:47:49 UTC

Alarm History

No	Alarm	Description	Date & Time
1	SYS IPSEC_DOWN	The 4G LTE Network Extender has lost connectivity with the IPsec Server and is not in service.	04-26-2020 17:44:43 UTC
2	SYS IPSEC_DOWN	The 4G LTE Network Extender has lost connectivity with the IPsec Server and is not in service.	04-26-2020 09:41:35 UTC

Last Data Refresh

Local time when the page was last refreshed.

Active Alarms

Displays any active alarms on the LTE Network Extender. Alarms may prevent your extender from coming into service. Please refer to the Description column in the table for more information and reference **5.1 LCD Display Messages and Error Codes** for more help.

Alarms History

Displays a log of the LTE Network Extender's last 100 alarms including active or cleared alarms.

3.6.2 GPS

The GPS page displays GPS status information and includes GPS Satellite IDs, signal quality and signal strength descriptions. This screen can assist with effective placement of your LTE Network Extender to acquire the better GPS signals.

The screenshot shows the Verizon website's GPS status page. At the top, there's a Verizon logo and a '4GLTE OPEN' indicator. A navigation menu on the left includes Home, Connected Devices, Settings, About, GPS (selected), Status & Alarms, and Support. The main content area is titled 'About: GPS' and shows the last data refresh time as 07-27-2020 10:06:20 UTC. Below this, it states 'GPS Status: Location Acquired' with a map icon. A table lists detected satellites with their IDs, signal quality in dB, and descriptions (Strong, Fair, or Weak). A legend at the bottom explains the signal quality color coding: green for Strong (31-99 dB), yellow for Fair (20-30 dB), and red for Weak (0-19 dB).

GPS Satellite ID	GPS Signal Quality (dB)	Description
5	46.7	Strong
13	44.9	Strong
18	31.4	Strong
2	29.8	Fair
20	26.5	Fair
29	24.2	Fair
24	18.2	Weak

Last Data Refresh | Local time when the page was last refreshed.

GPS

GPS Status | Displays GPS signal status i.e. whether the LTE Network Extender has acquired GPS signals or not. If “Location Acquired” is not displayed, the LTE Network Extender will not come into service.

GPS Satellite ID | Lists GPS satellites which are currently being detected, including each satellite's unique identifier ID.


GPS Signal Quality (dB) | Displays the signal-to-noise ratio in dB for each GPS signal, where a higher value means better quality.

Description

Describes each signal as Strong, Fair or Weak according the Signal Quality level. Strong signal is required for your extender. Consider repositioning your LTE Network Extender if these descriptions are Fair or Weak, or using the internal GPS antenna (refer to **2.2 GPS**).

3.6.3 Support

The Support page displays contact details and links to relevant information for a range of customer support enquiries.

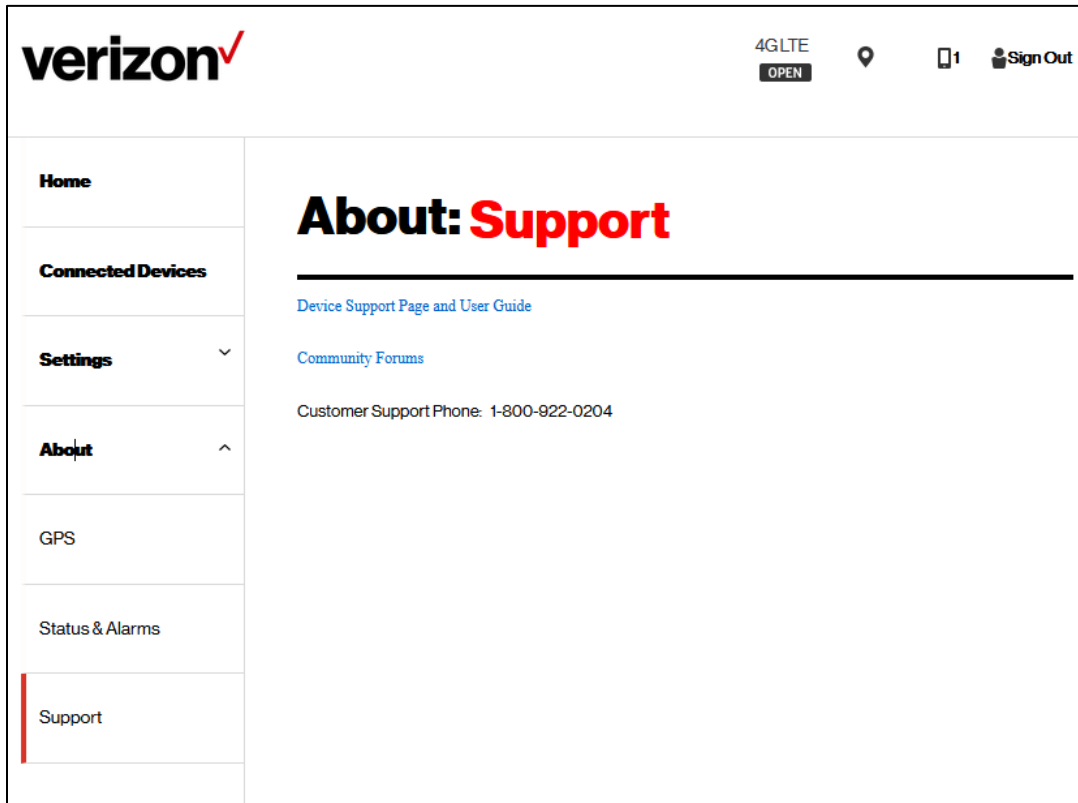

Device Support Page and User Guide

Hyperlink to the operator's support pages.

Community Forums

Hyperlink to the operator's community forums.

Attend a Wireless Workshop

Hyperlink to the operator's wireless workshops

Customer Support Phone

Phone number for the operator's customer support.

4 Configuring Your Firewall

In most cases, the LTE Network Extender can connect and automatically configure network settings, with minimal user involvement. In cases where local firewall settings may need to be configured, refer to the information below:

Firewall Settings

Source	Destination	Protocol	Destination Port	Notes
LTE Network Extender	GPS Assistance Server	TCP	80	
LTE Network Extender	DNS Server	UDP/TCP	53	
LTE Network Extender	NTP Server	UDP/TCP	123	
LTE Network Extender	VzW SeGW	UDP	500/4500	More than one port may be used for multiple device installation
LTE Network Extender	VzW SeGW	ESP/50	NA	When NAT/PAT is not present
LTE Network Extender	LTE Network Extender	ESP/50	NA	When NAT/PAT is not present

5 Troubleshooting

The Power LED is off.

- Check that the power adapter is properly inserted into the 12V DC Power Port on the back of the LTE Network Extender, and that it is securely connected to a working power outlet.

The LTE Network Extender has not acquired a GPS signal after one hour or more.

- Try to position your LTE Network Extender in a new location. An ideal location is as close to a window as possible, in an open area with few surrounding obstructions. Elevating the extender on a cabinet or shelf etc. may also help.
- Ensure that other devices are not interfering with your extender: your LTE Network Extender should be at least 10 feet away from any communications device or appliance that generates electromagnetic radiation such as microwave ovens or Wi-Fi routers.
- Take out the internal GPS antenna as described in **2.2 GPS** and place it close to a window.
- If using another/other LTE Network Extender(s), ensure that their GPS antennas are at least 150 mm apart.
- Ensure that the GPS antenna is connected properly. The GPS antenna must always be connected to the LTE Network Extender for operation.
- If you cannot reposition the extender or the internal GPS antenna and acquire a signal, you may need to separately purchase and install an external outdoor antenna.

Unable to make a call using the LTE Network Extender.

- Make sure the extender is powered on and operational.
- Ensure that your router is working properly and has an active Internet connection. Usually the Internet activity LED on your router should display some activity to indicate this. Refer to the support documentation of your router for more information.
- Make sure you are within coverage range of your LTE Network Extender (see **5.1 Capacity & Coverage**).
- Check that Advanced Calling is turned on for your Verizon phone as shown in **2.4 Making a Call**.
- Verify that your Verizon phone is connected to the LTE Network Extender by dialing #48.

LTE Network Extender Activation

Confirm that your LTE Network Extender was activated at the time of purchase. If not, call Verizon Wireless Customer Service at (800) 922-0204 or call *611 from your Verizon Wireless mobile phone and select the option for technical support. Before contacting Verizon Wireless Customer Service, please confirm:

- Your router is working properly and has an active Internet connection. Usually the Internet activity LED on your router should display some activity to indicate this. Refer to the support documentation of your router for more information.
- Your LTE Network Extender is receiving a GPS signal. You can check this by using the Display Button to view GPS information on the LCD screen (see **2.1.1 LCD Display**), and on the GPS page of the Web Admin UI (see **3.6.2. GPS**).

5.1 Capacity & Network Coverage


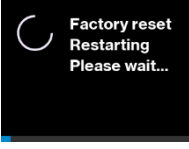
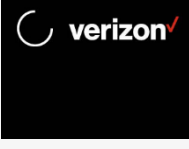
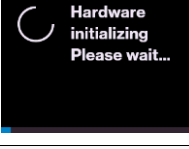
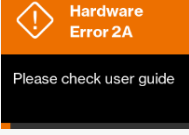
Your LTE Network Extender has the following capacity and coverage:










- Capacity: Up to fourteen active users + one channel reserved for E911 calls + one channel reserved for redirect.
- Coverage: Approximately 7500 square feet (50-foot radius)


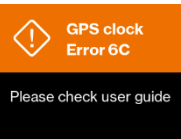
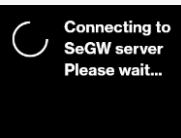
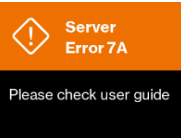
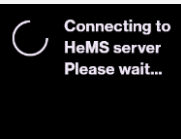
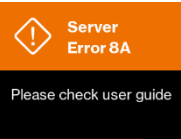
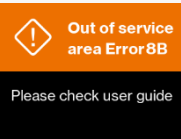
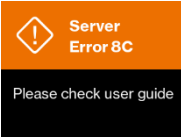
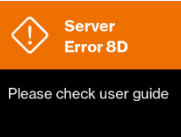
Coverage may vary based on environmental factors, floor plan and RF absorption of building materials.










5.2 LCD Display Messages & Error Codes







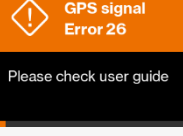
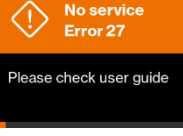
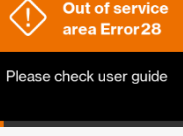
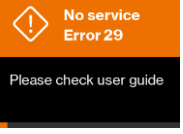
The following messages or error codes may appear on the display of the LTE Network Extender during operation or startup process:



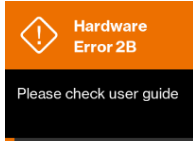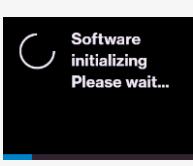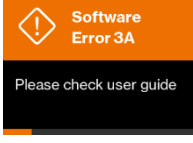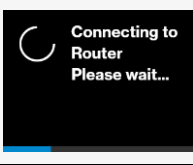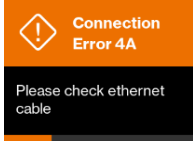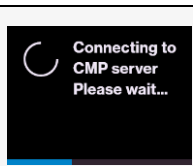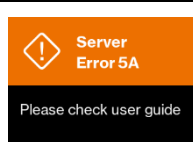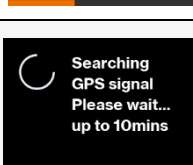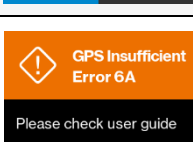

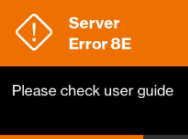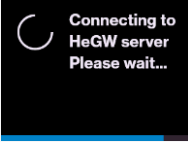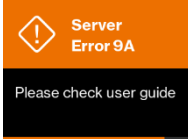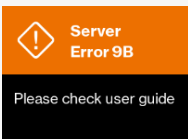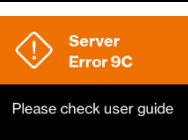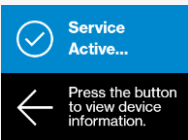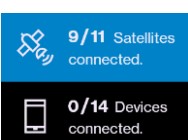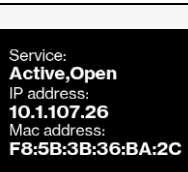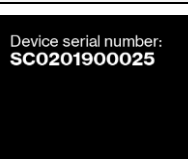

 

 
Error Code	Category	LCD Display	Content	Description
	Startup			Booting up.
	Startup		Factory reset restarting Please wait...	Factory reset: shutting down.
	Startup			Factory reset: starting up.
	Startup		Hardware initializing Please wait...	Hardware initializing.
2A	Startup		Hardware Error 2A Please check user guide	The LTE Network Extender has a Hardware Error disrupting its normal booting-up process, please try restarting the device. If the error persists, please call Customer Service (800-922-0204).

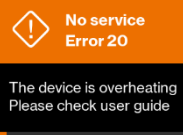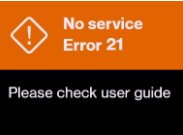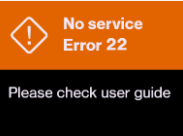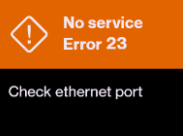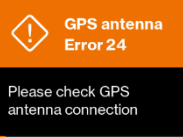2B	Startup	 <p>Hardware Error 2B Please check user guide</p>	Hardware Error 2B Please check user guide	The case of the LTE Network Extender has been opened against normal procedure, and the device can no longer provide service. Please call Customer Service (800-922-0204).
	Startup	 <p>Software initializing Please wait...</p>	Software initializing Please wait...	Software initializing.
3A	Startup	 <p>Software Error 3A Please check user guide</p>	Software Error 3A Please check user guide	The LTE Network Extender has a Software Error disrupting its normal booting-up process, please try restarting the LTE Network Extender. If the error persists, please call Customer Service (800-922-0204).
	Startup	 <p>Connecting to Router Please wait...</p>	Connecting to Router Please wait...	Acquiring local IP address.
4A	Startup	 <p>Connection Error 4A Please check ethernet cable</p>	Connection Error 4A Check ethernet cable	The Ethernet port on the LTE Network Extender is not operational, please check the Ethernet cable is properly connected at both ends, and that the switch, router or Internet gateway is turned on.
	Startup	 <p>Connecting to CMP server Please wait...</p>	Connecting to CMP server Please wait...	Getting certificate from CMP server.
5A	Startup	 <p>Server Error 5A Please check user guide</p>	Server Error 5A Please check user guide	The LTE Network Extender has failed to get certificate from the CMP server, please contact your network administrator. If the issue persists, please call Customer Service (800-922-0204).
	Startup	 <p>Searching GPS signal Please wait... up to 10mins</p>	Searching GPS signal Please wait... up to 10mins	GPS acquisition.
6A	Startup	 <p>GPS Insufficient Error 6A Please check user guide</p>	GPS Insufficient Error 6A Please check user guide	The LTE Network Extender has failed to acquire minimally required GPS signal, please try to move your GPS antenna closer to the window, refer to 2.1 Setup: Extender, 2.2 Setup: GPS & 5. Troubleshooting . If the issue persists, please call Customer Service (800-922-0204).

6B	Startup	 <p>GPS antenna Error 6B Please check GPS antenna connection</p>	GPS antenna Error 6B Please check GPS antenna connection	No GPS antenna is detected in the LTE Network Extender, please make sure a GPS antenna module is set up and connected to the device. If the issue persists, please call Customer Service (800-922-0204).
6C	Startup	 <p>GPS clock Error 6C Please check user guide</p>	GPS clock Error 6C Please check user guide	The LTE Network Extender failed to receive a clock signal from its GPS module, please try to move your GPS antenna closer to the window, refer to 2.1 Setup: Extender, 2.2 Setup: GPS & 5. Troubleshooting . If the issue persists, please call Customer Service (800-922-0204).
	Startup	 <p>Connecting to SeGW server Please wait...</p>	Connecting to SeGW server Please wait...	SeGW discovery and IPsec setup (init/serv).
7A	Startup	 <p>Server Error 7A Please check user guide</p>	Server Error 7A Please check user guide	The LTE Network Extender failed to establish IPsec tunnel to connect to SeGW, please check the LAN/firewall settings (refer to 4. Configuring Your Firewall) or contact your network administrator. If the issue persists, please call Customer Service (800-922-0204).
	Startup	 <p>Connecting to HeMS server Please wait...</p>	Connecting to HeMS server Please wait...	HeMS discovery and download of configuration file.
8A	Startup	 <p>Server Error 8A Please check user guide</p>	Server Error 8A Please check user guide	The LTE Network Extender receives incorrect provisioning parameters from HeMS, for example, incorrect bandwidth, wrong command sequence in setting EARFCN for ANR or unsupported band. If the issues persists, please call Customer Service (800-922-0204).
8B	Startup	 <p>Out of service area Error 8B Please check user guide</p>	Out of service area Error 8B Please check user guide	The LTE Network Extender is out of Verizon's service area; it could be that Verizon service is not available in your area. Please try to restart your device, if the issue persists, please call Customer Service (800-922-0204).
8C	Startup	 <p>Server Error 8C Please check user guide</p>	Server Error 8C Please check user guide	The LTE Network Extender received "403 Forbidden" error message from the management server. Please try to restart your device. If the issue persists, please call Customer Service (800-922-0204).
8D	Startup	 <p>Server Error 8D Please check user guide</p>	Server Error 8D Please check user guide	The LTE Network Extender received "500 Internal Server Error" from the management server. Please try to restart your device. If the issue persists, please call Customer Service (800-922-0204).

8E	Startup		Server Error 8E Please check user guide	The LTE Network Extender is put into maintenance mode (Admin=0) by the management server, and no UE can register on the device. If the issue persists, please call Customer Service (800-922-0204).
	Startup		Connecting to HeGW server Please wait...	Serving HeGW discovery.
9A	Startup		Server Error 9A Please check user guide	The LTE Network Extender failed to connect to the HeNB Gateway, please check the LAN/ firewall settings or contact your network administrator. If the issue persists, please call Customer Service (800-922-0204).
9B	Startup		Server Error 9B Please check user guide	The LTE Network Extender failed to communicate with Verizon's backend network, please check the LAN/firewall settings or contact your network administrator. If the issue persists, please call Customer Service (800-922-0204).
9C	Startup		Server Error 9C Please check user guide	The LTE Network Extender detects a PCI collision problem with the PCI setting assigned by the management server. Please try restarting your device. If the issue persists, please call Customer Service (800-922-0204).
	Info		Service Active... Press the button to view device information.	
	Info		9/11 Satellites connected 0/14 Devices connected	Displays GPS satellite connections & connected devices.
	Info		Service: Active, Open IP address: 10.1.107.26 Mac address: F8:5B:3B:36:BA:2C	Displays LTE Network Extender information.
	Info		Device serial number: SC0201900025	Displays LTE Network Extender information.

20	System		<p>No service Error 20 The device is overheating Please check user guide</p>	<p>The LTE Network Extender is overheating; please place this device in a cool area where the temperature is between 32-122 degrees Fahrenheit.</p>
21	System		<p>No service Error 21 Please check user guide</p>	<p>The LTE Network Extender is experiencing a catastrophic hardware failure with the antenna. Please call Customer Service (800-922-0204).</p>
22	System		<p>No service Error 22 Please check user guide</p>	<p>There is an abnormally low transmission signal from your LTE Network Extender affecting the functionality of the device. The device will try to reboot itself in a moment; please don't unplug your extender. If the issue continues after auto-reboot, please call Customer Service (800-922-0204).</p>
23	Ethernet		<p>No service Error 23 Please check user guide</p>	<p>The Ethernet port on the LTE Network Extender is not operational, please check the Ethernet cable is properly connected at both ends, and that the switch, router or Internet gateway is turned on.</p>
24	GPS		<p>GPS antenna Error 24 Please check user guide</p>	<p>No GPS antenna is detected in the LTE Network Extender, please make sure a GPS antenna module is set up and connected to the device. If the issue persists, please call Customer Service (800-922-0204).</p>
25	GPS		<p>GPS antenna Error 25 Please check user guide</p>	<p>The LTE Network Extender has not been able to acquire a GPS signal for the past 24 hours. As a result, the device can no longer provide service. Please try to move your GPS antenna closer to the window. If the issue continues, you may need to acquire an outdoor GPS antenna.</p>
26	GPS		<p>GPS signal Error 26 Please check user guide</p>	<p>The LTE Network Extender has failed to acquire the minimally required GPS signal, please try to move your GPS antenna closer to the window, refer to 2.1 Setup: Extender, 2.2 Setup: GPS & 5. Troubleshooting. If the issue persists, please call Customer Service (800-922-0204).</p>
27	Service		<p>No service Error 27 Please check user guide</p>	<p>The LTE Network Extender failed to establish IPSec tunnel to connect to SeGW, and the device can no longer provide service to your mobile devices. Please check the LAN/firewall settings or contact your network administrator, if the issue persists, please call Customer Service (800-922-0204).</p>
28	Service		<p>Out of service area Error 28 Please check user guide</p>	<p>The LTE Network Extender is out of Verizon's service area; it could be that Verizon service is not available in your area. Please try restarting your device again. If the issue persists, please call Customer Service (800-922-0204).</p>
29	Service		<p>No service Error 29 Please check user guide</p>	<p>The LTE Network Extender receives "403 Forbidden" error message from the management server. Please try restarting your device. If the issue persists, please call Customer Service (800-922-0204).</p>

30	Service	 <p>No service Error 30 Please check user guide</p>	<p>No service Error 30 Please check user guide</p>	<p>The LTE Network Extender receives "500 Internal Server Error" from the management server. Please try restarting your device. If the issue persists, please call Customer Service (800-922-0204).</p>
31	Service	 <p>No service Error 31 Please check user guide</p>	<p>No service Error 31 Please check user guide</p>	<p>The LTE Network Extender is put into maintenance mode (Admin=0) by the management server, and no UE can register on the device. If the issue persists, please call Customer Service (800-922-0204).</p>
32	Service	 <p>No service Error 32 Please check user guide</p>	<p>No service Error 32 Please check user guide</p>	<p>The LTE Network Extender failed to connect to the HeNB Gateway, please check the LAN/ firewall settings or contact your network administrator. If the issue persists, please call Customer Service (800-922-0204).</p>
33	Service	 <p>No service Error 33 Please check user guide</p>	<p>No service Error 33 Please check user guide</p>	<p>The LTE Network Extender detects a PCI collision problem with the PCI setting assigned by the management server. Please try restarting your device. If the issue persists, please call Customer Service (800-922-0204).</p>
34	Service	 <p>No service Error 34 Please check user guide</p>	<p>No service Error 34 Please check user guide</p>	<p>The LTE Network Extender has a communication failure with Verizon's network, preventing your device from providing service to mobile devices. Please try restarting your extender. If the issue persists, please call Customer Service (800-922-0204).</p>
35	System	 <p>System msg Error 35 Please wait We will retry shortly</p>	<p>System msg Error 35 Please wait We will retry shortly</p>	<p>The LTE Network Extender experienced failure while upgrading its software. The device will try to reboot itself in a moment; please don't unplug your device. If the issue continues after auto-reboot, please call Customer Service (800-922-0204).</p>
	System	 <p>Updating software please wait...</p>	<p>Updating software please wait...</p>	<p>Upgrading software.</p>
	System	 <p>Configuration updated Restarting Please wait...</p>	<p>Configuration updated. Restarting Please wait...</p>	<p>System restarting after a configuration update e.g. changed band.</p>
	System	 <p>Restarting Please wait...</p>	<p>Restarting Please wait...</p>	<p>System restarting.</p>