


External Antenna setting 1

1. Connected external antenna
2. Login web GUI
3. Select internal Antenna

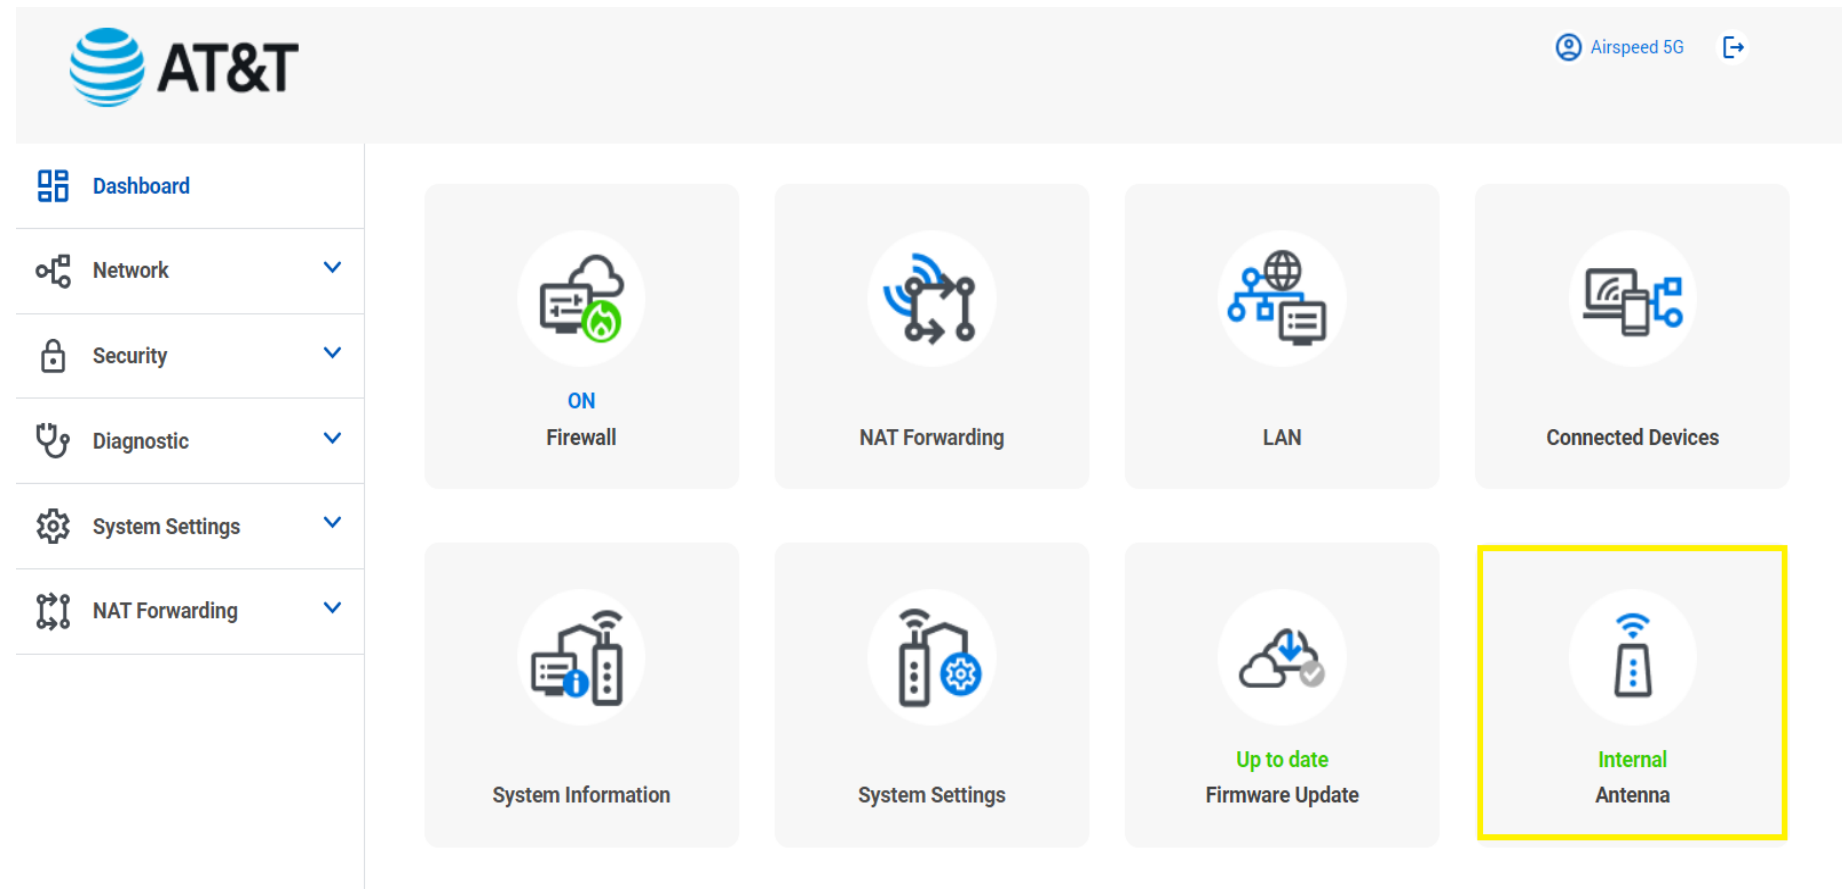


The screenshot displays the AT&T web GUI dashboard. The top header features the AT&T logo on the left and 'Airspeed 5G' with a refresh icon on the right. A left-hand navigation menu includes: Dashboard, Network (with a dropdown arrow), Security (with a dropdown arrow), Diagnostic (with a dropdown arrow), System Settings (with a dropdown arrow), and NAT Forwarding (with a dropdown arrow). The main content area consists of eight tiles arranged in a 2x4 grid:

- Firewall:** Status is 'ON'.
- NAT Forwarding:** Standard tile.
- LAN:** Standard tile.
- Connected Devices:** Standard tile.
- System Information:** Standard tile.
- System Settings:** Standard tile.
- Firmware Update:** Status is 'Up to date'.
- Internal Antenna:** This tile is highlighted with a yellow border, indicating it is the selected option.

External Antenna setting 2


- Select 1.external Antenna
- 2.Save
- 3. exit

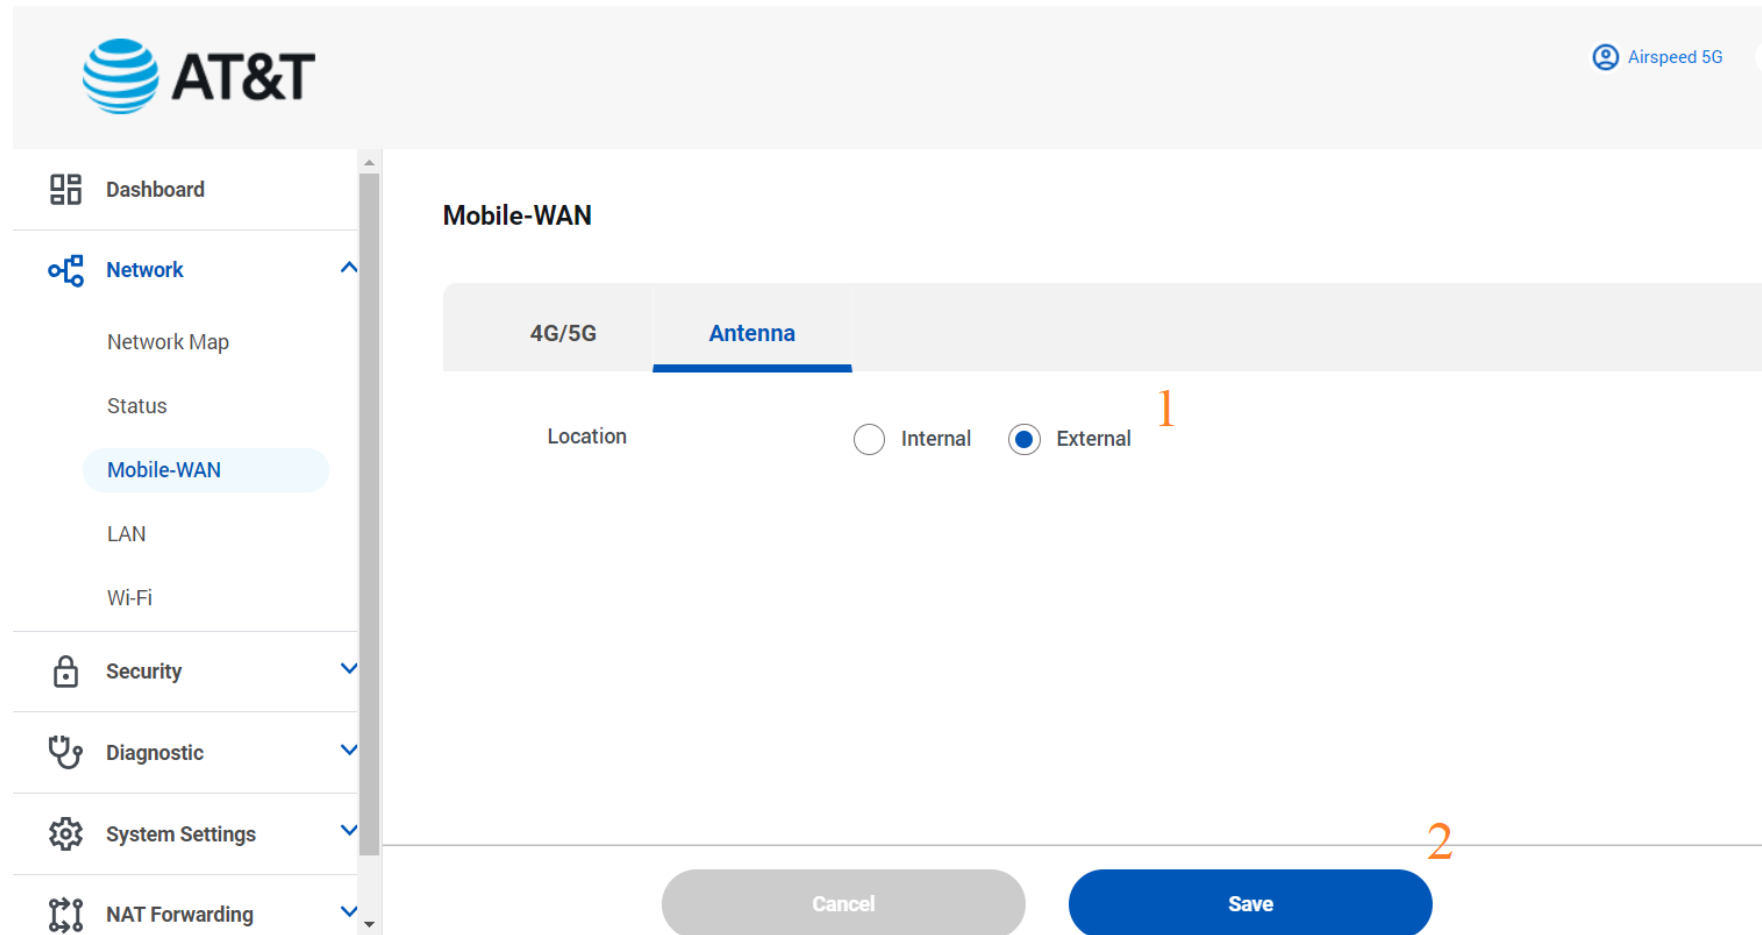

The screenshot shows the AT&T mobile settings interface. The top header features the AT&T logo on the left and 'Airspeed 5G' on the right. A left-hand navigation menu includes 'Dashboard', 'Network', 'Network Map', 'Status', 'Mobile-WAN' (highlighted), 'LAN', 'Wi-Fi', 'Security', 'Diagnostic', 'System Settings', and 'NAT Forwarding'. The main content area is titled 'Mobile-WAN' and has two tabs: '4G/5G' and 'Antenna'. Under the 'Antenna' tab, the 'Location' is set to 'External', indicated by a blue radio button and an orange '1' next to it. At the bottom of the screen, there are two buttons: a grey 'Cancel' button and a blue 'Save' button, with an orange '2' next to the 'Save' button.

External Antenna setting 3

- Check web page external Antenna
- Set OK

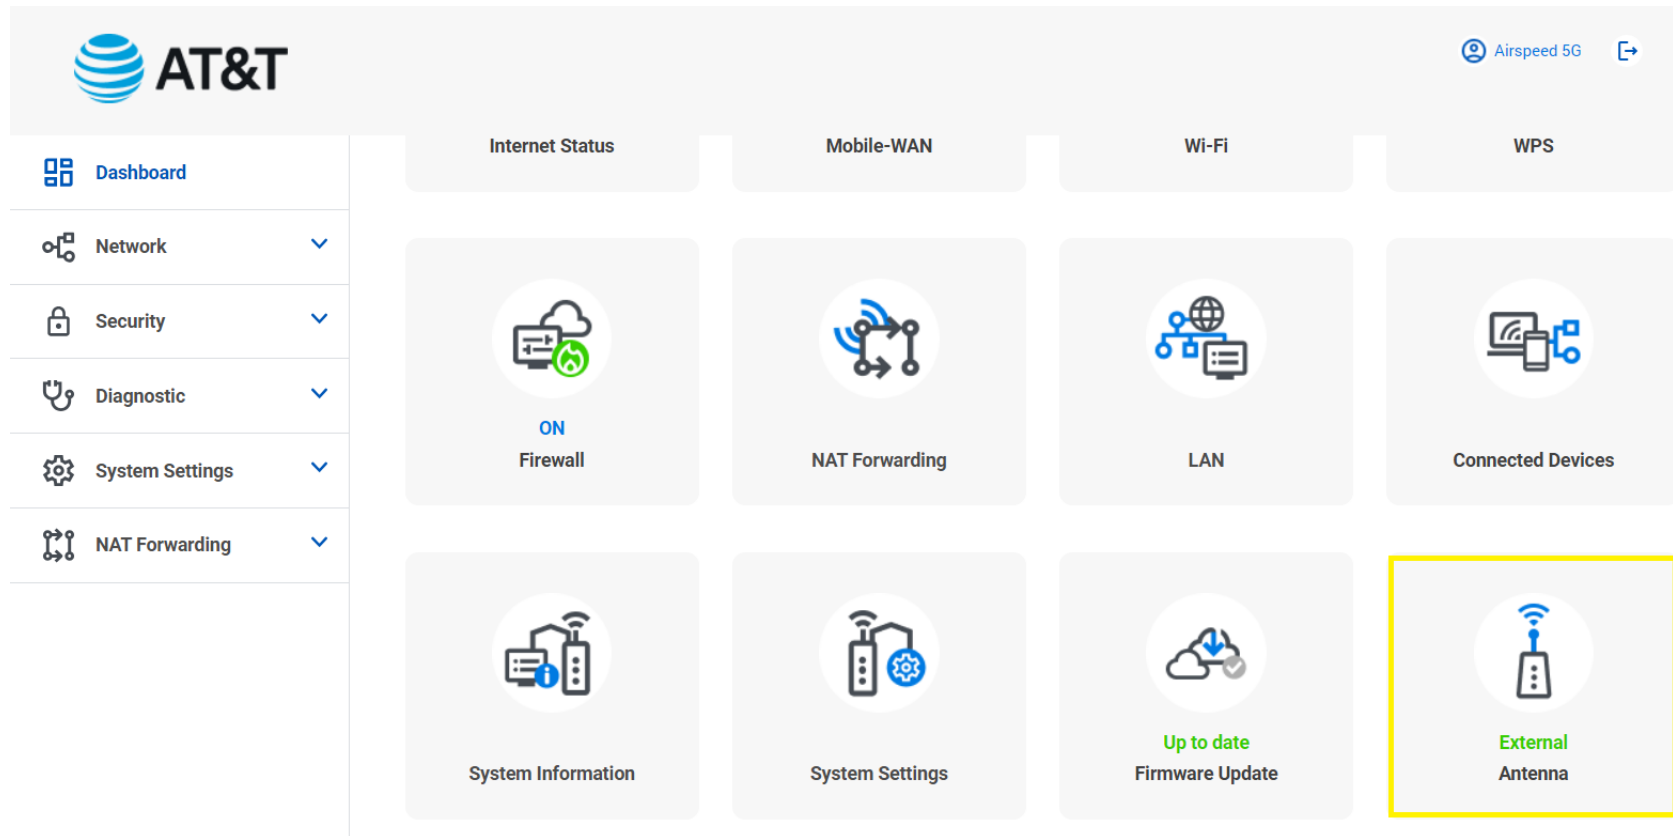

The screenshot displays the AT&T router settings interface. At the top left is the AT&T logo. On the right, it shows 'Airspeed 5G' with a refresh icon. Below the logo is a navigation menu with the following items: Dashboard, Network (with a dropdown arrow), Security (with a dropdown arrow), Diagnostic (with a dropdown arrow), System Settings (with a dropdown arrow), and NAT Forwarding (with a dropdown arrow). The main content area is divided into four columns: Internet Status, Mobile-WAN, Wi-Fi, and WPS. Each column contains several settings cards. The 'External Antenna' card in the bottom right corner is highlighted with a yellow border. The settings cards are: Firewall (ON), NAT Forwarding, LAN, Connected Devices, System Information, System Settings, Up to date Firmware Update, and External Antenna.

Category	Setting	Status
Internet Status	Firewall	ON
Mobile-WAN	NAT Forwarding	
Wi-Fi	LAN	
WPS	Connected Devices	
System Information	System Information	
System Settings	System Settings	
Firmware Update	Up to date Firmware Update	Up to date
External Antenna	External Antenna	