



Model: BWB15HO212  
BWB15HO212(RX)

## PRODUCT GUIDE

### Important safety instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. Grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus; or if it has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not install this equipment in a confined or built-in space such as a bookcase. Install in well-ventilated conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
17. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
18. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



19. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

20. The equipment shall be used at maximum 35 degree C ambient temperature.  
21. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.  
22. WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.  
23. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

FCR Radiation Exposure Statement  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.  
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

### Specification

 
 
 
 
Amplifier power: 50W  
Battery type: Li-ion rechargeable  
Bluetooth transmitter frequency range: 2.402 – 2.480GHz

### Package contents

- |                     |     |
|---------------------|-----|
| 1. Subwoofer        | 1pc |
| 2. Soundbar         | 1pc |
| 3. Aux in cable     | 1pc |
| 4. Operation manual | 1pc |
| 5. AC adapter       | 1pc |

### Speaker Overview

1. Power on/off
2. Source, sequence: Bluetooth\* ⌘, Optical\*OPT\*, Aux
3. Sound Mode, sequence: Game\* 🎮, Music\* 🎵, Movie\* 🎬
4. Bluetooth pairing key
5. NFC
6. Mute
7. Volume down
8. Volume up
9. Optical
10. Aux in
11. Charging LED
12. DC in
13. Soundbar and Subwoofer connection LED
14. Bass volume
15. Power on/off
16. AC in

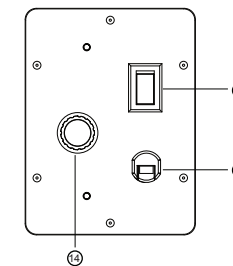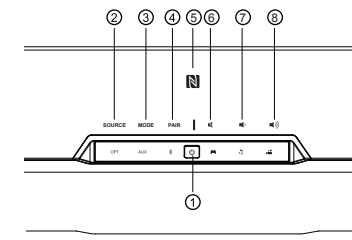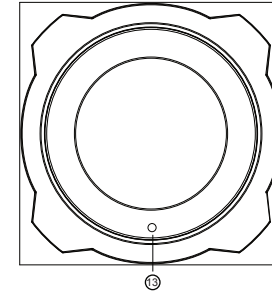

### Operation Instructions

1. Power on the soundbar and subwoofer. They will automatically be connected wirelessly by Bluetooth.
2. Press Source key on top of the Soundbar to select Bluetooth/OPT/AUX
3. **Bluetooth input**  
Press the SOURCE button to select the Bluetooth mode while the LED\* ⌘ " is on.  
Pairing option 1: Pair to your Bluetooth devices by selecting the pair name Zulu. After the initial pairing, the speaker unit will connect automatically when powered on again. To disconnect from one device and pair to another Bluetooth device, press and hold the PAIR button.  
Pairing option 2: If your device supports Near Field Communication (NFC), make sure the NFC feature is activated. Touch the NFC area on your device with the NFC area on top of the Soundbar.  
Note: " ⌘ " flashing quickly indicates Bluetooth device is being located; solid " ⌘ " indicates that Bluetooth is paired.
4. **Optical input**  
Press the SOURCE button to select Optical mode while LED 'OPT' is on. Connect to your device with optical cable (not included) and play.
5. **Aux input**  
Press the SOURCE button to select AUX mode while LED 'AUX' is on. Connect to your device with the included audio cable and play.
6. **Select the sound mode**  
Press the MODE button to select the sound mode you like. When you select Game mode, the " 🎮 " will be on, when you select Music mode the " 🎵 " will be on, when you select Movie mode the " 🎬 " will be on.
7. **Charge the Soundbar**  
Use the AC adaptor to charge the Soundbar when the battery is low.  
Note: Low battery life: Red LED is fast blinking;  
Charging: the Red LED is on;  
Fully charged: Red LED is off.

### Connecting External Devices

