

THE
SHARPER
IMAGE®

ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your Sharper Image product, contact a consumer relations representative by telephone at 1-888-856-6781 for assistance. Please make sure to have the model number of the product available.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: www.siproducts.com

THE SHARPER IMAGE® name and logo are registered trademarks.
Marketed and distributed by SI Products under license. ©The Sharper Image.
All rights reserved.

IB-ESIP410

THE
SHARPER
IMAGE®

portable Bluetooth® wireless speaker
stream



Instruction Manual and
Warranty Information

ESI-P410

1 year
limited warranty

SI Products
Service Center

1.888.856.6781
8:30a.m. – 7:00p.m. (EST)
M – F

e-mail:
cservice@siproducts.com



Thank you for purchasing Sharper Image Stream Portable Bluetooth® Wireless Speaker for smartphones, tablets, notebook computers and other Bluetooth enabled devices. This product, along with the entire Sharper Image Electronics lineup, combines high-tech innovation with design to provide you with years of dependability and enjoyment.

Getting Started

Unpack the unit carefully. Remove all the accessories from the display carton. Do not remove any labels or stickers on the rear of the unit and adaptor. Before setting up the unit, verify that the following accessories are present:

- Instruction manual x 1
- AC power adapter x 1
- Main unit x 1
- 3.5mm audio cable x 1

Power Source

This unit is supplied with an AC adapter; take the following steps to connect the adapter.

1. Connect the DC plug of the AC adapter to the DC socket on the rear of the unit.
2. Plug the AC adapter to the AC outlet (100v – 240VAC 50/60 Hz). Connecting this system to any other power source may cause damage to the system.
3. To switch the unit off completely, withdraw the AC adapter from the wall outlet and remove batteries from product.



Battery Operation

- Before installing batteries (not included), ensure that the unit is disconnected from the main power supply.
- Remove the battery compartment cover on the back of the unit by carefully pushing off the battery cover.
- Insert 4 AA size batteries(not included), referring to the polarity markings inside the battery compartment. Never mix old and new batteries.
- Replace the cover.
- For battery operation, switch off the main supply and remove the cable from the power socket, battery operation will be selected automatically.

Battery Precautions

- Use only the size and type of batteries specified.
- When installing batteries, observe proper +/- polarities. Incorrect installation of battery may cause damage to the unit.
- Do not mix different types of batteries together (e.g., alkaline with carbon-zinc or old batteries with new ones).
- If the unit is not going to be used for a long period of time, remove batteries to prevent damage due to possible battery leakage.
- Do not dispose of batteries in fire. Batteries may explode or leak.

Controls

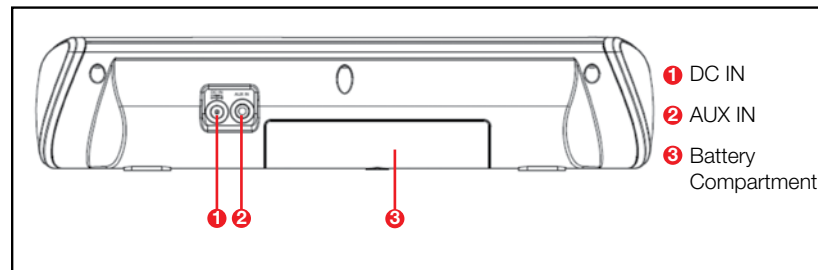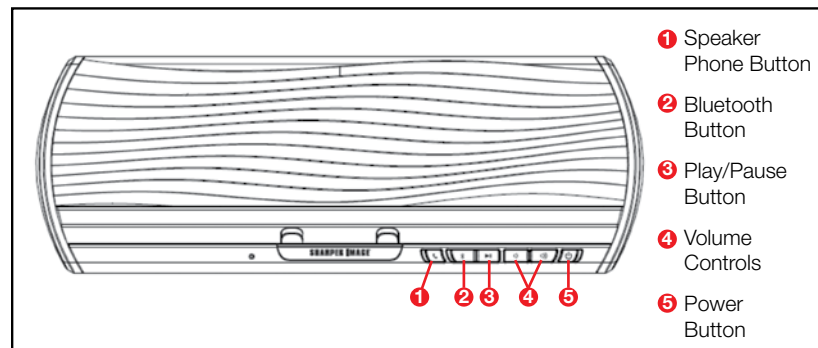

Listening to your device wirelessly over Bluetooth

To listen to your music over Bluetooth wireless connection, you need to pair your device with Sharper Image Stream:

1. Make sure your device has Bluetooth capability.
2. Press the POWER button to turn on the unit. The Bluetooth light will flash slowly after 5 seconds.
3. Once the Bluetooth button begins to flash, press and HOLD the Bluetooth button for a few seconds until the Bluetooth light begins to flash quickly.
4. Follow the instructions of your device to pair the unit.
5. Pair your device with the unit by selecting from your Bluetooth listings on your device or selecting YES.
6. Press play on your device and use controls on the unit or remote to adjust to desired volume.
7. The effective range of the Stream is approximately 30-feet from the Bluetooth device. Range can be affected by numerous factors including the Bluetooth device, wall materials, etc. If you experience audio drop outs please move the Bluetooth device closer to the Stream

NOTE: Once you have successfully paired your device, you typically will not need to repeat the above steps. Please ensure the unit source is set to Bluetooth and your device has Bluetooth enabled.

Listening to your device through the Auxiliary AUX In Audio Jack

1. Connect the supplied audio cable to the headphone or line-out jack of an audio device and plug the other end of the cable into the AUX In Audio jack on the back of the unit.
2. Press the POWER button to turn on the unit.
3. Press PLAY on the device and use controls on the unit to adjust to desired volume.

Hands-Free Speakerphone

The Stream can be used as a Hands-Free Speakerphone. When using the speakerphone make sure to talk directly at the front of the product. The built-in microphone will only work when it is connected to a Bluetooth enabled device.

Answer/End a Call

Press the Phone Button to answer and end a call.

Decline an Incoming Call

Hold the Talk Button for 2 seconds


Make a Call

Use your phone to dial. Call will play over speakers (make sure phone is paired to speaker).

Using the Universal Dock

Place tablet or smartphone in the dock.

When docking a tablet only dock in landscape position. See image below.

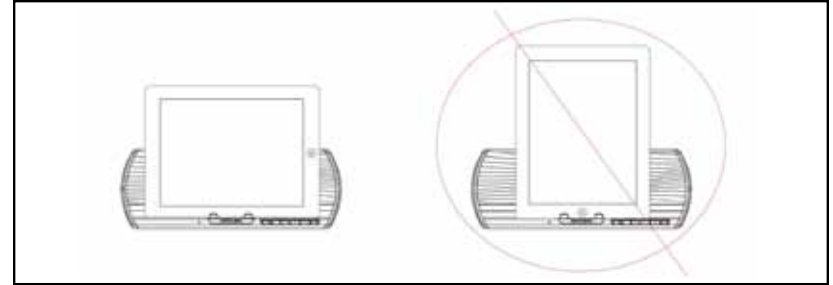

This product contains small parts that may present a choking hazard for young children. If swallowed, it could cause severe injury or death. Seek medical attention immediately.

FCC Disclaimer:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.