

Brookstone

Floating Speaker

XXXXXXXXXX

WIRELESS SPEAKER

TBD FINAL NAME AND PHOTO

Fold

LITHIUM-ION BATTERY WARNINGS

This device contains a non-removable Lithium-Ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

Fold

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between accept any interference received, including interference that may cause undesired operation.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an

Fold

experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. Use only the supplied antenna.

FCC ID: HBOFLOAT

Fold

TROUBLESHOOTING

BLUETOOTH® DISCONNECTION

- Ensure your device is within 33 feet of the speaker and reconnect your device to "Brookstone Floating."

AUDIO IS NOT CLEAR

- Power the speaker off and then back on.
- Adjust your device's equalizer.
- Check the volume level on the speaker.
- Check the volume level on your device.

SPEAKER DOES NOT PLAY AUDIO

- Make sure the speaker is charged.
- Power the speaker off and then back on.
- Confirm device is paired.

Note: The speaker remembers the last device paired. If you would like to use another device, pair that device manually.

Fold

CARE AND MAINTENANCE

To clean, wipe the speaker with a soft, dry cloth.

Important: Although the speaker is waterproof, avoid submerging the speaker for long periods of time as damage may occur.

Fold

SPECIFICATIONS

Power Supply: DC 5V/ 1A (Input)

Range: Class 2, up to 33 ft (10 m)

Compatibility: Bluetooth 2.0 or above device with A2DP/AVRCP

Speaker: 4 Ohm 1.25" (2)

Power Output: 2W*2

Frequency Response: 90Hz ~ 20KHz

Battery Life: Approx. 8 hours

Charging Time: Approx. 3 hours

Product Weight: Approx. .6lbs

Product Dimensions:
Approx. 5.8" (dia) x 1.4" (h)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Brookstone is under license.

© Brookstone 2015

Fold

Brookstone
A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

 
 
 
Merrimack, New Hampshire, USA 03054
800-846-3000 ▪ Brookstone.com

994080

SHENZHEN FENDA TECHNOLOGY CO., LTD.

LOCATION OF PARTS AND CONTROLS

1. Charging LED Indicator
2. Power Button
3. Volume -Button
4. Volume +Button
5. Pair/Call/Play/Pause Button
6. Pairing LED Indicator
7. Micro USB In (under cover)
8. Micro USB Charging Cable

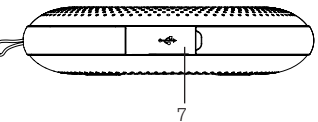

Fold

CHARGING

Fully charge the speaker before first use.

1. Lift the cover and insert the included MICRO USB CHARGING CABLE into the MICRO USB IN PORT on the speaker.
2. Plug the MICRO USB CHARGING CABLE'S USB connection into your computer's USB port or a USB adapter (not included).
3. The CHARGING LED INDICATOR is RED while the speaker is charging. When the speaker is fully charged, the CHARGING LED INDICATOR turns off. For first time use, charge the speaker for at least 3 hours.
4. When the speaker's battery is low, the low battery tone will sound.

Fold

PAIRING YOUR DEVICE

1. Prepare your device to pair using Bluetooth® technology, making sure the device is within 33 feet of the speaker. Refer to your device's owners manual for details if necessary.
2. Press and hold the POWER BUTTON until the power on tone sounds. The speaker will automatically enter pairing mode and the PAIRING LED will flash.
3. Select "Brookstone Floating" on your device. If prompted, use 0000 as a PIN for the pairing code. The speaker will wait for a connection in pairing mode for up to 2 minutes.
4. When "Brookstone Floating" is selected, the PAIRING LED will be solid and the pairing successful tone will sound to confirm pairing is complete.
5. After the initial pairing of your device, the speaker should automatically pair with your device the next time the unit is powered on. Depending upon your device, you may have to select "Brookstone Floating" in your device's Bluetooth® menu.
6. To enter manual pairing mode, with

Fold

the speaker powered on, press and hold the PAIR BUTTON until the PAIRING LED flashes.

7. Select "Brookstone Floating" on your device. If prompted, use 0000 as a PIN for the pairing code. The speaker will wait for a connection in pairing mode for up to 2 minutes.

Note:

- To cancel the pairing mode, either press and hold the POWER BUTTON, until the power off tone sounds and the speaker turns off, or wait 2 minutes for the speaker to cancel pairing mode and go into standby mode waiting to pair with a device that has been previously paired. The PAIRING LED INDICATOR will be solid.
- The speaker will automatically turn off if there is no Bluetooth connection for 1.5 hours.

Fold

LISTENING TO AUDIO

1. Press and hold the POWER BUTTON until the power on tone sounds. The speaker will automatically enter pairing mode and the PAIRING LED INDICATOR will flash as it searches for the last paired device, turning solid when the device is found. Depending on your device, "Brookstone Floating" may need to be selected in your device's menu.
2. Press the VOLUME + BUTTON to increase audio volume.
3. Press the VOLUME - BUTTON to decrease audio volume.
4. Press the PLAY/PAUSE BUTTON once to pause audio.
5. Press the PLAY/PAUSE BUTTON once to play audio.
6. To turn the speaker off, press and hold the POWER BUTTON until the power off tone sounds.

Fold

USING THE SPEAKERPHONE

When the speaker is paired to your device and a call is received, the incoming call tone will sound.

If there is audio playing though the speaker when a call is answered, the audio will pause and only your call will be audible. When you end the call, your audio will resume.

- To answer an incoming call press the CALL BUTTON once.
- To reject an incoming call press and hold the CALL BUTTON.
- To end an active call press the CALL BUTTON once.

Fold

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own

Fold

warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.