

HT-388D User Manual
2.1 Computer Multimedia Speaker


Caution

- Do not place the system in the high-temp and humid environment, prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional guidance.
- In case fragments or other liquids accidentally sprinkled inside the cabinet, please switch off the power immediately.
- In case of repair, please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.
- The equipment shall be used at maximum 35 degree C ambient temperature.
- The operation altitude up to 2000m.

Packaging content

- HDMI (ARC) Cable 1pc
- Remote control 1pc
- Operation manual 1pc
- Power cable 2pcs
- AAA batteries 2pcs
- Bolt and Rubber stopper 1set
- Optical cable 1pc
- 3.5mm Audio cable 1pc

Product wiring diagram

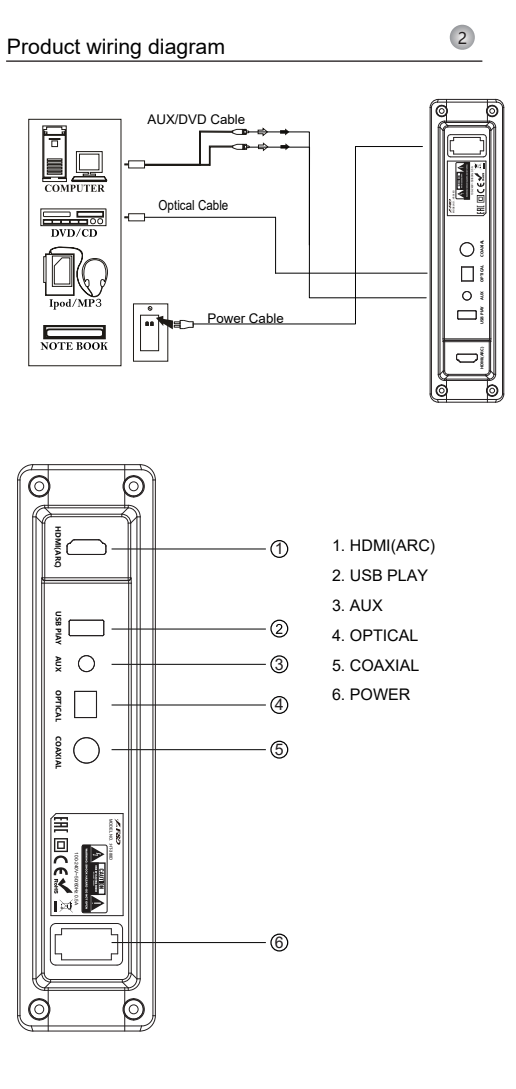

Panel key controls

Control panel instruction

Source - + MUTE


A. **源**: Turn on/off the unit.
B. **源**: Switch among BT/Optical/USB/AUX/HDMI/ARC/Coaxial mode.
C. **音量**:
a. USB Mode: Short press to play/pause the music play back.
b. Bluetooth mode: Short press to play/pause music, long press for Bluetooth pairing mode.
D. **音量**: Short press to decrease volume level
a. USB mode: Long press to select previous song.
b. Bluetooth mode: Long press to select next song.
E. **音量**: Short press to increase volume
a. USB mode: Long press to select next song.
b. Bluetooth mode: Long press to select next song.

Remote control

Remote control keys function

- Standby**: Short press to power on/off the unit.
- Mute/Reset**: Short press to mute or unmute/long press for factory default settings.
- 音量增加**: Short Press to increase volume level. Long press to increase the volume continuously.
- 音量减少**: Press to decrease volume level.
- Treble mode**: Short Press "Treble" first, then press volume increase or volume decrease to adjust "Treble" level.
- BASS mode**: Short Press "BASS" first, then press volume increase or volume decrease to adjust "BASS" level.
- Source**: Switch among Bluetooth /Optical/USB/ AUX/HDMI/ARC /Coaxial mode.
- TV**: Short press to switch to TV mode.
- Surround**: Short press to switch to Surround mode.
- Music**: Short press to switch to Music mode.

Wall Bracket Installation Instructions

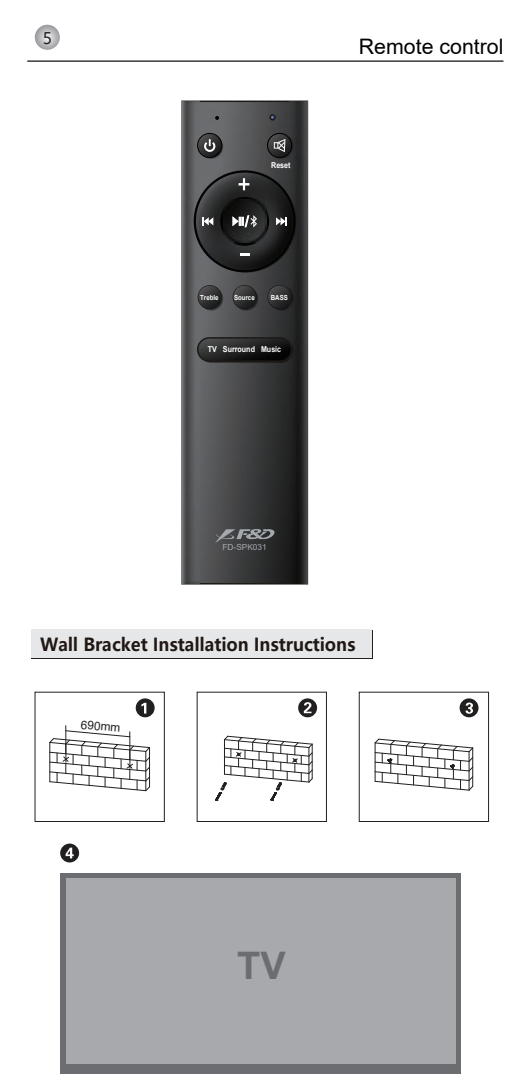

1. Mark two bolt locations on the wall with 60mm interval at a level.
2. Drill two holes on the marked locations.
3. Insert two bolts and plastic parts into the rubber stopper for hanging the bracket.

Subwoofer & soundbar pairing operation

Status 1
Once you will switch ON the unit first time, you will find that Soundbar and subwoofer will get paired automatically as follows
1. Turn On the Soundbar and subwoofer. Bluetooth indicator at the subwoofer will keep flashing.
2. Whether the Soundbar is in any of the Bluetooth /Optical/ USB/AUX/HDMI/ARC/Coaxial mode, wait about 1 minute, the Soundbar and the subwoofer can be paired automatically.
3. After the successful pairing of Soundbar and subwoofer, the Bluetooth indicator at subwoofer will keep lighting blue.

Status 2:
Connect soundbar and subwoofer manually as follows
1. Turn on the Soundbar and subwoofer.
2. Short press the "pair" button provided at the back side of subwoofer once. The Bluetooth indicator at subwoofer will start flashing. Wait for a minute, the soundbar and the subwoofer will enter into pairing mode and will get connected.
3. After successful pairing, the Bluetooth indicator at Subwoofer will keep lighting blue.

Status 3:
Reconnect soundbar and subwoofer
1. Turn on the Soundbar and subwoofer.
2. Press the "pair" button provided at the back side of the subwoofer once. Press it again after an interval of 2 seconds and wait for a minute, the soundbar and the subwoofer will enter into pairing mode and will get connected.
3. After successful pairing, the Bluetooth indicator at Subwoofer will keep lighting blue.

封面

封底

Operation guidance

Playback via Bluetooth

Note: When the first time to turn on the speaker, Soundbar must connect with the subwoofer successfully (the indicator light of the subwoofer is steady light), and then use other medium to connect to Bluetooth.

Basic Requirement

- Bluetooth must be activated on the mobile end device which you want to connect with "Fenda HT-388D".
- The mobile end device must support Bluetooth A2DP.
- The mobile end device must be within range of the Fenda HT-388D(max.15m).

Steps need to be followed

- Press Source key to select Bluetooth mode
- BT will appear on the display
- You now have 30 seconds to register your mobile end device
- Start the search on your mobile end device
- If the mobile device requires an access code, please enter 0000
- Once confirmed, the connection will be done automatically and BT will appear in the display

Please note:

- The device most recently connected to the F&D System connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected. In this case the message BT will appear.
- Start the playback of a medium on your mobile end device and the sound will automatically be generated by the F&D System.

USB mode

- Plug in USB driver
- Card reader supporting max 32GB as well as MP3/WMA dual formats decoding
- Play music (refer to remote control function)


AUX mode

Short press Source to select AUX mode.
1. Connect the speaker with audio source through signal cable (output interface of devices as TV, PC, Mobile phones, etc.).
2. Adjust volume while playing music.

Optical mode

Short press Source to select Optical mode.
1. Connect TV with optical port on the rear of the speaker through optical cable.
2. Please make sure to set "PCM mode" as digital output on your devices, such as Blue-ray DVD, TV and Video player, etc. Below as example.
3. Adjust volume while playing music.

Note: Please make sure that TV supports an optical function.

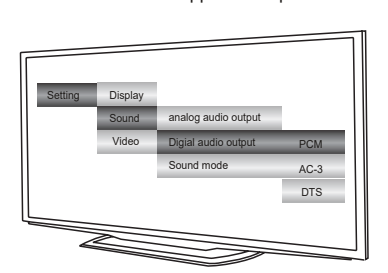

Specifications

Output power (RMS): 120W(80W+20W*2)
Speaker Unit:
Subwoofer: 8"1pc
Soundbar: (S2*92mm)2pcs
Tweeter: 1"2pcs
Frequency response: 20Hz-20KHz
S/N Ratio: >70dB
Separation: >45dB
Bluetooth version: V5.3
Power: 100-240V~50/60Hz 1.5A
Soundbar: W996D1184H86mm
Subwoofer: W185xD380xH172mm

Problem	Possible Cause	Solution
F&D system does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction too soft	Volume of F&D System set too low	Increase the volume using the "Volume" button, increase the volume of the source device
F&D System does not respond to remote control	The battery is empty	Replace battery, observe correct polarity at insertion
Source device not producing any signal	Digital output on the source device not activated (please refer to device instructions)	Activate digital output on the source device
No sound reproduction	Cable not correctly connected/loose cable	Check the connection of the source device to the F&D System and change the cable if necessary
No sound output under optical mode	Optical cable not connected well or damaged	not bend optical cable over 90 degree
The subwoofer cannot be connected	After pressing the pairing button on the back of the subwoofer, the subwoofer cannot automatically connect to the Soundbar	Power off the subwoofer and power on again; Turn off the Sound (Speaker and turn on; choose one of the two)

Safety Instruction for CB and CE-LVD

- Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- WARNING**: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- WARNING**: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- Correct Disposal of this product**. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
- Frequency: 2.402GHz-2.48GHz
- The Max. transmit power: 3.1768m

Specifications

Warning:
Federal Communications Commission (FCC) Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
Warning: Changes or modifications made to this device not expressly approved by SHENZHEN FENDA TECHNOLOGY CO., LTD. may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.
The transmitter must not be collocated or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

WARRANTY CARD

END-USER'S COPY
WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
Last Name: _____
Address: _____
Contact No.: _____
Product Name: _____
Model No.: _____
Serial No.: _____
Date Purchased: _____
Invoice No.: _____
Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 1

WARRANTY CARD

DISTRIBUTOR'S COPY
WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
Last Name: _____
Address: _____
Contact No.: _____
Product Name: _____
Model No.: _____
Serial No.: _____
Date Purchased: _____
Invoice No.: _____
Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

WARRANTY TERMS & CONDITIONS


The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follows:
1. The warranty covers services by our F&D Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irrevocable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorized Dealer (Parts would be replaced when necessary):
A. Parts: _____ 1 year
B. Technical service free: _____ 1 year
3. Under the following circumstances, service and parts will be chargeable even within the warranty period:
A. Failure to present the warranty card and receipt when servicing is required.
B. Full particulars not clearly shown or alterations made against the actual information.
For e.g., Alteration of the date of purchase, serial numbers/label or removed.
4. This unit being tampered with, altered in any way by any unauthorized technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
5. The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.
Shenzhen Fenda Technology Co., Ltd.
ADD: Fenda Hi-Tech Park, Zhuzhou Road, Shiyao, Baoan, Shenzhen, Guangdong, P.R.C.
P.C.: 518109 http://www.fendaco.com

装订方式：左右风琴折（开口朝左）。



封面

封底

		料号	12.005.0004.XXXXX	尺寸(mm)	展开尺寸: 600x154, 成型尺寸: 75x154	环保要求	说明书类说明: 1、公差 (mm): 0<a≤50 (+0.3/-0.2), 50<a≤150 (+1/-0.5), >150 (+1.5/-1. 有特殊要求的, 按标示公差执行。 2. 要求图文清晰可辨, 内容完整, 折叠正确, 无重影, 墨尿、杂点、脏点、异物、粉点、套印不准。 3. 尺寸按展开尺寸及成型外尺寸测量计算。
项目名称	21年F&D HT-388D声霸音箱	产品型号	HT-388D	材质	105g铜板纸	■RoHS2.0、Reach ■包装指令94/62/EC □大豆油墨印刷	
日期	2023.11.13	部件名称	说明书	页码P数	16p	□无氯漂白工艺	
包装工程师	郭美娇	平面工程师	王金松	颜色	单黑印刷	□无黏剂为非石油基	
设计版本	变更提出人	变更原因	是否有可参考	表面处理	<input type="checkbox"/> 无 <input type="checkbox"/> 光油 <input type="checkbox"/> 哑油 <input type="checkbox"/> 水性光油 <input type="checkbox"/> 水性哑油 <input type="checkbox"/> UV油 <input type="checkbox"/> 光胶 <input type="checkbox"/> 哑膜 <input type="checkbox"/> 防刮花哑膜	<input type="checkbox"/> 油墨中禁止使用矿物油(法国) <input checked="" type="checkbox"/> TPCH(美国)	
A1	业务	更新FCC-ID用户手册插页	<input type="checkbox"/> 刀模 <input type="checkbox"/> 颜色 <input type="checkbox"/> 无 <input type="checkbox"/> 有:	工艺 <input checked="" type="checkbox"/> 无 <input type="checkbox"/> 烫金 <input type="checkbox"/> 烫银 <input type="checkbox"/> 击凸 <input type="checkbox"/> 击凹 <input type="checkbox"/> 压网 <input type="checkbox"/> 局部UV <input type="checkbox"/> 其它	条码要求 <input checked="" type="checkbox"/> 无条码 <input type="checkbox"/> 有条码(清晰易扫描)		
				装订方式	<input checked="" type="checkbox"/> 风琴折 <input type="checkbox"/> 包心折 <input type="checkbox"/> 骑马钉 <input type="checkbox"/> 胶装 <input type="checkbox"/> 线装 <input type="checkbox"/> 其它		