



1 year
limited warranty


Instruction Manual
and Warranty
Information

HX-P240A

Por manual de instrucciones e información de garantía en español visítenos en www.hmdxaudio.com

Thank you for spreading the Jam and purchasing the HMDX Jam Plus Wireless Speaker. Be sure to check out the entire JAM product line on our website: www.hmdxaudio.com — Where there's a Jam there's a party!

Package Contents

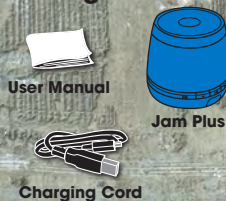


Charging the Unit

Approximately 3 hours required for full charge. Can be charged by using the USB to Micro USB cord (included) through computer or AC adapter with USB jack (not included).

Note: Battery will last up to 4 hours when connected wirelessly.

Controls

- 1 Power Button
- 2 Speaker Mode Switch
- 3 Charging Port
- 4 Line-in Audio Jack
- 5 Battery Status Indicator
- 6 Volume Down
- 7 Play/Pause Button
- 8 Volume Up
- 9 Bluetooth® Indicator
- 10 Jam²

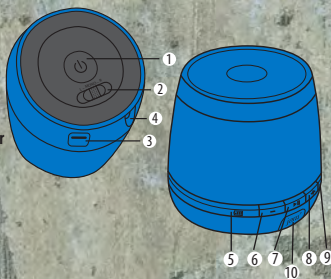

Indicators

Battery Indicator	Status
Solid Red	Charging
Slow Blinking Red	Low Battery

Bluetooth Indicator	Status
Quickly Flash BLUE	Pairing Mode
Slowly Flash BLUE	Paired
RED	Line-In Mode

Note: When unit is fully charged Red light will be off.

Pairing a Single Jam Plus Speaker (Mono)

To listen to your music over Bluetooth wireless connection, you need to pair your device with Jam Plus:

1. Make sure your device has Bluetooth capability.
2. Press and hold power button for 5 seconds; indicator will begin to flash.
3. Follow the instructions of your device to pair the unit.
4. Pair your device with the unit by selecting JAM PLUS from your Bluetooth listings on your device or selecting YES.
5. Press play on your device and use controls on the unit to adjust desired volume.

NOTE:

- Once you have successfully paired your device, you may not need to repeat the above steps. Please ensure the AUX cable is unplugged and your device has been Bluetooth enabled.
- When using only one Jam Plus, make sure that the switch is set to Mono. You will not be able to pair with the speaker if it is set to "L" or "R".
- When pairing with a computer, please consult your computer manufacturer for Bluetooth pairing instructions and/or the latest Bluetooth Drivers.
- A pairing code is not required.

Pairing 2 Jam Plus speakers together (Stereo)

To pair 2 Jam Plus speakers together for stereo sound please follow the below steps:

1. Turn 1 speaker over and move the speaker mode switch to L.
2. Turn the other speaker over and move the speaker mode switch to R.
3. Press and hold power button for 5 seconds on one speaker.
4. Press and hold power button for 5 seconds on other speaker.
5. Speakers will begin to pair together automatically.

6. Pairing process can take up to 30 seconds- once you hear the steel drum tone and the Jam² indicator light begins to slowly flash, you may pair to your device.
7. Follow the instructions of your device to pair the unit.
8. Pair your device with the unit by selecting Jam² from your Bluetooth listings on your device or selecting YES.

NOTE:

- If you do not see Jam² as an option on your device - you may have only paired 1 speaker. Turn off both units and repeat steps 1-8.
- You cannot pair more than one set of Jam Plus speakers together.
- If you are using two Jam Plus speakers in Stereo (Jam² Mode), in order to use them in Mono mode, turn off the unit and move the switch on the bottom to the center Mono position.
- When 2 Jam Plus speakers are paired in Stereo (Jam² Mode), and you turn off 1 speaker, the 2nd speaker will turn off automatically.
- For balancing the volume level on the speakers, maximize volume on both units and control volume through device.

Listening to your device through the Auxiliary Line-In Audio Jack

1. Connect Aux cable to the headphone or line-out jack of an audio device and plug the other end of the cable into the Line-In Audio Jack on the back of the unit.
2. Press and hold the power buttons to turn on the unit.
3. Press PLAY on the device and use controls on the unit to adjust desired volume.

NOTE: Track forward/reverse and play/pause controls on Jam Plus will not work when using Line In Audio Jack

NOTE: To reset the speaker or clear the pairing history, press the reset button, or with the power on, press the play/pause button and power button simultaneously for 5 seconds.

Maintenance

Use only a soft dry cloth to clean the enclosure of the unit.
NEVER use liquids or abrasive cleaner to clean.

FCC Disclaimer:

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

One Year Limited Warranty:

For detailed Warranty Instructions and Information visit:

<http://www.hmdxaudio.com/products/jam-wireless-portable-speaker.html>

To obtain warranty service on your HMDX product, contact a Consumer Relations Representative by telephone at 1-800-753-3000 or email cservice@hmdxaudio.com for assistance. Please make sure to have the model number of the product available. Representatives are available 8:30am - 7:00pm EST Monday-Friday.

IMPORTANT SAFEGUARDS:

When using an electrical product, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- **WARNING:** Do not place speakers too close to ears. May cause damage to ear drums, especially in young children.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by HMDX.
- HMDX is not liable for any damage caused to Smartphones, iPod/MP3 player or any other device.
- Do not place or store this product where it can fall or be dropped into a tub or sink.
- Do not place or drop into water or any other liquid.
- Not for use by children. THIS IS NOT A TOY.
- Never operate this product if it has a damaged cord, plug, cable or housing.
- Keep away from heated surfaces.
- Only set on dry surfaces. Do not place on surface wet from water or cleaning solvents.

Por manual de instrucciones e Información de garantía en español visítenos en www.hmdxaudio.com

HMDX Jam and HMDX are trademarks of HMDX.

©2013 HMDX. All Rights Reserved.

IB-HXP240A