 


Final flat size: 11.32 × 7 in. (287.5 × 177.8 mm)
 Final fold size: 5.66 × 3.5 in. (143.7 × 88.9 mm)

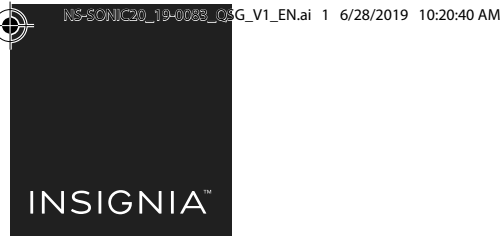

QUICK SETUP GUIDE

Sonic Portable Speaker

NS-SONIC20

 
PACKAGE CONTENTS

- Sonic portable speaker
- USB charging cable
- *Quick Setup Guide*


FEATURES

- Wirelessly streams from any Bluetooth device up to 33 ft. (10 m) away
 - Water resistant design (IPX5 rating) protects your speaker from water
 - Rechargeable battery lasts up to 40 hours
 - Speakerphone for hands-free calling
 - Stereo speakers and passive radiator help deliver full sound
 - True Wireless Stereo (TWS) lets you connect two Sonic speakers together to play left-and-right channel audio separately
- Note:** Works with Sonic speakers only, not MiniSonic speakers

Top

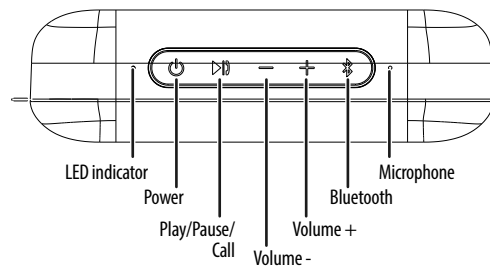

Back

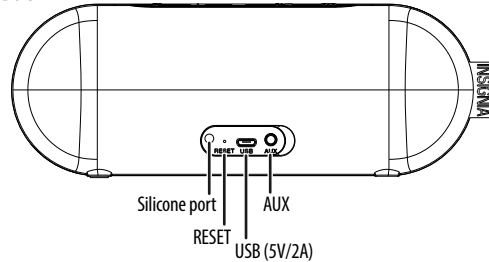 

BUTTON FUNCTIONS

BUTTON	FUNCTION
	<ul style="list-style-type: none"> • Press and hold to turn the speaker on and off. • Press twice to announce left or right channel in TWS mode.
	<p>In Bluetooth mode:</p> <ul style="list-style-type: none"> • Press to play/pause the content. • Press and hold for two seconds to activate Siri or other voice control software. • Press to answer an incoming call and press again to hang up the call. • Press and hold for two seconds to reject an incoming call. • Press and hold for two seconds to switch between two calls. • Press and hold for two seconds to switch audio between the phone and speaker during a call. • Double-click to re-dial the latest called number. <p>In AUX mode:</p> <ul style="list-style-type: none"> • Press to mute/unmute the speaker.
	<ul style="list-style-type: none"> • Press to increase or decrease volume. • Press and hold to go to the previous/next song.
	<ul style="list-style-type: none"> • Press and hold for two seconds to connect/disconnect a Bluetooth device. • Press twice to connect/disconnect TWS pairing.


LED INDICATOR

LED	FUNCTION
Blinks blue quickly	Bluetooth pairing mode
Lights solid blue	Paired to a Bluetooth device
Blinks blue slowly	AUX play or AUX mute
Lights solid red	Speaker is charging (charging complete when LED turns off)
Lights blue / red / green	Call activated
Blinks green quickly	TWS pairing mode
Lights solid green	TWS connected

CHARGING YOUR SPEAKER

- 1 Connect one end of the USB cable to the USB port on the back of your speaker.
- 2 Connect the other end of the USB cable to a USB port on your computer or wall adapter (not included). The LED indicator is red while charging, then turns off when the speaker is fully charged.

 Note: The speaker beeps continually when the battery is low.

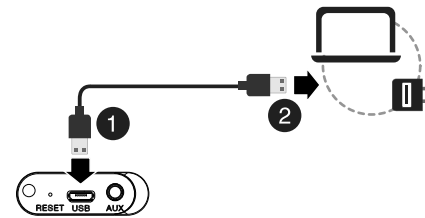


CONNECTING AN AUDIO DEVICE

Bluetooth

- 1 Press and hold (power) to turn on your speaker. The LED indicator blinks blue quickly and your speaker automatically enters pairing mode.
- 2 Make sure that your Bluetooth device is within 33 ft. (10 m) of your speaker.
- 3 Turn on your Bluetooth device, turn on Bluetooth, then enter pairing mode. For more information, see the documentation that came with your Bluetooth device.
- 4 On your Bluetooth device, select **Insignia Sonic**. Your speaker pairs with your Bluetooth device and the LED indicator lights solid blue.
- 5 To disconnect, un-pair your Bluetooth device from your speaker.
OR
Press and hold (Bluetooth) for two to three seconds on your speaker. Your Bluetooth device loses connection automatically.

3.5 mm audio cable

 Connect a 3.5 mm audio cable (not included) from your speaker's **AUX** jack to your audio device's headphone/audio out jack.

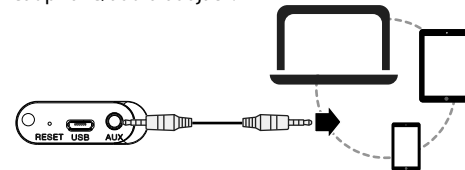

The LED indicator blinks blue slowly while connected to an audio cable.

CONNECTING YOUR SPEAKERS WITH TWS

TWS lets you connect two Sonic speakers together to play left-and-right channel audio separately.

- 1 Make sure that your Sonic speakers are near each other.
- 2 Press (Bluetooth) twice on each speaker within one minute. Each speaker says "true wireless pairing" and they pair automatically.

Notes:

- If one Sonic speaker is already connected to your Bluetooth device, press (Bluetooth) twice on this speaker. It pairs automatically with the other one.
- If both Sonic speakers are in pairing mode, press (Bluetooth) twice on either speaker. It pairs automatically.
- After they are paired, the first speaker says "paired, please connect to your device" then the green LED blinks slowly. The other speaker's green LED is on.

- 3 On your Bluetooth device, select **Insignia Sonic**. After they are connected, the speakers say "left channel" and "right channel".

Note: If they do not pair, you may need to delete all **Insignia Sonic** speakers from your device and pair them again.

- 4 Press (power) twice. The speaker announces that it is either the left or right channel so you know which side to place the speaker on.

Notes:

- While TWS is activated, only the speaker that slowly blinks green can be used for phone calls. This speaker blinks blue/red/green when a call is active.
- TWS function does not support AUX input.

TAKING A PHONE CALL

Using your speaker

The following functions are available when paired to a phone with Bluetooth:

- **Reject an incoming call:**
Press and hold (Play/Pause/Call).
- **Answer an incoming call:**
Press (Play/Pause/Call).
- **Switch audio between your speaker and phone during a call, or switch between two calls:**
Press and hold (Play/Pause/Call).
- **End current call:**
Press (Play/Pause/Call).
- **Redial the last dialed number:**
Press (Play/Pause/Call) twice.



RECONNECTING TO A PAIRED DEVICE

- Make sure that the last paired Bluetooth device is near your speakers.
- When your speaker is on, it automatically searches for and tries to connect to the last paired device.

USING YOUR SPEAKER

Listening to audio

- 1 Connect to your speaker with Bluetooth or a 3.5 mm audio cable.
- 2 Play audio on your connected device.
- 3 Press + or - to adjust your speaker's volume.
Note: Make sure that your connected device's volume is set to at least 50%.
- 4 Use the controls on your connected device to control playback.

RESETTING YOUR SPEAKER

To reset your speaker, use a paperclip to press **RESET**.
Note: Resetting your speaker eliminates all previous Bluetooth devices from memory.

SPECIFICATIONS

Dimensions (H×W×D): 2.9 × 7.9 × 2.2 in.
(7.4 × 20 × 5.6 cm)

USB charging cable: 20 in. (50 cm)

Net weight: 1.01 lbs. (460 g)

Gross weight: 1.23 lbs. (562 g)

Charging current: 5V 2A

TROUBLESHOOTING

No power

- Make sure that your speaker is plugged in.
- Make sure that your speaker is turned on.

No sound or low volume

- Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and **Insignia Sonic** is selected.
- Turn up the volume on your speaker.
- Turn up the volume on your Bluetooth device.
- Make sure that your Bluetooth device is not muted.
- Make sure that your speaker is not paired to another Bluetooth device.
- Make sure that your Bluetooth device is not paired to another Bluetooth device.

Cannot establish Bluetooth connection

- Shorten the distance between your speaker and your Bluetooth device.
- Turn your devices off, then on. Re-pair your speaker and your Bluetooth device.
- Make sure that there is nothing plugged into the AUX jack.
- Make sure that your speaker is not paired to another Bluetooth device.
- Make sure that your speaker and Bluetooth device are both in pairing mode.
- Make sure that your Bluetooth device supports Bluetooth v4.0 and below.
- Make sure that your Bluetooth device is not connected to any other device.
- Make sure that you have selected **Insignia Sonic** on your Bluetooth device.
- If a passcode is needed, enter **0000**.

My Bluetooth device keeps unpairing

- Shorten the distance between your speaker and your Bluetooth device.
- If the battery on your Bluetooth device is low, recharge the battery.

"Insignia Sonic" does not appear on my Bluetooth device

- Shorten the distance between your speaker and your Bluetooth device.
- Put your speaker into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.

Sound is distorted

- Adjust the volume to the ¼ or ½ level.
- Adjust the volume settings on the output device (computer or portable audio source).
- Make sure that all connections are correct and secure.

Can my speaker connect to a TV, monitor, or DVD player?

- Yes, if the device has a Bluetooth or an AUX connection.

Can my speaker be connected to more than one device (3.5 mm and Bluetooth)?

- No. Only one sound source can be used at a time. The mode priority is AUX, then Bluetooth.

Does my speaker work with smart home devices?

- Yes, your speaker works with any Bluetooth device.

LEGAL NOTICES

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC and Industry Canada radiation exposure limits set forth for an uncontrolled environment.

Industry Canada Compliance IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Conformité à Industrie Canada Déclaration d'IC

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements de la FCC et du Canada établies pour un environnement non contrôlé.

IFETEL Statement

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. este equipo debe aceptar cualquier interferencia, incluyendo la que pueda causar su propia operación no deseada.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003;
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico) www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2019 Best Buy. All rights reserved
Made in China

