

80mm

80mm

onn.™

Wireless Party Speaker
Quick Start Guide

<p>What's in the Box?</p> <p>1 AC charging cable 1 Quick Start Guide 1 Wireless Party Speaker</p>	<p>Check to make sure you have everything below</p>	<p>Get to Know Your Wireless Party Speaker</p> <p>1. LED Display 2. Source 3. Bluetooth / Party sync 4. Power 5. Master volume control 6. Previous track 7. Play / Pause 8. Next track 9. Wall light 10. Bass boost</p> <p>11. Light 12. 3.5 mm AUX input 13. Reset 14. USB Emergency power port 15. AC charging port 16. Microphone volume control 17. Guitar volume control 18. 1/4" Guitar port 19. 1/4" Microphone port</p>	<p>Get to Know Your Wireless Party Speaker</p> <p>Tips: - Installation must be done by qualified persons using safe rigging standards. - The installer is responsible for proper selection and use of mounting hardware, to properly and safely pole-mount the speakers. - Always follow instruction and precaution advice from speaker stand manufacturer.</p>	<p>Let's Get Started!</p> <p>01</p> <p>The battery icon will flash when charging, and all battery segments will be lit and remain solid white once fully charged.</p> <p>Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place. Recommend to charge it at least one time for every half year, in order to keep the battery performing well. Empty battery too long may result in fewer hours of usage between charges.</p> <p>Built-in Rechargeable Li-Ion Battery: 14.6V/2500mAh</p>	<p>Connect Your Wireless Party Speaker</p> <p>02</p> <p>Connect to your device through Bluetooth® wireless technology, search for the entry "onn. Party Speaker L".</p> <p>PLACEMENT Caution: Do not sit or lean on the speaker or push it sideways to avoid tip-over and possible damages. Place the speaker on a flat, stable surface and ensure that the rubber feet side is down.</p>	<p>Want Your Party to the Next Level?</p> <p>03</p> <p>1. Power on both speakers, press & hold ⏏ of each speaker to enter Party Sync Mode. 2. When two speakers paired, you will hear left channel, right channel. The left channel is the master. 3. Use your mobile device to pair with the master speaker by Bluetooth pairing method. 4. Press & hold ⏏ again to disconnect Party Sync Mode.</p>
<p>Wired Use? Yes!</p> <p>04</p> <p>1. Use a 3.5 mm AUX cable (not included) to connect the speaker to your audio source. 2. In AUX mode, ⏏ can't be used, you can ONLY control them by your audio source device.</p>	<p>Listen to Your Favorite Radios</p> <p>05</p> <p>1. Press ⏏ to select FM mode. 2. Press ⏏ or ⏏ to scan and select FM stations step by step. 3. Press ⏏ or ⏏ to seek (jump to the next available station). 4. In FM Mode, press and hold ⏏ to assign the current station to a preset number, the LED screen will show "SAV" to show the station has been saved. The preset number can be changed by pressing ⏏. 5. In FM Mode, press ⏏ repeatedly to select a saved radio station.</p>	<p>Want to Sing A Song?</p> <p>06</p> <p>1. Connect your Microphone (not included) or Guitar (not included) to the MIC or GUITAR port. 2. Play Guitar through the speaker. 3. Sing along with the Microphone when music played on Bluetooth/AUX-FM mode. 4. Rotate the MIC or GUITAR knob to adjust the Microphone or Guitar volume.</p>	<p>Want More Lighting Effects?</p> <p>07</p> <p>1. Press ⏏ to turn on/off the light. 2. Press ⏏ once to turn on/off the light effect. 3. Quick press ⏏ to switch between 6 different multicolor LED lightings.</p>	<p>Charge Your Device</p> <p>08</p> <p>USB-A charging port with emergency power can charge your other smart devices (5V=2.1A output), when this Wireless Party Speaker is powered on.</p>	<p>But Wait ... There's More!</p> <p>-Do not sit or lean on the speaker or push it sideways to avoid tip-over and possible damages. -Place the speaker on a flat, stable surface and ensure that the rubber feet side is down. -Always keep the charging port dry before connecting AC power. -To ensure it is waterproof, always close the protective cover securely.</p> <p style="text-align: right;">November 23, 2022_Y1</p>	

Font:
Graphik Regular


ICE



VERMILLION



封面



onn.™

封底

80mm

LEGAL & COMPLIANCE

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules and BSED Canada License-exempt RSS Standard(s). Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.



This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.

IMPORTANT SAFETY INSTRUCTIONS


11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/appliances combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not install this equipment in a confined or built-in space such as a book case or similar unit, and maintain well-ventilated conditions. The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, bedclothes, curtains, etc.
16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
17. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
18. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



IMPORTANT SAFETY INSTRUCTIONS

19.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



20. The equipment shall be used at maximum 35 degree C ambient temperature.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION:
Risk of explosion if the battery is replaced by an incorrect type
- replacement of a battery with an incorrect type that can defeat a safeguard (for example in the case of some lithium battery types)
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion:
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
Rating label is located at the bottom of the product.
The equipment is waterproof only when placed vertically, it is not waterproof when placed sideways.

Party sync mode compatible model list

100008734	AAAGRY100006897
100008736	AAAAQU100006897
100094812	AAAGRY100006902
100094813	AAAGRY100006896
100097809	

F&D 奋达科技	料号	12.005.0004.06404	尺寸(mm)	展开尺寸: 320x80, 成型尺寸: 80x80	环保要求	
项目名称	PA2323 户外音箱项目	产品型号	PA2323	材质	80g书纸	RoHS2.0、Reach
日期	2022.12.08	部件名称	安规手册	页码/P数	8/p	包装指令94/62/EC
包装工程师	李小明	平面工程师	李莹	颜色	单色印刷	大豆油墨印刷
设计版本	变更提出人	变更原因	是否有可参考	表面处理	<input type="checkbox"/> 无 光油 <input type="checkbox"/> 哑油 <input type="checkbox"/> 水性光油 <input type="checkbox"/> 水性哑油 <input type="checkbox"/> UV油 <input type="checkbox"/> 光胶 <input type="checkbox"/> 哑膜 <input type="checkbox"/> 防刮花哑膜	无氯漂白工艺
A0			<input type="checkbox"/> 刀横 <input type="checkbox"/> 颜色	工艺	<input type="checkbox"/> 无 烫金 <input type="checkbox"/> 烫银 <input type="checkbox"/> 凸击 <input type="checkbox"/> 击凹 <input type="checkbox"/> 压网 <input type="checkbox"/> 局部UV <input type="checkbox"/> 其它	粘合剂为非石油基
			<input type="checkbox"/> 无	条码要求	<input type="checkbox"/> 无条码 <input checked="" type="checkbox"/> 有条码 (清晰易扫描)	油墨中禁止使用矿物油 (法国)
			<input type="checkbox"/> 有:	装订方式	<input checked="" type="checkbox"/> 风琴折 <input type="checkbox"/> 包心折 <input type="checkbox"/> 骑马钉 <input type="checkbox"/> 胶装 <input type="checkbox"/> 线装 <input type="checkbox"/> 其它	TPCH (美国)
						说明书类说明: 1. 公差 (mm): 0<a≤50 (+0.3/-0.2), 50<a≤150 (+1/-0.5), >150 (+1.5/-1)。有特殊要求的, 按标示公差执行。 2. 要求图文清晰可辨, 内容完整, 折叠正确, 无重影, 墨层、杂点、脏点、异物、粉点、套印不准。 3. 尺寸按展开尺寸及成型外尺寸测量计算。