

80mm

2.0 Mini Sound Bar 16"
Quick Start Guide

What's in the Box?

Check to make sure you have everything below.

1. Soundbar
2. AC adapter
3. Remote control
4. Quick Start Guide
5. AUX to RCA audio cable (Length: 1.5m)

Get to Know Your 2.0 Mini Sound Bar 16"

Front

Back

Controls

1. Status indicator
2. Wall mount
3. Aux in
4. Optical
5. Power
6. Power on / off
7. Source
8. Volume down
9. Volume up

Get to Know Your 2.0 Mini Sound Bar 16"

Remote control

1. Power on / off
2. Mute
3. Bluetooth
4. Aux
5. Optical
6. TV mode
7. Music mode
8. Movie mode
9. Volume up
10. Previous track
11. Play / Pause
12. Next track
13. Volume down

Get to Know Your 2.0 Mini Sound Bar 16"

Status indicator

Standby	Solid Red
Optical	Solid Green
Aux in	Solid White
Bluetooth pairing mode	Flashing blue
Bluetooth device connected	Solid blue
Volume up and down	Corresponding to the sound source indicator light flash 1 time
Maximum and minimum volume	Corresponding to the sound source indicator light flash 3 times
Mute	Slow flash
TV mode	Corresponding to the sound source indicator light flash 2 times
Music mode	Corresponding to the sound source indicator light flash 2 times
Movie mode	Corresponding to the sound source indicator light flash 2 times

10002635

6 81131 28435 6

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

Let's Get Started!

Here's what you'll need to get set up:

TV

Computer, Tablet or Smartphone

Remote control Batteries

Before first use
To prepare the remote control for first use, pull out the safety strip to activate the battery.

Replacing the battery
When replacing the battery in the remote control, refer to the diagram below.

1. Press the catch across.
2. While holding the catch, open the battery door.
3. Fit the battery observing polarity as shown.

When replacing the battery, use only the same CR2025 type specified.

Power and Aux connection

Steps:

1. Plug the DC cable from the AC adaptor into the Power jack on the back panel, and plug the AC adaptor into the wall socket.
2. Press Φ to power on/power off.
3. Connect the audio cable to the audio output of any device (such as Desktop PC, Laptop, Smartphone, Tablet, MP3, TV, etc.) with a 3.5 mm headphone output jack or RCA output jack.

Bluetooth® Connection

Steps:

1. Turn on the sound bar and select the Bluetooth® mode.
2. Activate the Bluetooth® function on your device and search for devices nearby.
3. Find "Onn 16" Soundbar" in the search results and tap to connect.
4. The Bluetooth® indicator will turn solid blue on upon a successful connection.


But Wait ... There's More!

- The Bluetooth indicator will keep flashing when the sound bar is pairing.
- Please make sure no other active Bluetooth® devices are within range, and that the sound bar is within 3ft / 1m away from your device.
- Before starting to play via Bluetooth, please lower the volume to a moderate level.

The Fine Print

USER MANUAL INSERTS FOR FCC ID

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - ☐ Reorient or relocate the receiving antenna.
 - ☐ Increase the separation between the equipment and receiver.
 - ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - ☐ Consult the dealer or an experienced radio/TV technician for help.
3. RF Exposure Statement
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna. Product for Wal-Mart Stores, Inc. Bentonville, AR 72716. Hotline 1-800-925-6278

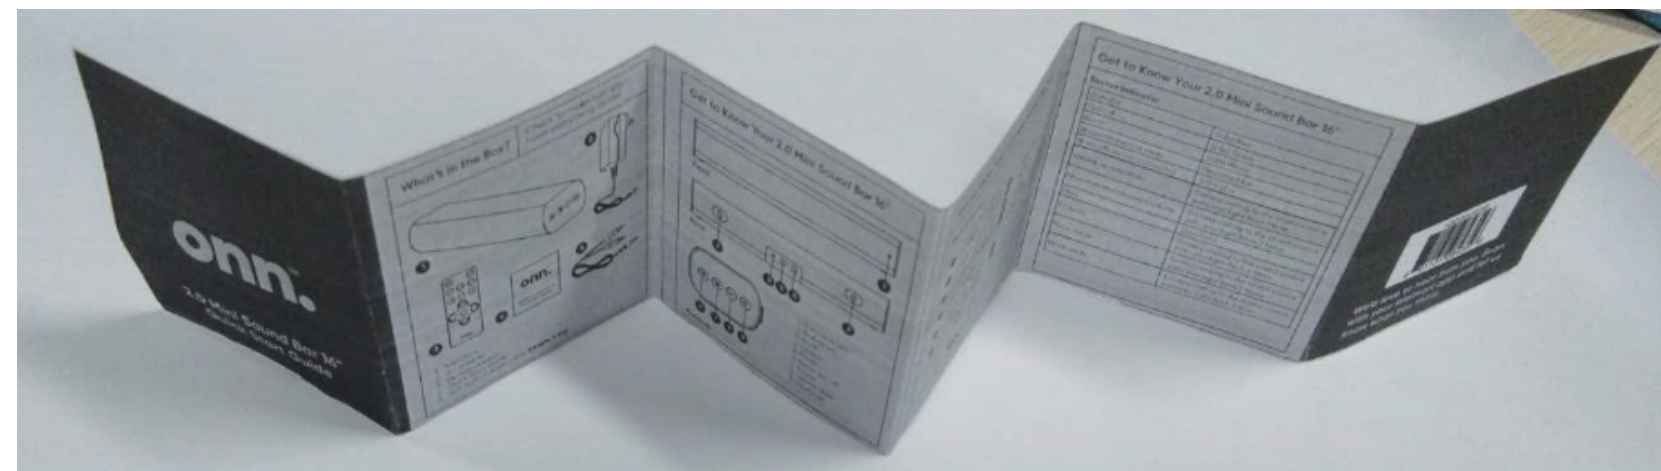

展开尺寸	480X80MM
成型尺寸	80X80MM
材质要求	157g 铜版纸
印刷要求	两色印刷 两面印刷
工艺要求	无处理
页码数(页)	风琴折

		时 间	20190611	订 单 号	GM19231
品 牌	ONN	公司型号	SB925C	客户型号	SB925C
版 本	A0	设计内容	说明书	料 号	17.7.030.1872
电 子 软 件		结 构 电 声	陈文韬	业 务	陈琳云/熊莉
设计者	杨改改	标 准 化	李洪波	项 目 经 理 / 产 品 经 理	蓝勇涛
备 注	每单更新				