



What's in the Box? Check to make sure you have everything below.

1. Bluetooth Speaker
2. Strap
3. Quick Start Guide
4. Charging Cable

Get to Know Your Rugged Speaker

1. Power switch
2. Volume down/Previous track
3. Light theme
4. Play/Pause/Mute
5. Bluetooth
6. Volume up/Next track
7. Aux in
8. Output charging port
9. Input charging port

Power

Long press to power on / off the speaker

ON/OFF

Bluetooth® Connection

Activate the Bluetooth function on your device and search Bluetooth devices, then select "onn. Rugged LG GRY" to start connecting.

AAAGRY100006896

6 81131 30995 0

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

Aux Connection

Use a 3.5mm cable (not included) to connect the speaker to another audio source. Press Play on the device and adjust the volume on the unit to obtain the desired volume.

(not included)

Answer calls

Short press to answer the call
Long press to reject the call

< 1s
> 3s x

Party Sync Mode

Power on one speaker and hold Bluetooth button 3 seconds to enter into pairing mode, this device will be the master. The second device will connect automatically to the master when turned on.

After the two speakers are paired together, use your mobile device to pair with the master speaker utilizing the Bluetooth pairing method.

TWS

> 3s

But Wait ... There's More!

The Party Sync Mode also applied to another onn speaker.

Need help?
We're here for you every day
7 a.m. - 9 p.m. CST.
1-888-516-2630
Give us a call!

The Fine Print

USER MANUAL INSERTS FOR FCC ID

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference

The Fine Print

to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
4. Rating Label is located at the bottom of the product.