

970-315LG

CHAMBERLAIN

LiftMaster PROFESSIONAL

Model 970LM Security+ 3-Channel Mini Remote Control

OWNER'S MANUAL

The 90 Series remote control (Security+) works only with door openers and light controls having an orange "Smart" button and a yellow indicator light.

Programming instructions are described and illustrated below. The additional push buttons can also activate other garage door openers and/or light controls. (Instructions for programming light products are included with those accessories.)

Security+ Garage Door Openers

To Program the Opener to Accept the Remote Control Code

Select a remote control push button to operate the opener. The *large* button is recommended for use with a garage door opener.

1. Press and *hold* the selected remote control push button. See Figure 1.
2. Press and release the "Smart" button on the opener panel. See Figure 2. The indicator light on the panel will begin to blink and the opener lights will *flash once*.
3. Release the remote push button.

Now the opener will operate when that remote control button is pressed. Test it by pressing the remote button to see that the door goes up and down.

Model 970LM Security+ 970-315LG

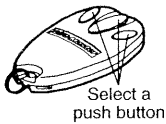 


Figure 1

SECURITY+ Garage Door Opener

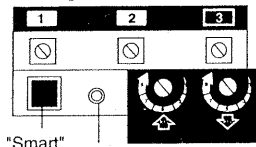 


Figure 2

Adding a remote can also be done from a Multifunction door control, as follows:

1. *With the door closed*, press and hold a remote push button.
2. Press and hold the Light button on the door control.
3. Press and hold the door control push bar.
4. After the opener lights flash, release all buttons.

Test by pressing the remote push button.

To Erase All Remote Control Codes

Press and hold the "Smart" button on the opener panel until the indicator light turns off (about 6 seconds). All transmitter codes are now erased. Then follow the steps above to re-program each remote control.

970-315LG	Replacement Parts	41A5601
Model 970LM Security+ remote case	41A5607
(circuit board not included)		
3V2032 Lithium battery	10A20

! WARNING

Children operating or playing with a garage door opener can injure themselves or others. The garage door could close and cause serious injury or death. Do not allow children to operate the wall push buttons or remote controls.

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

NOTICE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. To comply with FCC/IC rules, adjustment or modification of this receiver and/or transmitter is prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

To Control the Opener Lights

(only if you have a Multifunction door control)

With Security+ transmitters, a remote push button can be programmed to operate the opener lights without opening the door.

1. *With the door closed*, press and hold the remote button that you want to control the light.
2. Press and hold the Light button on the door control.
3. Press and hold the Lock button on the door control.
4. After the opener lights flash, release all buttons.

 
Test by pressing the remote push button. The opener lights should turn on or off but the door should not move.

Open/Close/Stop Operation

(only if you have a Multifunction door control)

Your Security+ remote control can be programmed to operate one door using all 3 buttons: the *left* button will only open the door, the *middle* button will only close the door, and the third button will stop the door's movement. You may set up this feature as follows:

1. *With the door closed*, press and hold the *left* remote push button.
2. Press and hold the Lock button on the door control.
3. Press and hold the door control push bar.

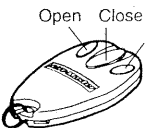


When the opener lights flash, release all buttons. Test by pressing the left (*Open*) button on the remote. The door should open. Press it again while the door is open and nothing should happen. Press the middle (*Close*) button and the door should close. Press the third (*Stop*) button while the door is moving and it should stop immediately.

! WARNING

Keep batteries away from small children. If swallowed, promptly notify doctor.

The Remote Control Battery

 The lithium battery should produce power for up to 5 years. To replace battery, pry open case as shown. Insert battery *positive side up*. Dispose of old battery properly.

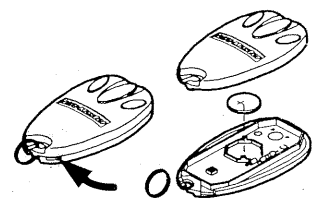

FOR SERVICE DIAL OUR TOLL FREE NUMBER: 1-800-528-2817