

# TYPICAL INSTRUCTIONS

**Lift-Master**  
The Professional Line

## Owner's Manual

Model ~~81LM~~ 1A5260  
Single-Function Remote Control

Model ~~83LM~~ 1A5261  
Multi-Function Remote Control



### WARNING

Children operating or playing with a garage door opener can injure themselves or others. The garage door could close and cause serious injury or death. Do not allow children to operate the wall push button(s) or remote control(s).

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

FCC/DOC rules prohibit adjustments to or modification of receiver and/or transmitter circuitry except for changing the code setting and/or replacing the transmitter battery. THERE ARE NO USER SERVICEABLE PARTS.

The 80 Series remote control (with green battery test light) works only with door openers and light controls having a green "SMART" button and a green indicator light.

Programming instructions are described and illustrated below. The additional push buttons on the Multi-Function Remote Control can also activate other garage door openers and/or light controls. (Instructions for programming light products are included with those accessories.)

### "SMART" GARAGE DOOR OPENERS (With Green "SMART" Button and Green Indicator Light)

#### PROGRAM THE OPENER TO ACCEPT THE REMOTE CONTROL CODE

Select a remote control push button to operate the opener. The *large* button is recommended for use with a garage door opener.

1. Press and *hold* the selected remote control push button (Figure 1).
2. Then press and release the green "SMART" button on the opener panel (Figure 2). The opener light will *flash once*. Release the remote control push button.

Now the opener will operate when the remote push button is pressed.

**NOTE:** If you release the remote control push button before the opener light flashes, the receiver has not accepted the code.



#### To Erase All Transmitter Codes

- Press and hold the "SMART" button on the opener panel until the indicator light turns off (about 6 seconds). **ALL the codes the opener has learned will be erased.**
- To reprogram, repeat Steps 1 and 2 for each remote control in use. **Code programming instructions are also located on the opener panel.**

Figure 1

Model 81LM


Model 83LM

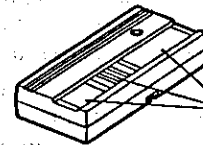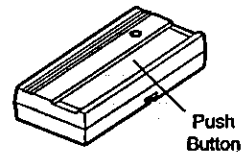

Select a remote control push button to operate opener

Figure 2

#### Garage Door Opener (With Green "SMART" Button)

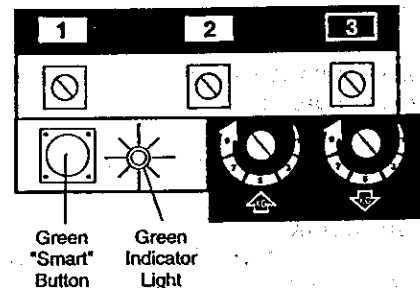

#### Replacement Parts

Single-Function remote case, cover, screw (circuit board not included)	Model 81LM	41A3984-7	Multi-Function remote case, cover, screw (circuit board not included)	Model 83LM	41A3888-7
12 Volt battery		10A14	12 Volt battery		10A14

FOR SERVICE DIAL OUR TOLL FREE NUMBER: 1-800-528-9131