

## AP51DA Firmware upgrade procedure

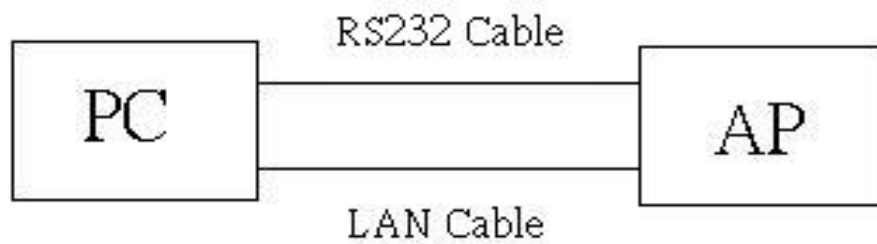


Fig.1

1. According to above Fig. 1, please set IP:192.168.1.100 of the PC.
2. Install "EraseAll\_noChkPid\_209" to PC



EraseAll\_noChkPid\_209.exe

3. Run "EraseAll Utility" in the PC



4. Select Browse -> Download in the PC




5. from Devices List in the PC to select AP ( EUT)

→File→ select the




AP51DA\_V10C2.zip Upgrade

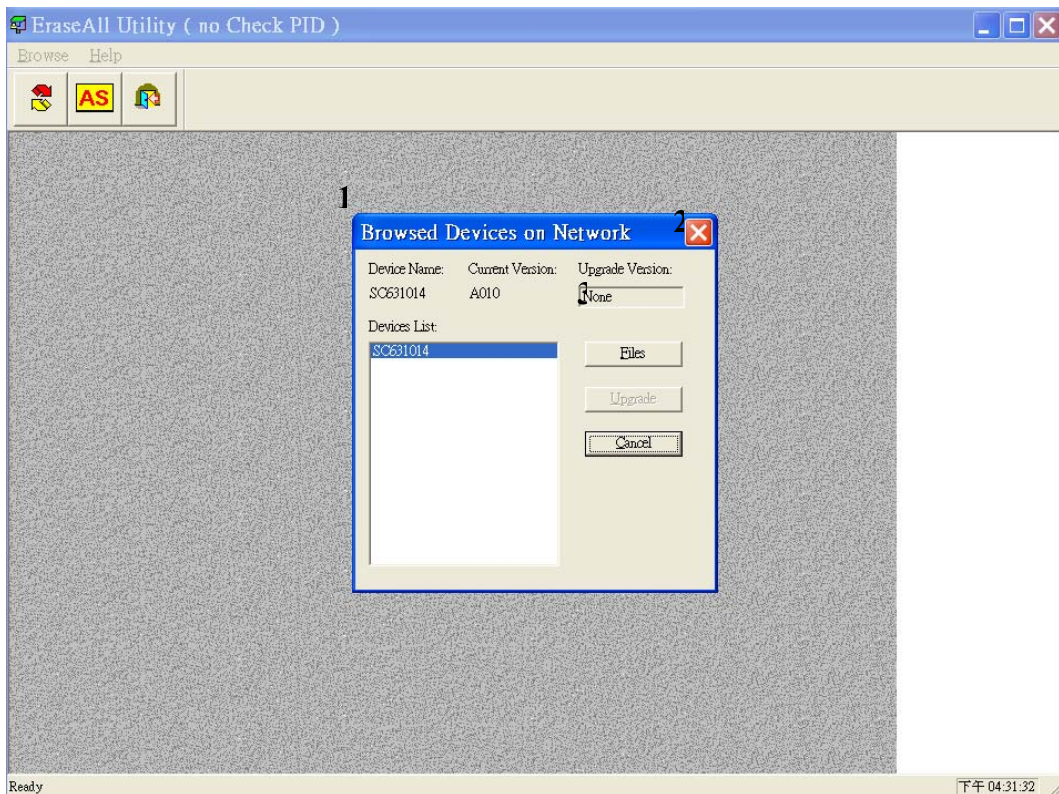




## 6. HyperTerminal

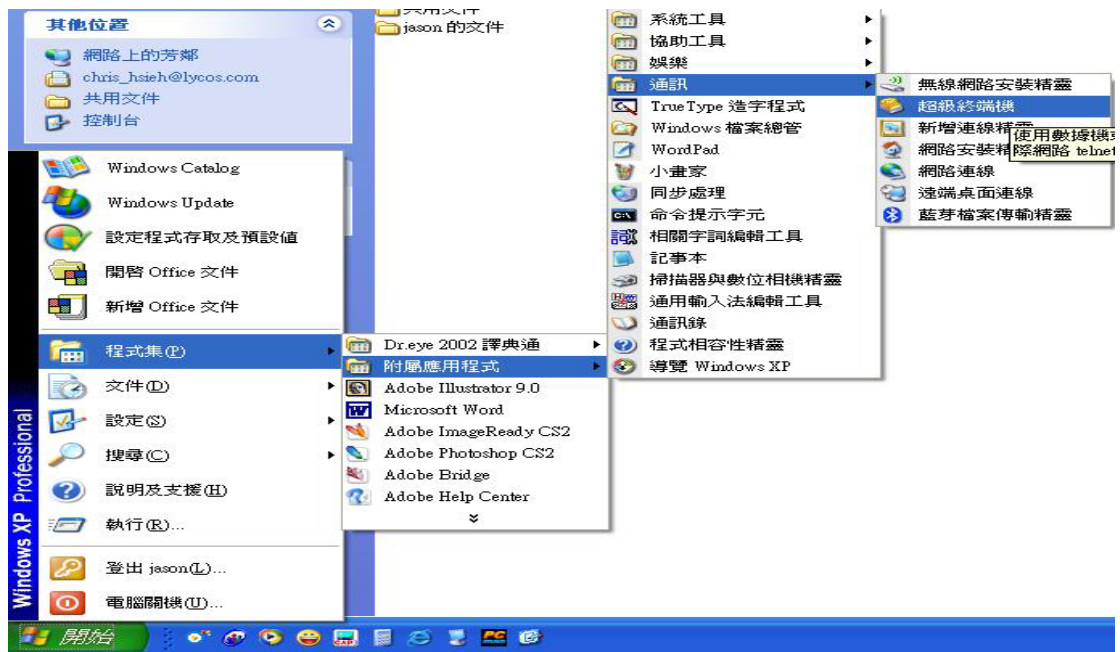


Use HyperTerminal


(start -> Programs -> Accessories -> Communications -> HyperTerminal)

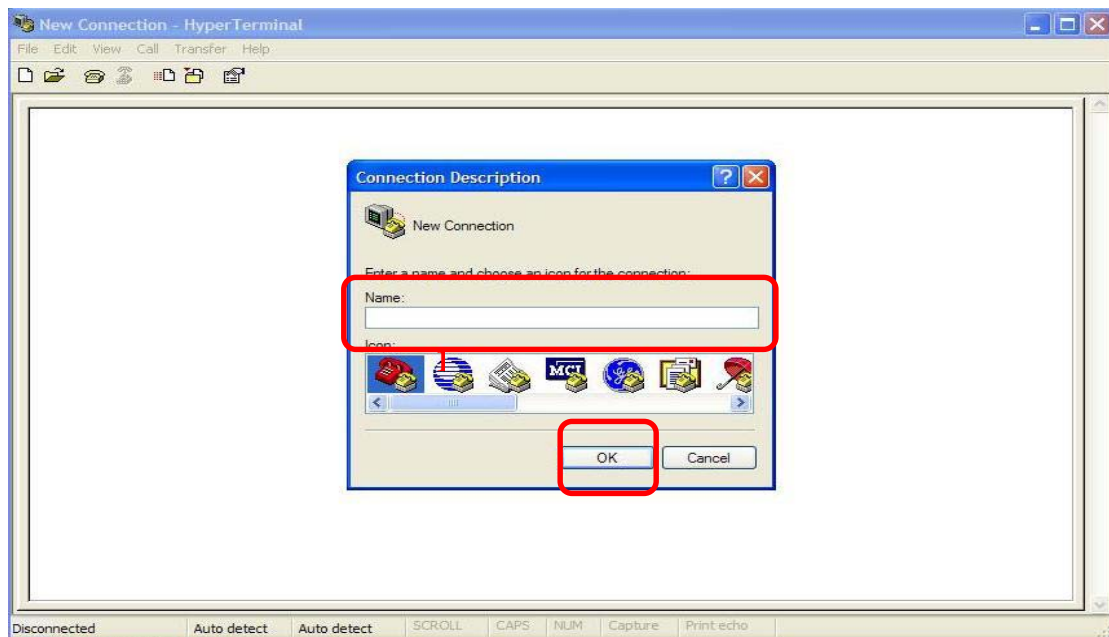

Keyin any name then press ok.

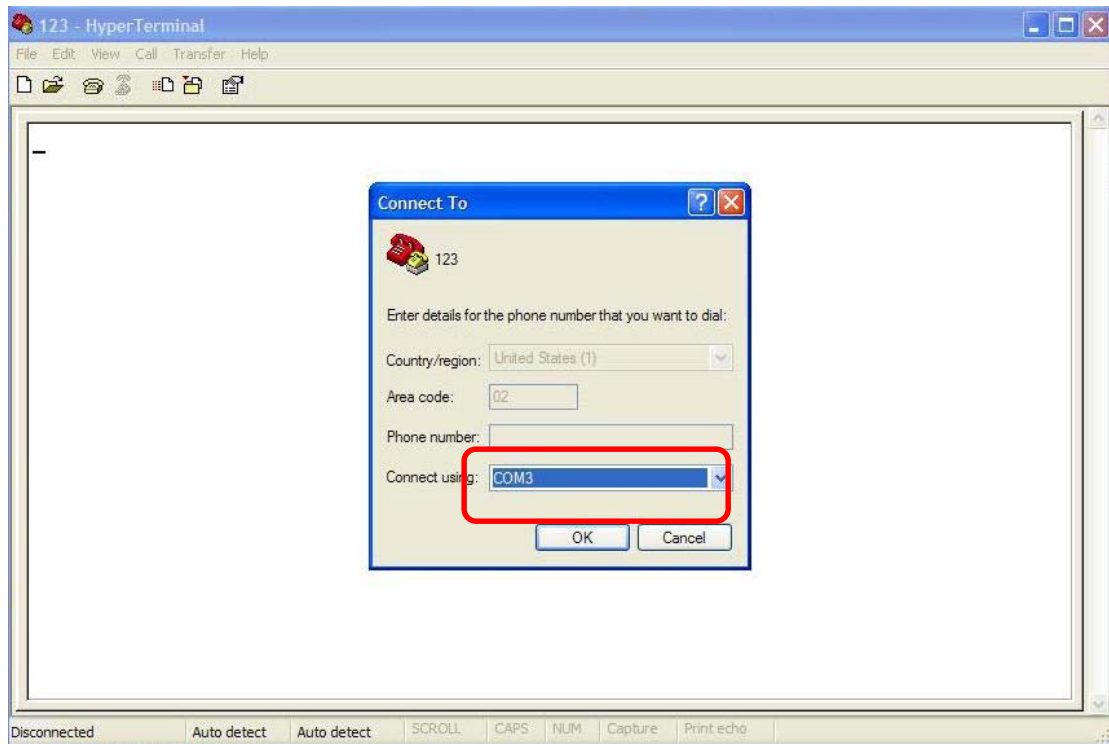

Choice connect using.

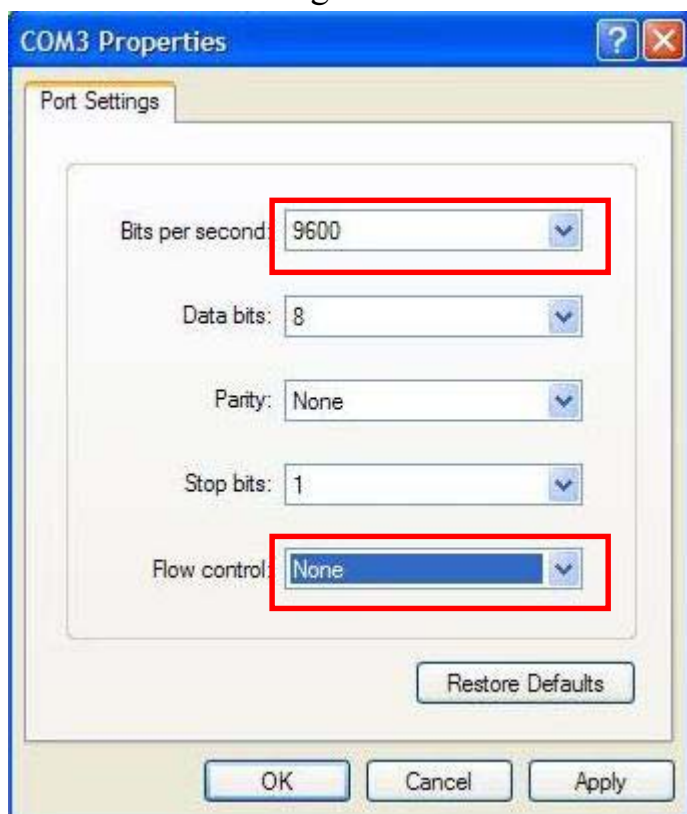


set com properties

Bits per second      **9600**

Flow control      **None**

6. please don't; power off immediately , please check the console status from the monitor to confirm the EUT is re-start completed, and then remove the power adapter, it be taken about 3 mins.

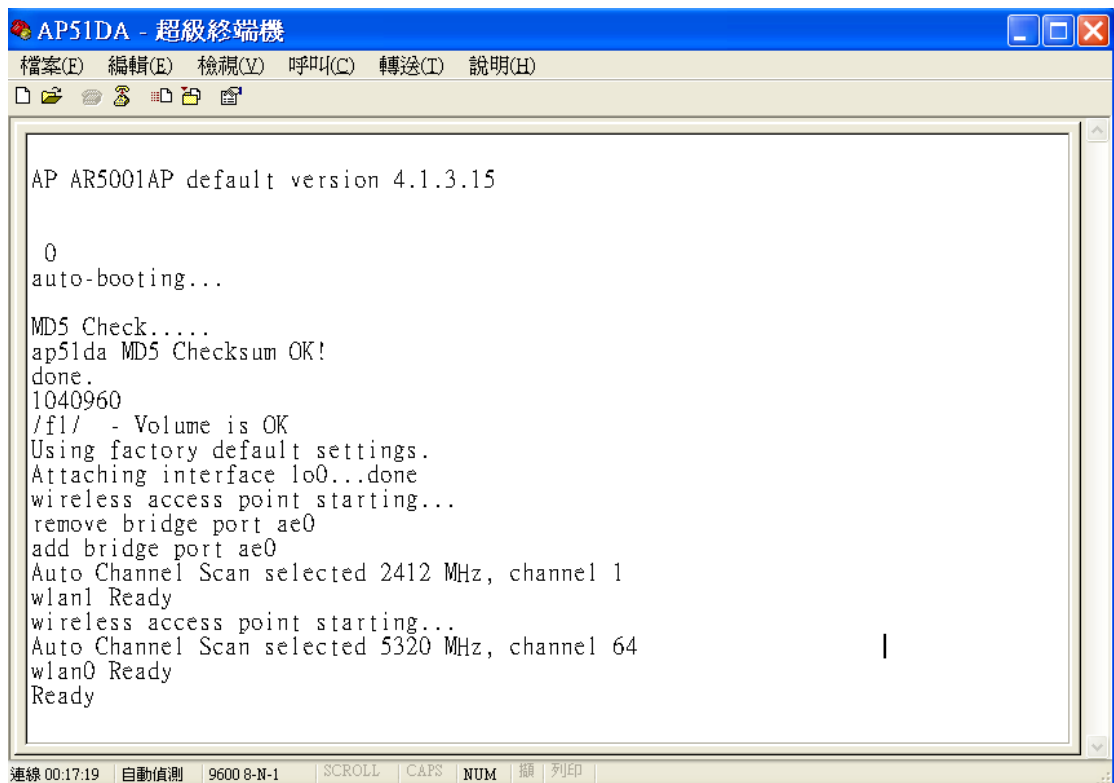

```
AP AR5001AP default version 4.1.3.15

0
auto-booting...

MD5 Check.....
ap51da MD5 Checksum OK!
done.
1040960
/f1/ - Volume is OK
Using factory default settings.
Attaching interface lo0...done
wireless access point starting...
remove bridge port ae0
add bridge port ae0
Auto Channel Scan selected 2412 MHz, channel 1
wlan1 Ready
wireless access point starting...
Auto Channel Scan selected 5320 MHz, channel 64
wlan0 Ready
Ready
```

連線 00:17:19 自動偵測 9600 8-N-1 SCROLL CAPS NUM 顯示 列印