



NetVanta 1000 Series and NetVanta 1000R Series Hardware Installation Guide

1200500E1/L1	NetVanta 1224
1200504E1/L1	NetVanta 1224ST
1200510L1	NetVanta 1224STR (AC)
1200520E1/L1	NetVanta 1224R
1200530L1	NetVanta 1224R PoE
1200560E2/L2	NetVanta 1524ST
1200570L1	NetVanta 1224STR PoE
1200580L1	NetVanta 1224 PoE
1200584L1	NetVanta 1224ST PoE
1200590L1	NetVanta 1224STR (DC)
1700515E2	NetVanta 1335
1700515E12	NetVanta 1335 WiFi
1700525E2	NetVanta 1335 PoE
1700525E12	NetVanta 1335 WiFi PoE
4200368L1	Enhanced Feature Pack (Hardware and Software) for IPSec VPN Upgrade for NetVanta 1224STR (AC/DC), 1224R, 1224R PoE, and 1224STR PoE
1200861L1	NetVanta 56K/64K Network Interface Module
1200862L2#NEBS	NetVanta T1/FT1 NEBS Network Interface Module
1202862L1	NetVanta T1/FT1 Network Interface Module
1202863L1	NetVanta T1/FT1 + DSX-1 Network Interface Module
1200872L1	NetVanta Dual T1 Network Interface Module
1200868E1/L1	NetVanta E1/FE1 Network Interface Module
1200878E1/L1	NetVanta E1/FE1 + G.703 Drop Network Interface Module
1200866E1/L1	NetVanta Serial Network Interface Module
1200867L1	NetVanta SHDSL Network Interface Module
1200869E1/L1	NetVanta ADSL Network Interface Module, Annex A
1200889E1/L1	NetVanta ADSL Network Interface Module, Annex B
1200864L1	NetVanta Analog Modem Dial Backup Interface Module
1200865L1	NetVanta ISDN BRI Dial Backup Interface Module
1200875L1	NetVanta ISDN S/T Dial Backup Interface Module
1200886L1	NetVanta Serial Dial Backup Interface Module
1200480L1	1000BaseSX Multi-Mode SFP Module
1200481L1	1000BaseLX Single-Mode SFP Module
1200816E1, 817E1, 818E1, 819E1	CompactFlash®, 128, 256, 512, and 1024 MB, respectively (NetVanta 1335 only)

Trademarks

Any brand names and product names included in this manual are trademarks, registered trademarks, or trade names of their respective holders.

To the Holder of the Manual

The contents of this manual are current as of the date of publication. ADTRAN reserves the right to change the contents without prior notice.

In no event will ADTRAN be liable for any special, incidental, or consequential damages or for commercial losses even if ADTRAN has been advised thereof as a result of issue of this publication.

Software Licensing Agreement

Each ADTRAN product contains a single license for ADTRAN supplied software. Pursuant to the Licensing Agreement, you may: (a) use the software on the purchased ADTRAN device only and (b) keep a copy of the software for backup purposes. This Agreement covers all software installed on the system as well as any software available on the ADTRAN website. In addition, certain ADTRAN systems may contain additional conditions for obtaining software upgrades.



Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



901 Explorer Boulevard
P.O. Box 140000
Huntsville, AL 35814-4000
Phone: (256) 963-8000

Copyright © 2007 ADTRAN, Inc.
All Rights Reserved.
Printed in U.S.A.

Conventions

**NOTE**

Notes provide additional useful information.

**CAUTION**

Cautions signify information that could prevent service interruption or damage to the equipment.

WARNING

Warnings provide information that could prevent injury or endangerment to human life.

Safety Instructions

When using your telephone equipment, please follow these basic safety precautions to reduce the risk of fire, electrical shock, or personal injury:

1. Do not use this product near water, such as a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
2. Avoid using a telephone (other than a cordless-type) during an electrical storm. There is a remote risk of shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord, power supply, and/or batteries indicated in the manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for special disposal instructions.
5. The socket-outlet shall be installed near the equipment and shall be easily accessible.



This equipment incorporates double pole/neutral fusing. If the neutral fuse opens and the line fuse does not open, voltage could still be present in the unit.



Additional safety guidelines, such as Waste Electrical And Electronic Equipment (WEEE) are given in the NetVanta Safety and Regulatory Information document on the ADTRAN OS System Documentation CD .

Save These Important Safety Instructions

FCC-Required Information

FCC regulations require that the following information be provided in this manual:

1. This equipment complies with Part 68 of FCC rules and requirements adopted by ACTA. Each registered interface has a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, provide this information to the telephone company.
2. If this equipment causes harm to the telephone network, the telephone company may temporarily discontinue service. If possible, advance notification is given; otherwise, notification is given as soon as possible. The telephone company will advise the customer of the right to file a complaint with the FCC.
3. The telephone company may make changes in its facilities, equipment, operations, or procedures that could effect the proper operation of this equipment. Advance notification and the opportunity to maintain uninterrupted service are given.
4. If experiencing difficulty with this equipment, please contact ADTRAN for repair and warranty information. The telephone company may require this equipment to be disconnected from the network until the problem is corrected or it is certain the equipment is not malfunctioning.
5. This unit contains no user-serviceable parts.
6. This equipment is designed to connect to the telephone network or premises wiring using an FCC-compatible modular jack, which is compliant with Part 68 and requirements adopted by ACTA.
7. The following information may be required when applying to the local telephone company for leased line facilities:

Part Number	Registration Number	Service Type	REN/SOC	FIC	USOC
1200861L1	US:HDCDENAN1200861L1	56 Kbps Digital Interface 64 Kbps Digital Interface	6.0F	04DU5-56 04DU5-64	RJ-48S
1202862L1	US: HDCDENAN1202863L1	1.544 Mbps - SF	6.0N	04DU9-BN	RJ-48C
1202863L1		1.544 Mbps - SF and B8ZS		04DU9-DN	
1200872L1	US: HDCDENAN1200872L1	1.544 Mbps - ESF 1.544 Mbps - ESF and B8ZS		04DU9-1KN 04DU9-1SN	
1200864L1	US: HDCMM04A1200864L1	Analog Loop Start	0.4A/9.0Y	02LS2	RJ-11C
1200865L1	US: HDCDENAN1200865L1	Basic Rate ISDN	6.0F	02LS5	RJ-49C
1200869E1	US: HDCDL01A1200869L1	ADSL Modem	0.1A	Metallic	RJ-11C

8. The REN is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most areas, the sum of the RENs of all devices should not exceed five. To be certain of the number of devices you may connect to your line as determined by the REN, call your telephone company to determine the maximum REN for your calling area.
9. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Contact your state public utility commission or corporation commission for information.

FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio frequencies. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Electromagnetic Compatibility (EMC) Table

NetVanta Module P/N and Name	NetVanta 1224STR (AC) / 1224R	NetVanta 1224STR (DC)	NetVanta 1335
1200861L1 56K/64K NIM	FCC Part 15, Class A EN 55022 Class A	N/A	FCC Part 15, Class A EN 55022 Class A
1200862L2#NEBS T1/FT1 NEBS NIM	N/A	FCC Part 15, Class A, EN 55022 Class A GR-1089-CORE, Sections 2 and 3	N/A
1202862L1 T1/FT1 NIM 1202863L1 T1/FT1 + DSX-1 NIM 1200872L1 Dual T1 NIM	FCC Part 15, Class A EN 55022 Class A	N/A	FCC Part 15, Class A EN 55022 Class A
1200868E1/L1 E1/FE1 NIM 1200878E1/L1 E1/FE1 + G.703 Drop	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3	N/A	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3
1200866E1/L1 Serial NIM	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3	N/A	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3
1200867L1 SHDSL NIM	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3	N/A	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3
1200869E1 ADSL NIM, Annex A 1200889E1 ADSL NIM, Annex B	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3	N/A	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3
1200864L1 Analog Modem DIM 1200865L1 ISDN BRI DIM 1200875L1 ISDN S/T DIM 1200886L1 Serial DIM	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3	N/A	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3
1202368L1 VPN Accelerator Card (included in P/N 4200368L1)	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3	N/A	FCC Part 15, Class A EN 55022 Class A EN 55024 EN 61000-3-2 EN 61000-3-3

Wireless Radio Channel Ranges

The following table lists by country the channels support by the ADTRAN WiFi products (NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE only).

Country	802.11a (5 GHz) Wireless Radios Channels	802.11bg (2.4 GHz) Wireless Radios Channels
Asia	149, 153, 157, 161	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Australia	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Canada	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11
Denmark	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Europe	34, 38, 42, 46	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Finland	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
France	34, 38, 42, 46	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Germany	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Ireland	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Italy	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Japan	34, 38, 42, 46	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Mexico	36, 40, 44, 48, 149, 153, 157, 161, 165	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11
Netherlands	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
New Zealand	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Norway	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Puerto Rico	36, 40, 44, 48, 149, 153, 157, 161, 165	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11
South America	802.11a not supported	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Spain	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Sweden	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
Switzerland	34, 38, 42, 46	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
United Kingdom	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
United States	36, 40, 44, 48, 149, 153, 157, 161, 165	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11

Industry Canada Compliance Information

Notice: The Industry Canada label applied to the product (identified by the Industry Canada logo or the “IC:” in front of the certification/registration number) signifies that the Industry Canada technical specifications were met.

Notice: The Ringer Equivalence Number (REN) for this terminal equipment is supplied in the documentation or on the product labeling/markings. The REN assigned to each terminal device indicates the maximum number of terminals that can be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices should not exceed five (5).

Canadian Emissions Requirements

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled “Digital Apparatus,” ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Class A prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques,” NMB-003 édictée par le ministre des Communications.

Service and Warranty

For information on the service and warranty of ADTRAN products, visit the ADTRAN website at <http://www.adtran.com/support>.

Table of Contents

Introduction	15
Power over Ethernet	15
Wireless Access	15
SFP Module Slots	15
Physical Descriptions	16
NetVanta 1224	16
NetVanta 1224ST	18
NetVanta 1224R	20
NetVanta 1224STR	23
NetVanta 1335	26
NetVanta 1524ST	29
Product Specifications	33
Option Modules	34
Network Interface Modules	35
Dial Backup Interface Modules	46
Unit Installation	50
Tools Required	50
Mounting Options	51
Supplying Power to the Unit	53
Installing Dial Backup and Network Interface Modules	54
Installing the NetVanta VPN Accelerator Card (included in P/N 4200368L1)	57
Installing a CompactFlash Card (NetVanta 1335 Series only)	58
Installing Wireless Access Antennas (NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE only)	59
Appendix A. Connector Pin Definitions.	61

List of Figures

Figure 1.	NetVanta 1224 Front Panel Layout	17
Figure 2.	NetVanta 1224 PoE Front Panel Layout	17
Figure 3.	NetVanta 1224 and NetVanta 1224 PoE Rear Panel Layout	17
Figure 4.	NetVanta 1224ST Front Panel Layout	19
Figure 5.	NetVanta 1224ST PoE Front Panel Layout	19
Figure 6.	NetVanta 1224ST and NetVanta 1224ST PoE Rear Panel Layout	19
Figure 7.	NetVanta 1224R Front Panel Layout	22
Figure 8.	NetVanta 1224R PoE Front Panel Layout	22
Figure 9.	NetVanta 1224R and NetVanta 1224R PoE Rear Panel Layout	22
Figure 10.	NetVanta 1224STR Front Panel Layout	25
Figure 11.	NetVanta 1224STR PoE Front Panel Layout	25
Figure 12.	NetVanta 1224STR (AC) and NetVanta 1224STR PoE Rear Panel Layout	25
Figure 13.	NetVanta 1224STR (DC) Rear Panel Layout	25
Figure 14.	NetVanta 1335 Front Panel Layout	28
Figure 15.	NetVanta 1335 PoE Front Panel Layout	28
Figure 16.	NetVanta 1335 WiFi Front Panel Layout	28
Figure 17.	NetVanta 1335 WiFi PoE Front Panel Layout	28
Figure 18.	NetVanta 1335 and NetVanta 1335 PoE Rear Panel Layout	28
Figure 19.	NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE Rear Panel Layout	28
Figure 20.	NetVanta 1524ST Front Panel Layout	30
Figure 21.	NetVanta 1524ST Rear Panel Layout	31
Figure 22.	NetVanta 56K/64K NIM	35
Figure 23.	NetVanta T1/FT1 NIM	36
Figure 24.	NetVanta T1/FT1 NEBS NIM	37
Figure 25.	NetVanta T1/FT1 + DSX-1 NIM	38
Figure 26.	NetVanta Dual T1 NIM	39
Figure 27.	NetVanta E1/FE1 NIM	40
Figure 28.	NetVanta E1/FE1 + G.703 Drop NIM	41
Figure 29.	NetVanta Serial NIM	42
Figure 30.	NetVanta SHDSL NIM	43
Figure 31.	NetVanta ADSL NIM, Annex A	44
Figure 32.	NetVanta ADSL NIM, Annex B	45
Figure 33.	Wallmount Installation	52
Figure 34.	Grounding the NetVanta 1224STR (DC)	54
Figure 35.	Installing DIMs	55
Figure 36.	NIM and DIM Installation	56
Figure 37.	NetVanta VPN Card Installation	57
Figure 38.	CompactFlash Card Installation	58

List of Tables

Table 1.	Front Panel LED Descriptions	32
Table A-1.	CONSOLE Port Pinouts	61
Table A-2.	SFP Slot Pinouts	61
Table A-3.	10/100BaseT Ethernet Port Pinouts.	62
Table A-4.	1000BaseT Gigabit-Ethernet Port Pinouts	62
Table A-5.	WAN-DDS Connector Pinouts	63
Table A-6.	WAN-T1 Connector Pinouts	63
Table A-7.	WAN-E1 Connector Pinouts.	63
Table A-8.	DSX-1 Connector Pinouts	64
Table A-9.	G.703 Connector Pinouts.	64
Table A-10.	WAN-SHDSL Connector Pinouts	64
Table A-11.	WAN-ADSL Connector Pinouts	64
Table A-12.	Serial to Cable Connector Pinouts	65
Table A-13.	Analog Station (FXS) and Analog Trunk (FXO) Port Pinouts.	65
Table A-14.	Analog Modem and ISDN BRI DBU Connector Pinouts	66
Table A-15.	ISDN S/T DBU Connector Pinouts.	66
Table A-16.	Serial DBU Connector Pinouts.	66

1. INTRODUCTION

The NetVanta 1000 Series includes the NetVanta 1224, NetVanta 1224 PoE, NetVanta 1224ST, NetVanta 1224ST PoE, NetVanta 1335, NetVanta 1335 PoE, NetVanta 1335 WiFi, NetVanta 1335 WiFi PoE, and the NetVanta 1524ST. The NetVanta 1000R Series includes the NetVanta 1224R, NetVanta 1224R PoE, NetVanta 1224STR (AC), NetVanta 1224STR (DC), and NetVanta 1224STR PoE.

This hardware installation guide lists the NetVanta 1000 and 1000R Series units' specifications, describes the physical characteristics of the units, introduces basic functionality, and provides installation instructions. All NetVanta 1000 and 1000R Series units run the ADTRAN Operating System (AOS) and are managed through an EIA-232 **CONSOLE** port (DB-9) located on the rear panel.

Power over Ethernet

The NetVanta 1000 and 1000R Series Power over Ethernet (PoE) devices provide the same basic functionality as the NetVanta 1000 Series products. Power over Ethernet provides the ability to detect attached powered devices (PD) and deliver 48 VDC to the PD via existing CAT5 cabling. The PoE devices are fully compliant with the IEEE 802.3af power over Ethernet standard. By default, the PoE switches discover and provide power to IEEE-compliant PDs.

Wireless Access

The NetVanta 1335 Wireless Fidelity (WiFi) Series provides a single access point for connection with IEEE 802.11a/b/g wireless networks. A dual radio design with two dual-band external antennas is used to support concurrent 802.11a and 802.11b/g connections.

SFP Module Slots

The NetVanta 1224ST, NetVanta 1224STR PoE, NetVanta 1335, and NetVanta 1335 PoE support two SFP slots; the NetVanta 1224STR, NetVanta 1335 WiFi, and NetVanta 1335 WiFi PoE have one; and the NetVanta 1524ST has four. All accept a number of industry-standard SFP modules. The SFP modules provide Gigabit Ethernet connectivity over fiber for high-speed uplinks or switch stacking. The following modules are available for purchase (both of these modules require fiber optic cable with LC connectors):

- 1200480L1 1000BaseSX Multi-Mode SFP Module
- 1200481L1 1000BaseLX Single-Mode SFP Module



In this document, the term “NetVanta” means all NetVanta 1000 and NetVanta 1000R Series products. If a statement only applies to one particular unit, the text refers to the unit individually. Additionally, unless otherwise specified, descriptions for a NetVanta 1000 or 1000R Series device also applies to the Power over Ethernet (PoE) and WiFi versions of that device.

2. PHYSICAL DESCRIPTIONS

NetVanta 1224

The NetVanta 1224 is a managed switch housed in a 1U-high rack-mountable metal enclosure that includes a universal AC power supply. The front panel contains 24 10/100BaseT Ethernet interfaces (RJ-45). The NetVanta 1224 PoE version provides the ability to detect attached powered devices (PDs) and deliver 48 VDC to the PDs via existing CAT5 cabling.

This section includes a list of features, a list of shipping contents, and a description of the unit's front and rear panel designs. For additional information, refer to the following sections:

- *Product Specifications* on page 33
- *Mounting Options* on page 51
- *Supplying Power to the Unit* on page 53

For information on switch configuration for a specific application, refer to the quick configuration documents provided on the *ADTRAN OS System Documentation* CD shipped with your base unit. For details on the command line interface, refer to the *Command Reference Guide* (also included on your CD).

NetVanta 1224 Shipping Contents

Each NetVanta 1224 unit is shipped in its own cardboard shipping carton. Open each carton carefully, and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer Service (refer to the *Repair and Replacement* section of the *Support* page on the ADTRAN website at <http://www.adtran.com/support>).

Domestic shipments of the NetVanta 1224 include the following items:

- NetVanta 1224 base unit
- *ADTRAN OS System Documentation* CD
- A detachable power cable with a grounded, three-prong plug
- *Quick Start Guide*
- Warranty card

International shipments of the NetVanta 1224 include the following items:

- NetVanta 1224 base unit
- *ADTRAN OS System Documentation* CD
- All necessary power cords
- *Quick Start Guide*
- Warranty card

NetVanta 1224 Front Panel Design

The NetVanta 1224 and NetVanta 1224 PoE front panels are shown below. *Table 1* on page 32 describes all of the LEDs, and *Appendix A* on page 61 shows the pinouts for the connectors.

NetVanta 1224 Front Panel Features

10/100BaseT Ethernet Interfaces

The NetVanta 1224s contain 24 10/100BaseT Ethernet interfaces (RJ-45). These interfaces are consecutively numbered 1 through 24, from left to right, with the numbers screened directly above each port. Status LEDs for each of these interfaces are located directly over these numbers.

The NetVanta 1224 PoE also has green and red PoE status LEDs located in the upper left and upper right corners (respectively) of each Ethernet connector.

Status LED

The **STAT** LED, which indicates the unit’s status, is located to the lower left of RJ-45 port 1.

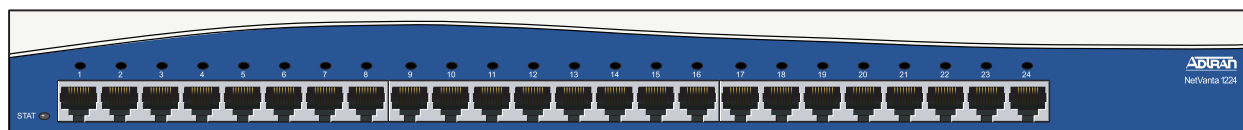


Figure 1. NetVanta 1224 Front Panel Layout

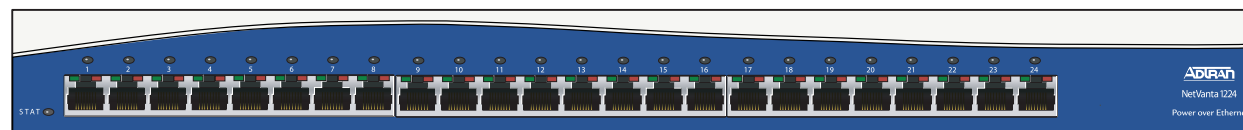


Figure 2. NetVanta 1224 PoE Front Panel Layout

NetVanta 1224 Rear Panel Design

The NetVanta 1224 and NetVanta 1224 PoE rear panel is shown below. Refer to *Appendix A* on page 61 for pinouts.



Figure 3. NetVanta 1224 and NetVanta 1224 PoE Rear Panel Layout

NetVanta 1224 Rear Panel Interfaces

CONSOLE Interface

The **CONSOLE** interface is an EIA-232 serial port (DCE) which provides for local management and configuration (via a DB-9 female connector).

NOTE *Connection directly to an external modem requires a cross-over cable.*

Power Connection

The rear panel has a power input to the AC universal power supply. Please refer to *Supplying Power to the Unit* on page 53 for connection details.

NetVanta 1224ST

The NetVanta 1224ST and NetVanta 1224ST PoE are managed switches housed in a 1U-high rack-mountable metal enclosure that includes a universal AC power supply. The front panel contains 24 10/100BaseT Ethernet interfaces (RJ-45). The NetVanta 1224ST front panel contains two Gigabit Ethernet interfaces that provide two fixed RJ-45 connectors and two standard small form-factor pluggable (SFP) slots for connectivity over fiber. The NetVanta 1224ST PoE version provides the ability to detect attached powered devices (PDs) and deliver 48 VDC to the PDs via existing CAT5 cabling.

This section includes a list of features, a list of shipping contents, and a description of the unit's front and rear panel designs. For additional information, refer to the following sections:

- *Product Specifications* on page 33
- *Mounting Options* on page 51
- *Supplying Power to the Unit* on page 53

For information on switch configuration for a specific application, refer to the quick configuration documents provided on the *ADTRAN OS System Documentation* CD shipped with your base unit. For details on the command line interface, refer to the *Command Reference Guide* (also included on your CD).

NetVanta 1224ST Shipping Contents

Each NetVanta 1224ST unit is shipped in its own cardboard shipping carton. Open each carton carefully, and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer Service (refer to the *Repair and Replacement* section of the *Support* page on the ADTRAN website at <http://www.adtran.com/support>).

Domestic shipments of the NetVanta 1224ST include the following items:

- NetVanta 1224ST base unit
- *ADTRAN OS System Documentation* CD
- A detachable power cable with a grounded, three-prong plug
- *Quick Start Guide*
- Warranty card

International shipments of the NetVanta 1224ST include the following items:

- NetVanta 1224ST base unit
- *ADTRAN OS System Documentation* CD
- All necessary power cords
- *Quick Start Guide*
- Warranty card

NetVanta 1224ST Front Panel Design

The NetVanta 1224ST and the NetVanta 1224ST PoE front panels are shown below. *Table 1* on page 32 describes all of these LEDs, and *Appendix A* on page 61 shows the pinouts for the connectors.

NetVanta 1224ST Front Panel Features

10/100BaseT Ethernet Interfaces

The NetVanta 1224STs contain 24 10/100BaseT Ethernet interfaces (RJ-45). These interfaces are consecutively numbered 1 through 24, from left to right, with the numbers screened directly above each port. Status LEDs for each of these interfaces are located directly over these numbers.

The NetVanta 1224ST PoE also has green and red PoE status LEDs located in the upper left and upper right corners (respectively) of each Ethernet connector.

Gigabit Ethernet Interfaces/SFP Slots

The NetVanta 1224STs also contain two Gigabit Ethernet interfaces that provide two fixed RJ-45 connectors and two standard small form-factor pluggable (SFP) slots for connectivity over fiber. (Use either the RJ-45 connectors *or* the SFP slots. The fiber slots have precedence.) These interfaces are labeled **G1** and **G2**, and their status LEDs (also labeled **G1** and **G2**) are located to the left of RJ-45 port 1, above the **STAT** LED.

Status LED

The **STAT** LED, which indicates the unit’s status, is located to the lower left of RJ-45 port 1.

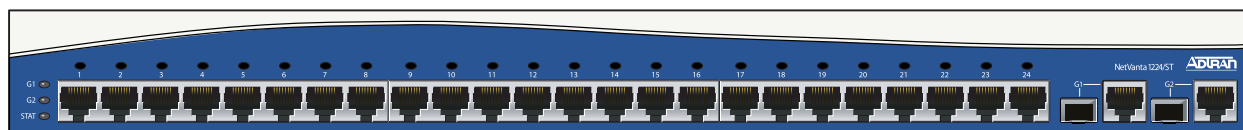


Figure 4. NetVanta 1224ST Front Panel Layout

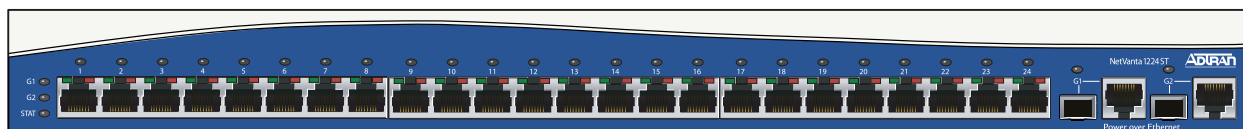


Figure 5. NetVanta 1224ST PoE Front Panel Layout

NetVanta 1224ST Rear Panel Design

The NetVanta 1224ST and NetVanta 1224ST PoE rear panel is shown below. Refer to *Appendix A* on page 61 for pinouts.



Figure 6. NetVanta 1224ST and NetVanta 1224ST PoE Rear Panel Layout

NetVanta 1224ST Rear Panel Interfaces

CONSOLE Interface

The **CONSOLE** interface is an EIA-232 serial port (DCE) which provides for local management and configuration (via a DB-9 female connector).



Connection directly to an external modem requires a cross-over cable.

Power Connection

The rear panel has a power input to the AC universal power supply. Please refer to *Supplying Power to the Unit* on page 53 for connection details.

NetVanta 1224R

The NetVanta 1224R and NetVanta 1224R PoE are managed switches housed in a 1U-high rack-mountable metal enclosure that includes a universal AC power supply. The front panel contains 24 10/100BaseT Ethernet interfaces (RJ-45). The NetVanta 1224R PoE version provides the ability to detect attached powered devices (PDs) and deliver 48 VDC to the PDs via existing CAT5 cabling. Both units contain a single Network Interface Module (NIM) slot on the rear panel to support the following modules:

- 1200861L1 56K/64K NIM
- 1202862L1 T1/FT1 NIM
- 1202863L1 T1/FT1 + DSX-1 NIM
- 1200872L1 Dual T1 NIM
- 1200868E1/L1 E1/FE1 NIM
- 1200878E1/L1 E1/FE1 + G.703 Drop NIM
- 1200866E1/L1 Serial Interface Module
- 1200867L1 SHDSL NIM
- 1200869E1/L1 ADSL NIM, Annex A
- 1200889E1/L1 ADSL NIM, Annex B
- 1200864L1 Analog Modem DIM
- 1200865L1 ISDN BRI DIM
- 1200875L1 ISDN S/T DIM
- 1200886L1 Serial DIM

This section includes a list of features, a list of shipping contents, and a description of the unit's front and rear panel designs. For additional information, refer to the following sections:

- *Product Specifications* on page 33
- *Mounting Options* on page 51
- *Supplying Power to the Unit* on page 53

For information on router configuration for a specific application, refer to the quick configuration documents provided on the *ADTRAN OS System Documentation* CD shipped with your base unit. For details on the command line interface, refer to the *Command Reference Guide* (also included on your CD).

NetVanta 1224R Shipping Contents

Each NetVanta 1224R and NetVanta 1224R PoE unit is shipped in its own cardboard shipping carton. Open each carton carefully, and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer Service (refer to the *Repair and Replacement* section of the *Support* page on the ADTRAN website at <http://www.adtran.com/support>).

Domestic shipments of the NetVanta 1224R include the following items:

- NetVanta 1224ST base unit
- *ADTRAN OS System Documentation CD*
- A detachable power cable with a grounded, three-prong plug
- *Quick Start Guide*
- Warranty card

International shipments of the NetVanta 1224R include the following items:

- NetVanta 1224ST base unit
- *ADTRAN OS System Documentation CD*
- All necessary power cords
- *Quick Start Guide*
- Warranty card

NetVanta 1224R Front Panel Design

The NetVanta 1224R and the NetVanta 1224R PoE front panels are shown below. *Table 1* on page 32 describes all of these LEDs, and *Appendix A* on page 61 shows the pinouts for the connectors.

NetVanta 1224ST Front Panel Features

10/100BaseT Ethernet Interfaces

The NetVanta 1224R and the NetVanta 1224R PoE contain 24 10/100BaseT Ethernet interfaces (RJ-45). These interfaces are consecutively numbered 1 through 24, from left to right, with the numbers screened directly above each port. Status LEDs for each of these interfaces are located directly over these numbers.

The NetVanta 1224R PoE also has green and red PoE status LEDs located in the upper left and upper right corners (respectively) of each of the Ethernet connectors.

Status LEDs

The status LEDs are located to the lower left of RJ-45 port 1. The **WAN** LED reflects the status of an installed NIM. The **DBU** LED reflects the status of an installed DIM. The **STAT** LED indicates the unit's status.

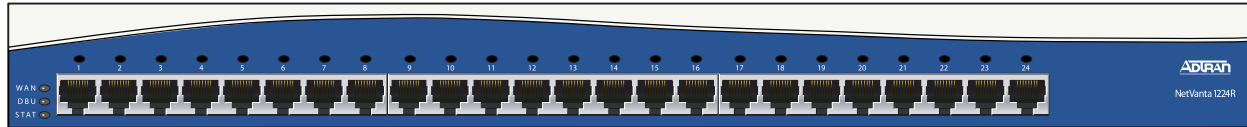


Figure 7. NetVanta 1224R Front Panel Layout

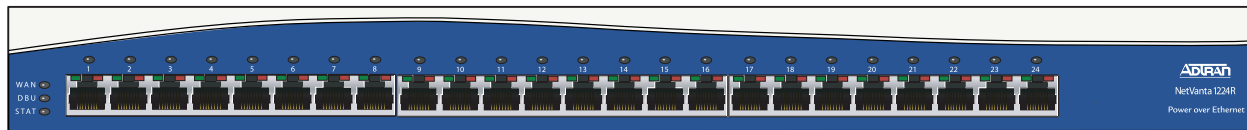


Figure 8. NetVanta 1224R PoE Front Panel Layout

NetVanta 1224R Rear Panel Design

The NetVanta 1224R and NetVanta 1224R PoE rear panel is shown below. Refer to *Appendix A* on page 61 for pinouts.

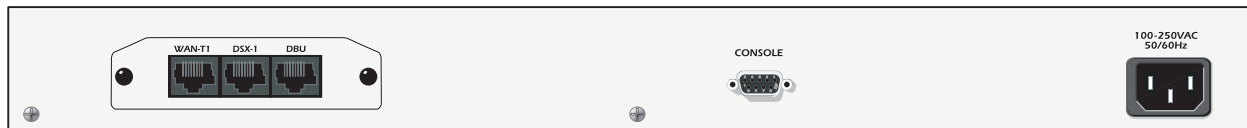


Figure 9. NetVanta 1224R and NetVanta 1224R PoE Rear Panel Layout

NetVanta 1224R Rear Panel Interfaces

NIM Option Slot

The NIM option slot accepts a variety of NIM option modules (refer to *Option Modules* on page 34).

CONSOLE Interface

The **CONSOLE** interface is an EIA-232 serial port (DCE) which provides for local management and configuration (via a DB-9 female connector).



Connection directly to an external modem requires a cross-over cable.

Power Connection

The rear panel has a power input to the AC universal power supply. Please refer to *Supplying Power to the Unit* on page 53 for connection details.

NetVanta 1224STR

The NetVanta 1224STR (AC and DC versions) and NetVanta 1224STR PoE are managed switches housed in a 1U-high rack-mountable metal enclosure that includes either a universal AC or a DC power supply. The NetVanta 1224STR PoE version provides the ability to detect attached powered devices (PDs) and deliver 48 VDC to the PDs via existing CAT5 cabling. Both front panels contain 24 10/100BaseT Ethernet interfaces (RJ-45). The NetVanta 1224STR front panel contains one Gigabit Ethernet interface which provides a fixed RJ-45 connector and one standard small form-factor pluggable (SFP) slot for connectivity over fiber. The NetVanta 1224STR PoE front panel contains two Gigabit Ethernet interfaces and two standard small form-factor pluggable (SFP) slots. Both units contain a single Network Interface Module (NIM) slot on the rear panel to support the following modules:

- 1200861L1 56K/64K NIM
- 1202862L1 T1/FT1 NIM
- 1200862L2#NEBS T1/FT1 NEBS NIM (NetVanta 1224STR PoE only)
- 1202863L1 T1/FT1 + DSX-1 NIM
- 1200872L1 Dual T1 NIM
- 1200868E1/L1 E1/FE1 NIM
- 1200878E1/L1 E1/FE1 + G.703 Drop NIM
- 1200866E1/L1 Serial Interface Module
- 1200867L1 SHDSL NIM
- 1200869E1/L1 ADSL NIM, Annex A
- 1200889E1/L1 ADSL NIM, Annex B
- 1200864L1 Analog Modem DIM
- 1200865L1 ISDN BRI DIM
- 1200875L1 ISDN S/T DIM
- 1200886L1 Serial DIM

This section includes a list of features, a list of shipping contents, and a description of the unit's front and rear panel designs. For additional information, refer to the following sections:

- *Product Specifications* on page 33
- *Mounting Options* on page 51
- *Supplying Power to the Unit* on page 53

For information on router configuration for a specific application, refer to the quick configuration documents provided on the *ADTRAN OS System Documentation* CD shipped with your base unit. For details on the command line interface, refer to the *Command Reference Guide* (also included on your CD).

NetVanta 1224STR Shipping Contents

Each NetVanta 1224STR and NetVanta 1224STR PoE units are shipped in their own cardboard shipping cartons. Open each carton carefully, and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer Service (refer to the *Repair and Replacement* section of the *Support* page on the ADTRAN website at <http://www.adtran.com/support>).

Domestic shipments of the NetVanta 1224STR include the following items:

- NetVanta 1224STR base unit
- *ADTRAN OS System Documentation CD*
- A detachable power cable with a grounded, three-prong plug
- *Quick Start Guide*
- Warranty card

International shipments of the NetVanta 1224STR include the following items:

- NetVanta 1224STR base unit
- *ADTRAN OS System Documentation CD*
- All necessary power cords
- *Quick Start Guide*
- Warranty card

NetVanta 1224STR Front Panel Design

The NetVanta 1224STR and the NetVanta 1224STR PoE front panels are shown below. *Table 1* on page 32 describes all of the LEDs, and *Appendix A* on page 61 shows the pinouts for the connectors.

NetVanta 1224STR Front Panel Features

10/100BaseT Ethernet Interfaces

The NetVanta 1224STRs contain 24 10/100BaseT Ethernet interfaces (RJ-45). These interfaces are consecutively numbered 1 through 24, from left to right, with the numbers screened directly above each port. Status LEDs for each of these interfaces are located directly over these numbers.

The NetVanta 1224STR PoE also has green and red PoE status LEDs located in the upper left and upper right corners (respectively) of each Ethernet connector.

Gigabit Ethernet Interfaces/SFP Slots

The NetVanta 1224STR front panel contains one Gigabit Ethernet interface that provides one fixed RJ-45 connector and one standard small form-factor pluggable (SFP) slots for connectivity over fiber. (Use either the RJ-45 connectors *or* the SFP slots. The fiber slots have precedence.) This interfaces is labeled **G1** and the status LED is located to the left of RJ-45 port 1, above the **STAT** LED.

The NetVanta 1224STR PoE front panel contains two Gigabit Ethernet interfaces and two standard small form-factor pluggable (SFP) slots. (Use either the RJ-45 connectors *or* the SFP slots. The fiber slots have precedence.) These interfaces are labeled **G1** and **G2** and the status LEDs are located above the SFP slots.

Status LEDs

The status LEDs are located to the lower left of RJ-45 port 1. The **WAN** LED reflects the status of an installed NIM. The **DBU** LED reflects the status of an installed DIM. The **STAT** LED indicates the unit's status.

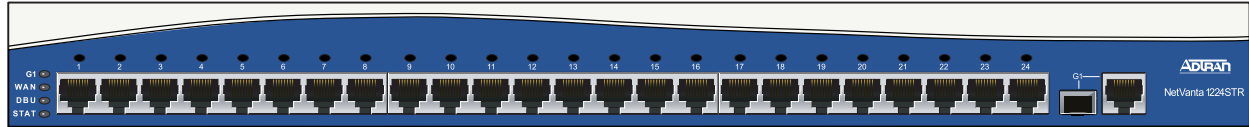


Figure 10. NetVanta 1224STR Front Panel Layout

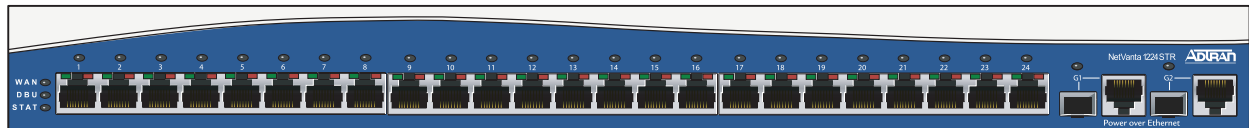


Figure 11. NetVanta 1224STR PoE Front Panel Layout

NetVanta 1224STR Rear Panel Design

The NetVanta 1224STR and NetVanta 1224STR PoE rear panels are shown below. Refer to *Appendix A* on page 61 for pinouts.

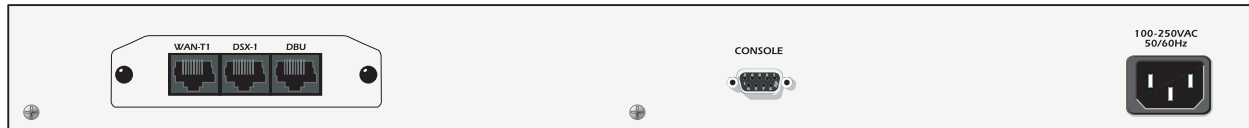


Figure 12. NetVanta 1224STR (AC) and NetVanta 1224STR PoE Rear Panel Layout

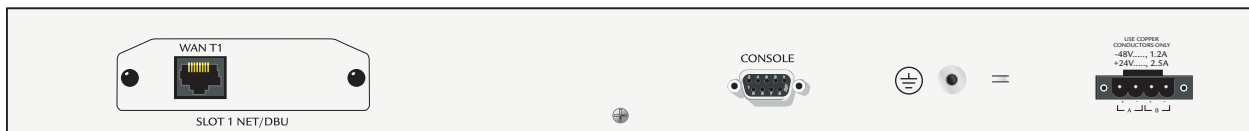


Figure 13. NetVanta 1224STR (DC) Rear Panel Layout

NetVanta 1224STR Rear Panel Interfaces

NIM Option Slot

The NIM option slot accepts a variety of NIM option modules (refer to *Option Modules* on page 34).

CONSOLE Interface

The **CONSOLE** interface is an EIA-232 serial port (DCE) which provides for local management and configuration (via a DB-9 female connector).

NOTE *Connection directly to an external modem requires a cross-over cable.*

Power Connection

The rear panel of the NetVanta 1224STR (AC) and NetVanta 1224STR PoE have a power input for connection to an AC universal power supply. The NetVanta 1224STR (DC) connects to a centralized DC power source via a four-position power connector. Please refer to *Supplying Power to the Unit* on page 53 for connection details.

NetVanta 1335

All NetVanta 1335 Series units are managed switches plus multiservice routers housed in a 1U-high rack-mountable metal enclosure that includes a universal AC power supply. The NetVanta 1335 PoE and NetVanta 1335 WiFi PoE provide the ability to detect attached powered devices (PDs) and deliver 48 VDC to the PDs via existing CAT5 cabling. The NetVanta 1335 WiFi Series units operate as wireless bridges for local area networks (LANs). A dual radio design with two dual-band external antennas is used to support concurrent 802.11a and 802.11b/g connections. The NetVanta 1335 Series front panels contain 24 10/100BaseT Ethernet interfaces and two Gigabit Ethernet interfaces accessed via a fixed RJ-45 connector or SFP slots for fiber connectivity. The NetVanta 1335 WiFi Series front panels contain 24 10/100BaseT Ethernet interfaces and one Gigabit Ethernet interface accessed via a fixed RJ-45 connector or SFP slot. All NetVanta 1335 Series units include IPsec VPN support (without further software upgrades) and expandable memory via CompactFlash® and SODIMM slots. NetVanta 1335 Series units also contain one NIM slot on the rear panel to support the following modules in data applications:

- 1200861L1 56K/64K NIM
- 1202862L1 T1/FT1 NIM
- 1202863L1 T1/FT1 + DSX-1 NIM
- 1200872L1 Dual T1 NIM
- 1200868E1/L1 E1/FE1 NIM
- 1200878E1/L1 E1/FE1 + G.703 Drop NIM
- 1200866E1/L1 Serial Interface Module
- 1200867L1 SHDSL NIM
- 1200869E1/L1 ADSL NIM, Annex A
- 1200889E1/L1 ADSL NIM, Annex B
- 1200864L1 Analog Modem DIM
- 1200865L1 ISDN BRI DIM
- 1200875L1 ISDN S/T DIM

This section includes a list of features, a list of shipping contents, and a description of the front and rear panel designs. For additional information, refer to the following sections:

- *Product Specifications* on page 33
- *Mounting Options* on page 51
- *Supplying Power to the Unit* on page 53

For information on router configuration for a specific application, refer to the quick configuration documents provided on the *ADTRAN OS System Documentation CD* shipped with your base unit. For details on the command line interface, refer to the *Command Reference Guide* (also included on your CD).

NetVanta 1335 Shipping Contents

Each NetVanta 1335 unit is shipped in its own cardboard shipping carton. Open each carton carefully, and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer Service (refer to the *Repair and Replacement* section of the *Support* page on the ADTRAN website at <http://www.adtran.com/support>).

Domestic shipments of the NetVanta 1335 include the following items:

- NetVanta 1335 base unit
- *ADTRAN OS System Documentation CD*
- Two dual-band RP-SMA detachable antennas (NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE only)
- A detachable power cable with a grounded, three-prong plug
- *Quick Start Guide*
- Warranty card

International shipments of the NetVanta 1335 include the following items:

- NetVanta 1335 base unit
- *ADTRAN OS System Documentation CD*
- Two dual-band RP-SMA detachable antennas (NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE only)
- All necessary power cords
- *Quick Start Guide*
- Warranty card

NetVanta 1335 Front Panel Design

The NetVanta 1335 Series front panels are shown on page 28. *Table 1* on page 32 describes all of the LEDs, and *Appendix A* on page 61 shows the pinouts for the connectors.

NetVanta 1335 Front Panel Features

10/100BaseT Ethernet Interfaces

The NetVanta 1335 Series units contain 24 10/100BaseT Ethernet interfaces (RJ-45). These interfaces are consecutively numbered 1 through 24, from left to right, with the numbers screened directly above each port. Status LEDs for each of these interfaces are located directly over these numbers.

Gigabit Ethernet Interfaces/SFP Slots

The NetVanta 1335 and NetVanta 1335 PoE contain two Gigabit Ethernet interfaces that provide two fixed RJ-45 connectors and two standard small form-factor pluggable (SFP) slots for connectivity over fiber. These interfaces are labeled **G1** and **G2**, and the status LEDs are located above the SFP slots. The NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE contain one Gigabit Ethernet interface that provides a fixed RJ-45 connector and one standard small form-factor pluggable (SFP) slot for connectivity over fiber. This interface is labeled **G1**, and the status LED is located above the SFP slot. (Use either the RJ-45 connectors *or* the SFP slots. The fiber slots have precedence.)

Status LEDs

The status LEDs are located to the lower left of RJ-45 port 1. The **WLAN** LED (NetVanta 1335 WiFi Series only) reflects the status of the wireless network. The **WAN** LED reflects the status of an installed NIM. The **DBU** LED reflects the status of an installed DIM. The **STAT** LED indicates the unit's status.

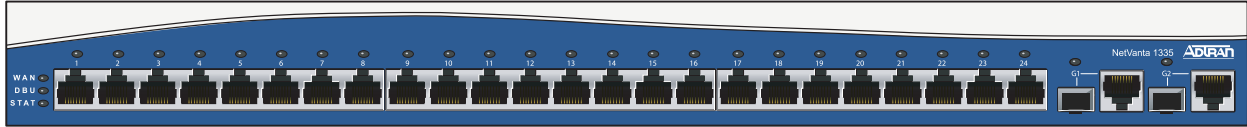


Figure 14. NetVanta 1335 Front Panel Layout

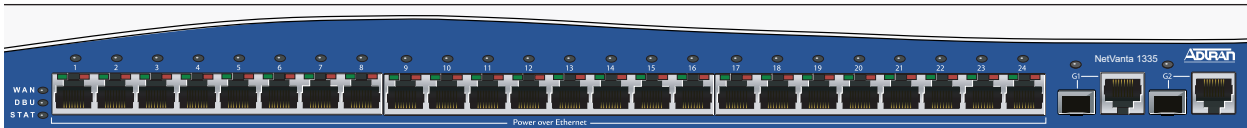


Figure 15. NetVanta 1335 PoE Front Panel Layout

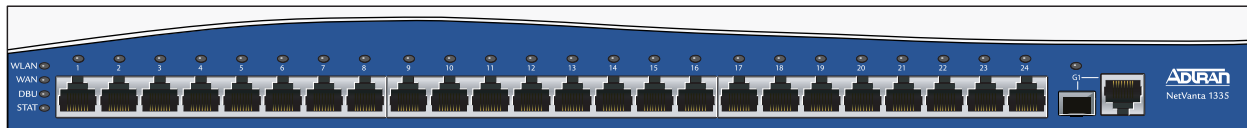


Figure 16. NetVanta 1335 WiFi Front Panel Layout

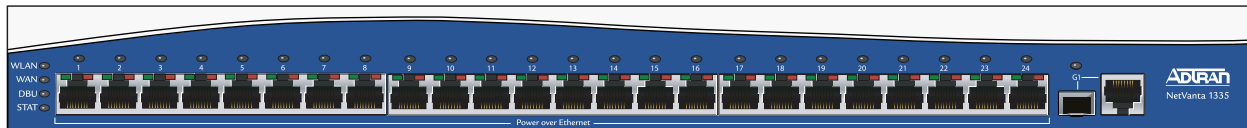


Figure 17. NetVanta 1335 WiFi PoE Front Panel Layout

NetVanta 1335 Rear Panel Design

The NetVanta 1335 Series rear panels are shown below. Refer to *Appendix A* on page 61 for pinouts.



Figure 18. NetVanta 1335 and NetVanta 1335 PoE Rear Panel Layout

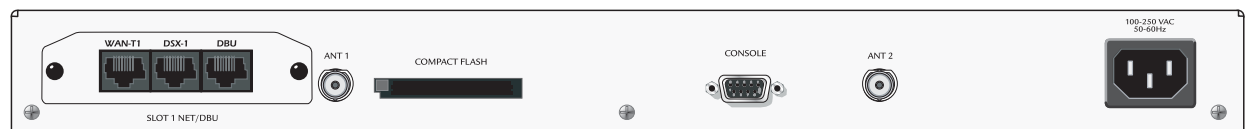


Figure 19. NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE Rear Panel Layout

NetVanta 1335 Rear Panel Interfaces

NIM Option Slot

The NIM option slot accepts a variety of NIM option modules (refer to *Option Modules* on page 34).

CompactFlash

The CompactFlash® slot supplies nonvolatile configuration and compressed code storage. The NetVanta 1335 supports only ADTRAN-provided CompactFlash (16 MB to 1 GB) (refer to the part number on the front cover of this manual).

CONSOLE Interface

The **CONSOLE** interface is an EIA-232 serial port (DCE) which provides for local management and configuration (via a DB-9 female connector).



Connection directly to an external modem requires a cross-over cable.

Antenna Connectors

The **ANT 1** and **ANT 2** ports (NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE only) support two dual-band antennas for concurrent 802.11a and 802.11b/g connections.

Power Connection

The rear panel has a power input to the AC universal power supply. Please refer to *Supplying Power to the Unit* on page 53 for connection details.

NetVanta 1524ST

The NetVanta 1524ST is a Layer 2 managed switch housed in a 1U-high rack-mountable metal enclosure that includes a universal AC power supply. The front panel contains 24 10/100/1000BaseT Ethernet interfaces that are accessed via standard RJ-45 connectors. Four of these twenty-four interfaces can be used in either copper or fiber mode. Four industry-standard SFP slots (supporting industry-standard SFP modules) are available for high-speed uplink or stacking requirements. The switch is managed through an EIA-232 **CONSOLE** port (DB-9).

This section includes a list of features, a list of shipping contents, and a description of the unit's front and rear panel designs. For additional information, refer to the following sections:

- *Product Specifications* on page 33
- *Mounting Options* on page 51
- *Supplying Power to the Unit* on page 53

For information on switch configuration for a specific application, refer to the quick configuration documents provided on the *ADTRAN OS System Documentation* CD shipped with your base unit. For details on the command line interface, refer to the *Command Reference Guide* (also included on your CD).

NetVanta 1524ST Shipping Contents

Each NetVanta 1524ST unit is shipped in its own cardboard shipping carton. Open each carton carefully, and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer Service (refer to the *Repair and Replacement* section of the *Support* page on the ADTRAN website at <http://www.adtran.com/support>).

Domestic shipments of the NetVanta 1524ST include the following items:

- NetVanta 1524ST base unit
- *ADTRAN OS System Documentation CD*
- A detachable power cable with a grounded, three-prong plug
- *Quick Start Guide*
- Warranty card

International shipments of the NetVanta 1524ST include the following items:

- NetVanta 1524ST base unit
- *ADTRAN OS System Documentation CD*
- All necessary power cords
- *Quick Start Guide*
- Warranty card

NetVanta 1524ST Front Panel Design

The NetVanta 1524ST front panel is shown below. *Table 1* on page 32 describes all of the LEDs, and *Appendix A* on page 61 shows the pinouts for the connectors.

NetVanta 1524ST Front Panel Features

10/100/1000BaseT Ethernet Interfaces

The NetVanta 1524ST front panel contains 24 10/100/1000BaseT Ethernet interfaces (RJ-45). These interfaces are consecutively numbered 1 through 24, from left to right, with the numbers screened directly above each port. Status LEDs for each of these interfaces are located directly over these numbers.

SFP Slots

The NetVanta 1524ST front panel contains four standard small form-factor pluggable (SFP) slots for connectivity over fiber. These interfaces are numbered 21 through 24. Status LEDs for each of these slots are located directly over these numbers.

Status LEDs

The status LEDs are located to the lower left of RJ-45 port 1. The **STK** LED indicates whether the unit is a member of a stack. The **STAT** LED indicates the unit's status.

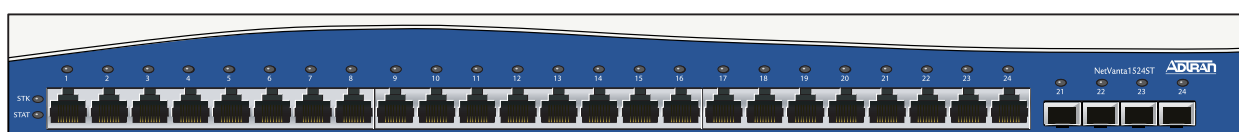


Figure 20. NetVanta 1524ST Front Panel Layout

NetVanta 1524ST Rear Panel Design

The NetVanta 1524ST rear panel is shown below. Refer to *Appendix A* on page 61 for pinouts.



Figure 21. NetVanta 1524ST Rear Panel Layout

NetVanta 1524ST Rear Panel Interfaces

10/100BaseT Ethernet Interface

The Ethernet port (**ETH 0/0**) is an RJ-45 connector. The Ethernet port provides the following:

- 10BaseT or 100BaseT with a single connector
- Auto-negotiation
- CSMA/CD
- IEEE 802.3 compatibility

CONSOLE Interface

The **CONSOLE** interface is an EIA-232 serial port (DCE) which provides for local management and configuration (via a DB-9 female connector).



Connection directly to an external modem requires a cross-over cable.

Power Connection

The rear panel has a power input to the AC universal power supply. Please refer to *Supplying Power to the Unit* on page 53 for connection details.

Table 1. Front Panel LED Descriptions

LED	Color	Indication
STAT	Off	Unit is not receiving power.
	Green (solid)	Power is on and self-test passed.
	Green (flashing)	On power-up the STAT LED flashes rapidly for five seconds, during which time the user may escape to boot mode from the CONSOLE port.
	Red (solid)	Power is on, but the self-test failed or the boot code could not be booted.
STK (1524ST only)	Off	Unit is not a member of a stack.
	Green (solid)	Unit is a member of a stack.
Port LEDs (i.e., 1 through 24, G1, G2, etc.)	Off	Port is administratively disabled or does not have a connection.
	Green (solid)	Port is enabled and has a connection.
	Amber (flashing)	Port has activity (transmit or receive).
DBU (1224R, 1224STR, and 1335 only)	Off	No DIM is installed.
	Green (solid)	DIM is ready. For the ISDN BRI DIM, green solid indicates that the negotiation with the switch is complete.
	Green (flashing)	Unit is in dial backup.
	Amber (solid)	Unit is in test.
	Red (solid)	Alarm condition is occurring on the DBU interface, or there is a self-test failure.
WAN (1224R, 1224STR, and 1335 only)	Off	No NIM is installed, or interface is administratively down.
	Green (solid)	NIM is up and everything is operational.
	Green (flashing)	Port has activity (transmit or receive).
	Amber (solid)	Unit is in test
	Red (solid)	Alarm condition is occurring on the WAN interface, or there is a self-test failure.
Power over Ethernet Status LEDs (PoE units only)	Green (solid)	Power is being applied (48 V) to the interface.
	Red (solid)	Fault is detected on the interface.
WLAN (1335 WiFi and 1335 WiFi PoE)	Off	WLAN is inactive or disabled.
	Green (solid)	WLAN card is enabled and active.
	Amber (flashing)	Activity (transmit or receive) is detected on the WLAN.

3. PRODUCT SPECIFICATIONS

	1224	1224ST	1224STR (AC)	1224STR (DC)	1224STR PoE	1224R	1335, 1335 PoE	1335 WiFi Series	1524ST
Physical Interfaces									
10/100BaseT Ethernet interfaces on the front panel	24	24	24	24	24	24	24	24	0
1000BaseT Gigabit Ethernet interfaces on the front panel (SFP slots for connectivity over fiber / RJ-45 connectors for copper connectivity)	0	2	1	1	2	0	2	1	24
Integrated DB-9, EIA-232 console port (DCE) on the rear panel	1	1	1	1	1	1	1	1	1
Modular network interface on the rear panel	N/A	N/A	1	1	1	1	1	1	N/A
Stacking	✓	✓	✓	✓	✓	✓	✓	✓	✓
Spanning Tree Support (802.1D and 802.1w)	✓	✓	✓	✓	✓	✓	✓	✓	✓
Link Aggregation (802.3ad)	✓	✓	✓	✓	✓	✓	✓	✓	✓
VLAN Support (802.1Q), up to 255 active VLANs	✓	✓	✓	✓	✓	✓	✓	✓	✓
Priority QoS (802.1p)	✓	✓	✓	✓	✓	✓	✓	✓	✓
Management									
Console	✓	✓	✓	✓	✓	✓	✓	✓	✓
Telnet CLI	✓	✓	✓	✓	✓	✓	✓	✓	✓
SSH CLI	✓	✓	✓	✓	✓	✓	✓	✓	✓
SNMP V2	✓	✓	✓	✓	✓	✓	✓	✓	✓
Port mirroring	✓	✓	✓	✓	✓	✓	✓	✓	✓
Power									
AC Power: 100 to 250 VAC, 50/60 Hz	✓	✓	✓		✓	✓	✓	✓	✓
DC Power: 24 to 48 VDC				✓					
Mechanical Specifications									
Housing: 1U-high metal enclosure (1.72-inch H x 17.22-inch W x 7.8-inch D) (The 1224STR PoE and 1335 PoE Series are 12.8-inches deep.)	✓	✓	✓	✓	✓	✓	✓	✓	✓
10/100BaseT Ethernet: 24 ganged RJ-45 jacks	✓	✓	✓	✓	✓	✓	✓	✓	
10/100/1000BaseT Ethernet: SFP slots/standard RJ-45 jacks	0	2	1	1	1	0	2	1	24
Console Port: DB-9, female	✓	✓	✓	✓	✓	✓	✓	✓	✓
Dual-band Antenna Connections	0	0	0	0	0	0	0	2	0
CompactFlash							✓	✓	
Environmental Specifications									
AC Input Power: 100 to 250 VAC	✓	✓	✓		✓	✓	✓	✓	✓
DC Input Power: 24 to 48 VDC at 2.5 A				✓					
Storage Temperature: -20°C to 70°C	✓	✓	✓	✓	✓	✓	✓	✓	✓
Operating Temperature: 0°C to 50°C	✓	✓	✓	✓	✓	✓	✓	✓	✓
Relative Humidity: Up to 95 percent, noncondensing	✓	✓	✓	✓	✓	✓	✓	✓	✓

4. OPTION MODULES

The NetVanta 1224STR, 1224R, and 1335 support several option modules designed to meet a variety of networking requirements. The option modules include plug-in network interface modules (NIMs) and plug-on dial backup interface modules (DIMs).

NIMs are cards which plug directly into the option module slot located on the rear of the base unit. These cards provide the following types of interfaces:

- *NetVanta 56K/64K NIM (P/N 1200861L1)* on page 35
- *NetVanta T1/FT1 NIM (P/N 1202862L1)* on page 36
- *NetVanta T1/FT1 NEBS NIM (P/N 1200862L2#NEBS)* on page 37
- *NetVanta T1/FT1 + DSX-1 NIM (P/N 1202863L1)* on page 38
- *NetVanta Dual T1 NIM (P/N 1200872L1)* on page 39
- *NetVanta E1/FE1 NIM (P/N 1200868E1/L1)* on page 40
- *NetVanta E1/FE1 + G.703 Drop NIM (P/N 1200878E1/L1)* on page 41
- *NetVanta Serial NIM (P/N 1200866E1/L1)* on page 42
- *NetVanta SHDSL NIM (P/N 1200867L1)* on page 43
- *NetVanta ADSL NIM, Annex A (P/N 1200869E1)* on page 44
- *NetVanta ADSL NIM, Annex B (P/N 1200889E1)* on page 45

DIMs are plug-on cards which plug directly on to the NIM prior to installation into the base unit. A DIM must be plugged on to a NIM in order for the interfaces on the NIM to be active. The NetVanta supports the following DIMs:

- *NetVanta Analog Modem DIM (P/N 1200864L1)* on page 46
- *NetVanta ISDN BRI DIM (P/N 1200865L1)* on page 47
- *NetVanta ISDN S/T DIM (P/N 1200875L1)* on page 48
- *NetVanta Serial DIM (P/N 1200886L1)* on page 49

This section describes each module, providing individual card specifications and features. Refer to *Connector Pin Definitions* on page 61 for pinout information. *Installing Dial Backup and Network Interface Modules* on page 54 provides information on card installation.

Network Interface Modules

NetVanta 56K/64K NIM (P/N 1200861L1)

The 56K/64K NIM (shown in Figure 22) provides a DDS WAN interface for the NetVanta. This module provides a single 56K or 64K DDS network interface. Refer to *Table A-5* on page 63 for the WAN-DDS connector pinouts, and *Table A-14* on page 66 for the DBU connector pinouts. An optional DIM is required for dial backup applications.

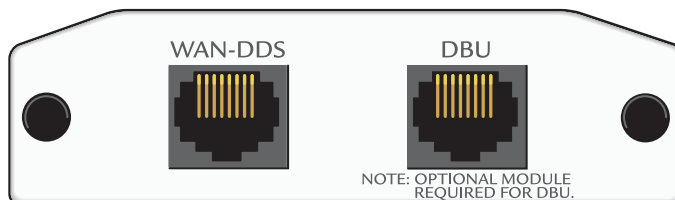


Figure 22. NetVanta 56K/64K NIM

Features and Specifications

Operating Modes

- Dedicated DDS (leased line)

DDS Interface

- Supported Standards: AT&T TR 62310
- 4-wire, full-duplex
- Receiver Sensitivity: -45 dB, all rates
- Data Rates: 56K, 64K, and auto
- Connector: RJ-48S

Clock Source

- Network
- Internal

Diagnostics

- CSU and DSU Loopbacks

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- ACTA/FCC Part 68
- IC CS-03
- UL/CUL 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta T1/FT1 NIM (P/N 1202862L1)

The T1/FT1 NIM (shown in Figure 23) provides a T1 WAN interface for the NetVanta. This module provides a full T1 or fractional T1 network interface. Refer to *Table A-6* on page 63 for the WAN-T1 connector pinouts and *Table A-14* on page 66 for the DBU connector pinouts. An optional DIM is required for dial backup applications.

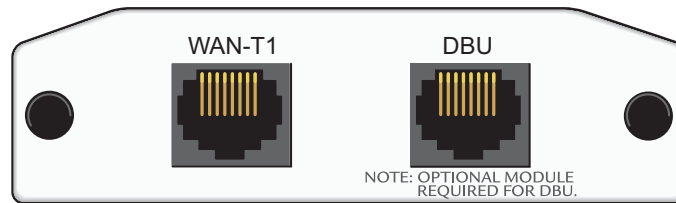


Figure 23. NetVanta T1/FT1 NIM

Features and Specifications

Operating Modes

- Frame Relay, Multilink Frame Relay
- PPP, Multilink PPP
- HDLC

T1/FT1 Interface

- Supported Standards: AT&T TR 62411, AT&T TR 65016, ANSI T1.403, Bellcore TR 194
- Line Rate: 1.544 Mbps \pm 75 bps
- Line Code: AMI or B8ZS
- Framing: D4 (SF) or ESF
- FT1 Line Rate: DS0 channelized (multiples of 64 kbps)
- Input Signal: 0 to -36 dB (DS1)
- Line Build-Out: 0, -7.5, -15, -22.5 dB (long), 0 to 655 ft (short)
- DS0 Assignment: Programmable
- Connector: RJ-48C

Clock Source

- Network
- Internal

Diagnostics

- Test Pattern Generation and Detection: 511, QRSS, all ones, all zeros
- Network loopbacks (local and remote); responds to both inband and FDL loop codes
- Alarm generation and detection
- Network and user sets of performance data (15 minutes and 24 hours)

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- ACTA/FCC Part 68
- IC CS-03
- UL/CUL 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta T1/FT1 NEBS NIM (P/N 1200862L2#NEBS)

The T1/FT1 NEBS NIM (see Figure 24) T1 WAN interface for the NetVanta 1224STR DC. The T1 NEBS NIM is NEBS Level 3 compliant, and provides a full T1 or fractional T1 network interface. See Table A-6 on page 63 for the WAN-T1 connector pinouts.



Although the T1/FT1 NEBS NIM is compliant with NEBS Level 3, the NetVanta 1224STR DC unit supports only NEBS Level 1.



Figure 24. NetVanta T1/FT1 NEBS NIM

Features and Specifications

Operating Modes

- Frame Relay, Multilink Frame Relay
- PPP, Multilink PPP
- HDLC

T1/FT1 Interface

- Supported Standards: AT&T TR 62411, AT&T TR 65016, ANSI T1.403, Bellcore TR 194
- Line Rate: 1.544 Mbps \pm 75 bps
- Line Code: AMI or B8ZS
- Framing: D4 (SF) or ESF
- FT1 Line Rate: DS0 channelized (multiples of 64 kbps)
- Input Signal: 0 to -36 dB (DS1)
- Line Build-Out: 0, -7.5, -15, -22.5 dB (long), 0 to 655 ft (short)
- DS0 Assignment: Programmable
- Connector: RJ-48C

Clock Source

- Network
- Internal

Diagnostics

- Test Pattern Generation and Detection: QRSS, 511, 2¹⁵ - 1, 2²⁰ - 1, all ones, all zeros
- Network loopbacks (local and remote); responds to inband and FDL loop codes
- Alarm generation and detection
- Network and user sets of performance data (15 minutes and 24 hours)

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- NEBS Level 3
- GR-63-CORE
- GR-1089-CORE
- UL/CUL 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta T1/FT1 + DSX-1 NIM (P/N 1202863L1)

The T1/FT1 + DSX-1 NIM (see Figure 25) provides a T1 WAN interface for the NetVanta, a full or fractional T1 network interface, and a DSX-1 interface. See the pinouts in *Table A-6* on page 63 for the WAN-T1 connector, *Table A-8* on page 64 for the DSX-1 connector, and *Table A-14* on page 66 for the DBU connector pinouts. An optional DIM is required for dial backup applications.

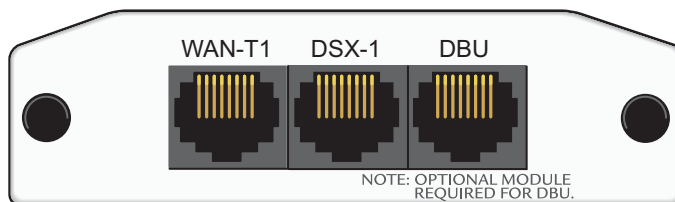


Figure 25. NetVanta T1/FT1 + DSX-1 NIM

Features and Specifications

Operating Modes

- Frame Relay, Multilink Frame Relay
- PPP, Multilink PPP
- HDLC

T1/FT1 Interface

- Supported Standards: AT&T TR 62411, AT&T TR 65016, ANSI T1.403, Bellcore TR 194
- Line Rate: 1.544 Mbps \pm 75 bps
- Line Code: AMI or B8ZS
- Framing: D4 (SF) or ESF
- FT1 Line Rate: DS0 channelized (multiples of 56/64 kbps)
- Input Signal: 0 to -36 dB (DS1)
- Line Build-Out: 0, -7.5, -15, -22.5 dB (long), 0 to 655 ft (short)
- DS0 Assignment: Programmable
- Connector: RJ-48C

DSX-1 Interface

- Line Interface: DSX-1 per ANSI T1.102
- DSX Receiver Input Range: -10 dBdsx to +6 dBdsx
- Line Rate: 1.544 Mbps
- Capacity: 1 to 24 DS0s
- Line Codes: AMI, B8ZS
- DSX-1 Interface to PBX
- Framing: D4 (SF) or ESF
- Line Length: 0 to 655 feet and -7.5 dB
- Connector: RJ-48C

Clock Source

- Network
- Internal
- Through

Diagnostics

- Test Pattern Generation and Detection: 511, QRSS, all ones, all zeros
- Network loopbacks (local and remote); responds to inband and FDL loop codes (T1 interface only)
- Alarm generation and detection
- Network and user sets of performance data (15 minutes and 24 hours)

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- ACTA/FCC Part 68
- IC CS-03
- UL/CUL 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta Dual T1 NIM (P/N 1200872L1)

The NetVanta Dual T1 NIM (see Figure 26) provides two WAN T1 interfaces for the NetVanta. Refer to *Table A-6* on page 63 for the pinouts. Refer to *Table A-14* on page 66 for the DBU connector pinouts. An optional DIM is required for dial backup applications.

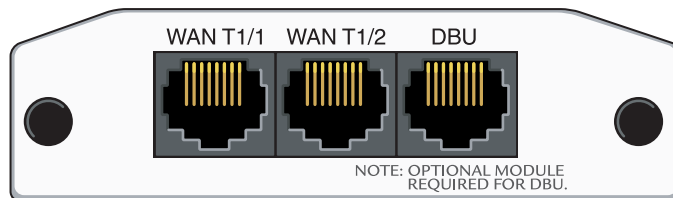


Figure 26. NetVanta Dual T1 NIM

Features and Specifications

Operating Modes

- Frame Relay, Multilink Frame Relay
- PPP, Multilink PPP
- HDLC

T1 Interface

- Supported Standards: AT&T TR 62411, AT&T TR 65016, ANSI T1.403, Bellcore TR 194
- Line Rate: 1.544 Mbps \pm 75 bps
- Line Code: AMI or B8ZS
- Framing: D4 (SF) or ESF
- FT1 Line Rate: DS0 channelized (multiples of 64 kbps)
- Input Signal: 0 to -36 dB (DS1)
- Line Build-Out: 0, -7.5, -15, -22.5 dB (long), 0 to 655 ft (short)
- DS0 Assignment: Programmable
- Connector: RJ-48C

Clock Source

- Network
- Internal
- Through

Diagnostics

- Test Pattern Generation and Detection: QRSS, 511, 2¹⁵ - 1, 2²⁰ - 1, all ones, all zeros
- Network loopbacks (local and remote); responds to both inband and FDL loop codes
- Alarm generation detection
- Network performance data (15 minutes and 24 hours)

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- ACTA/FCC Part 68
- IC CS-03
- UL/CUL 60950

Environmental

- Operating temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta E1/FE1 NIM (P/N 1200868E1/L1)

The NetVanta E1/FE1 module (see Figure 27) provides a WAN-E1 interface for the NetVanta meeting the requirements of ITU-T G.703/G.704. The module provides a single 2.048 Mbps network interface. Refer to Table A-7 on page 63 for the pinouts. Refer to Table A-14 on page 66 for the DBU connector pinouts. An optional DIM is required for dial backup applications.

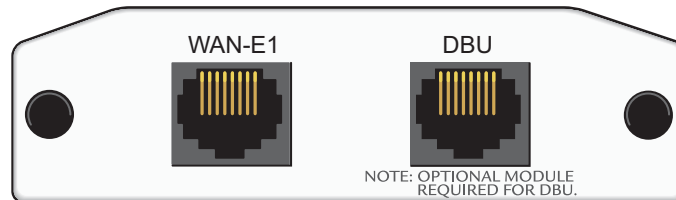


Figure 27. NetVanta E1/FE1 NIM

Features and Specifications

Operating Modes

- Frame Relay, Multilink Frame Relay
- PPP, Multilink PPP
- HDLC

WAN-E1 Interface

- Supported Standards: ITU G.703, ITU-T G.704 (CRC-4), ITU-T G.823, ITU-T G.797
- Line Rate: 2.048 Mbps \pm 50 PPM
- Line Code: AMI or HDB3
- Framing: FAS with optional CRC-4
- FE1 Line Rate: Channelized timeslot (in multiples of 64 kbps)
- Receiver Sensitivity: -30 dB
- Connector: RJ-48C

Clock Source

- Network
- Internal

Diagnostics

- Test Pattern Generation and Detection: QRSS, 511, all ones, all zeros
- Network loopbacks
- Network performance data (15 minutes and 24 hours)
- Alarm generation and detection

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- AS/ACIF S016
- ETSI TBR 12/TBR 13
- EN 60950
- IEC 60950
- AS/NZS 60950
- RoHS Compliant (Telecommunications exemption)

Environmental

- Operating temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta E1/FE1 + G.703 Drop NIM (P/N 1200878E1/L1)

The NetVanta E1/FE1 + G.703 Drop NIM (see Figure 28) provides a single WAN-E1 interface (2.043 Mbps) with user-selectable TS0 assignment and a G.703 drop port which may be used to drop and insert traffic to an E1 PBX. See *Table A-7* on page 63 for the WAN-E1 pinouts. See *Table A-9* on page 64 for the G.703 pinouts. See *Table A-14* on page 66 for the DBU connector pinouts. An optional DIM is required for dial backup applications.

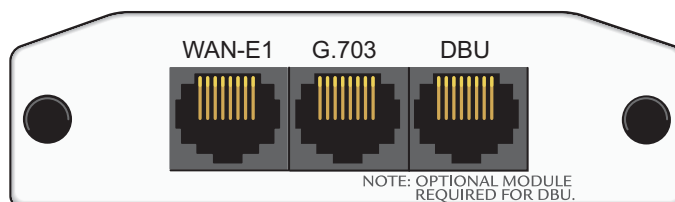


Figure 28. NetVanta E1/FE1 + G.703 Drop NIM

Features and Specifications

Operating Modes

- Frame Relay, Multilink Frame Relay
- PPP, Multilink PPP
- HDLC

WAN-E1 Interface

- Supported Standards: ITU G.703, ITU-T G.704 (CRC-4), ITU-T G.823, ITU-T G.797
- Line Rate: 2.048 Mbps \pm 50 PPM
- Line Code: AMI or HDB3
- Framing: FAS with optional CRC-4
- FE1 Line Rate: Channelized timeslot (in multiples of 64 kbps)
- Receiver Sensitivity: -30 dB
- Connector: RJ-48C

G.703 Interface

- Receiver Sensitivity: -30 dB
- Line Rate: 2.048 Mbps \pm 50 PPM
- Line Code: AMI or HDB3
- Framing: FAS with optional CRC-4
- Capacity: 1 to 31 timeslots
- Connector: RJ-48C

Clock Source

- Network
- Internal
- Through

Diagnostics

- Test Pattern Generation and Detection: QRSS, 511, all ones, all zeros
- Network loopbacks
- Network performance data (15 minutes and 24 hours)
- Alarm generation and detection

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- AS/ACIF S016
- ETSI TBR 12/TBR 13
- EN 60950
- IEC 60950
- AS/NZS 60950
- RoHS Compliant (Telecommunications exemption)

Environmental

- Operating temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta Serial NIM (P/N 1200866E1/L1)

The NetVanta Serial NIM (shown in Figure 29) can be configured by the user as a V.35, X.21 (V.11), or EIA 530 interface. This module supports rates up to a maximum of 10 Mbps. An additional V.35 (ADTRAN P/N 1200873L1), X.21 (ADTRAN P/N 1200874L1), or EIA 530 (ADTRAN P/N 1200883L1) cable is required (refer to *Caution*, below). See Table A-12 on page 65 for the serial connector pinouts, and Table A-14 on page 66 for the DBU connector pinouts. An optional DIM is required for dial backup applications.

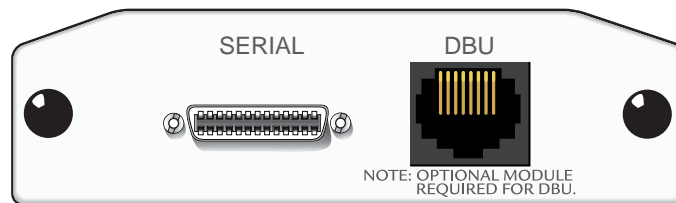
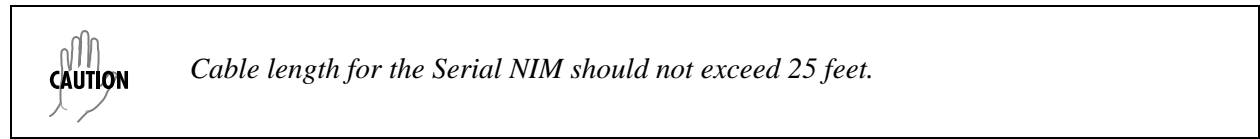


Figure 29. NetVanta Serial NIM

Features and Specifications

Operating Mode

- DTE only

Serial Interface

- Supported Standards: ISO 4903 (X.21), CCITT V.35 Synchronous (V.35), EIA 530 Synchronous
- Provides V.35, X.21 (V.11), or EIA 530 electrical interface
- Connector: 26-pin smart serial (DTE)

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- ETSI TBR1
- ETSI TBR2
- EN 60950
- IEC 60950
- UL/CUL 60950
- AS/NZS 60950
- RoHS Compliant (Telecommunications exemption)

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta SHDSL NIM (P/N 1200867L1)

The NetVanta SHDSL NIM (shown in Figure 30) provides a WAN SHDSL interface for the NetVanta. See *Table A-10* on page 64 for the SHDSL connector pinouts. See *Table A-14* on page 66 for the DBU connector pinouts. An optional DIM is required for dial backup applications.

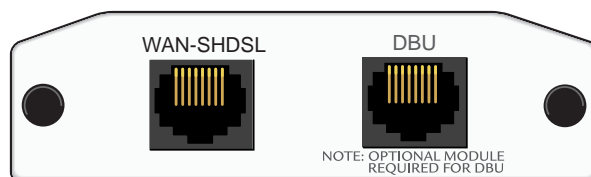


Figure 30. NetVanta SHDSL NIM
Features and Specifications

Operating Mode

- Line termination (CO)
- Network termination (CPE)

SHDSL Interface

- Supported Standards: ITU-T G.991.2 SHDSL
- Line Rate: 200 to 2312 kbps in 64k increments
- Line Code: TC-PAM
- Connector: RJ-45

Clock Source

- CPE Operating Mode: Network
- CO Operating Mode: Internal

Diagnostics

- Test Pattern Generation and Detection: 2¹⁵ - 1
- Network loopbacks (local and remote)
- Alarm generation and detection
- Programmable alarm threshold setting for loop attenuation and signal-to-noise ratio

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- AS/ACIF S043
- EN 60950
- AS/NZS 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta ADSL NIM, Annex A (P/N 1200869E1)

The NetVanta ADSL NIM, Annex A (see Figure 31) adds ADSL capability to the NetVanta. The module provides a single ADSL, ADSL2, or ADSL2+ network interface to support rates up to 25 Mbps. See *Table A-11* on page 64 for the pinouts. The ADSL NIM supports an optional DIM for dial backup applications. See *Table A-14* on page 66 for the DBU connector pinouts.

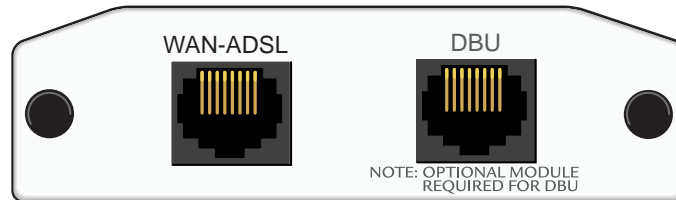


Figure 31. NetVanta ADSL NIM, Annex A

Features and Specifications

ADSL Interface

- ADSL over POTS, Annex A
- Supported Standards:
 - ITU G.992.1 (G.dmt)
 - ITU G.992.2 (G.lite)
 - ITU G.992.3 ADSL2 (G.dmt.bis)
 - ITU G.992.5 ADSL2+
 - ANSI T1.413 Issue 2
 - Reach Extended ADSL (READSL2)
- Connector: RJ-11C (6-pin jack, inner pair)

ATM

- Multiple Protocol over AAL5 (RFC2684)
- PPP over ATM (RFC2364)
- PPP over Ethernet (RFC2516)
- ATM Forum UNI 3.1/4.0 PVC
- ATM Class of Service (UBR)
- ATM F5 OAM
- Up to 16 Virtual Circuits

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6
- ACTA/FCC Part 68
- AS/ACIF S043
- AS/ACIF S002
- IC CS-03
- EN 60950
- IEC 60950
- UL/CUL 60950
- AS/NZS 60950
- RoHS Compliant (Telecommunications exemption)

Environmental

- Operating temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

NetVanta ADSL NIM, Annex B (P/N 1200889E1)

The NetVanta ADSL NIM, Annex B (see Figure 32) adds ADSL capability to the NetVanta. See *Table A-11* on page 64 for the pinouts. The ADSL NIM supports an optional DIM for dial backup applications. See *Table A-14* on page 66 for the DBU connector pinouts.

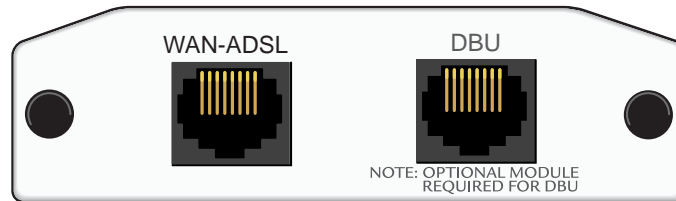


Figure 32. NetVanta ADSL NIM, Annex B

Features and Specifications

ADSL Interface

- ADSL over ISDN, Annex B
- Supported Standards: ITU G.992.1 (G.dmt)
- Connector: RJ-11C (6-pin jack, inner pair)

ATM

- Multiple Protocol over AAL5 (RFC2684)
- PPP over ATM (RFC2364)
- PPP over Ethernet (RFC2516)
- ATM Forum UNI 3.1/4.0 PVC
- ATM Class of Service (UBR)
- ATM F5 OAM
- Up to 16 virtual circuits

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6
- AS/ACIF S043
- EN 60950
- IEC 60950
- AS/NZS 60950
- RoHS Compliant (Telecommunications exemption)

Environmental

- Operating temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.75-inch W x 4.25-inch D

Dial Backup Interface Modules

NetVanta Analog Modem DIM (P/N 1200864L1)

The Analog Modem DIM provides a modem with data rates up to 33.6 kbps for the NetVanta. This DIM is a plug-on card that connects to the NIM. For installation instructions, refer to *Installing Dial Backup and Network Interface Modules* on page 54.

Features and Specifications

Features

- Supported Standards: ITU V.90
- Async

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- ACTA/FCC Part 68
- IC CS-03
- UL/CUL 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.5-inch W x 3.75-inch D



The Analog Modem DIM can be used in two different modes:

- 1. Backup interface for a primary connection.*
- 2. CONSOLE port for remote dial-in access.*

NetVanta ISDN BRI DIM (P/N 1200865L1)

The NetVanta ISDN BRI DIM provides dial backup access to the public switched telephone network (PSTN) via Basic Rate ISDN for the NetVanta. This DIM is a plug-on module that connects to the NIM. For installation instructions, refer to *Installing Dial Backup and Network Interface Modules* on page 54.

Features and Specifications

Features

- Clear Channel and bonding mode 1 call protocols
- Network support for 64 kbps (1 B-channel) or 128 kbps (2 B-channels)
- D-channel switch compatibility with AT&T 5ESS, Northern Telecom DMS-100, and National ISDN-1
- V.54 network loopback support

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- ACTA/FCC Part 68
- IC CS-03
- UL/CUL 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.5-inch W x 3.75-inch D

NetVanta ISDN S/T DIM (P/N 1200875L1)

The NetVanta ISDN S/T DIM provides dial backup access to the public switched telephone network (PSTN) via Basic Rate ISDN for the NetVanta. This DIM is a plug-on module that connects to the NIM. For installation instructions, see *Installing Dial Backup and Network Interface Modules* on page 54.

Features and Specifications**Features**

- Clear channel and bonding mode 1 call protocols
- Network support for 64 kbps (1 B-channel) or 128 kbps (2 B-channels)
- D-channel switch compatibility with AT&T 5ESS, Northern Telecom DMS-100, National ISDN-1, and Euro-ISDN
- V.54 network loopback support

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- AS/ACIF S031
- ETSI TBR 3
- EN 60950
- IEC 60950
- AS/NZS 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.5-inch W x 3.75-inch D

NetVanta Serial DIM (P/N 1200886L1)

The NetVanta Serial DIM provides NetVanta products with the ability to interface with external devices (e.g., Code Division Multiple Access (CDMA) devices and wireless modems), allowing for dial backup access to the public switched telephone network (PSTN). This DIM is a plug-on module that connects to the NIM. For installation instructions, see *Installing Dial Backup and Network Interface Modules* on page 54.



An RJ-45 to DB-9 adapter cable (P/N 1200887L1) is required to connect to the external modem.

Features and Specifications

Features

- 5-pin RS-232 interface vial host RJ-45 DBU connector
- Modem flow control support via CTS
- Communications with external model via AT commands

Compliance

- EMC - see *Electromagnetic Compatibility (EMC) Table* on page 6.
- IEC 60950
- EN 60950
- UL/CL 60950
- AS/NZS 60950

Environmental

- Operating Temperature: 0°C to 50°C
- Storage Temperature: -20°C to 70°C
- Relative Humidity: Up to 95 percent, noncondensing

Physical

- Dimensions: 2.3-inch W x 2.75-inch D

5. UNIT INSTALLATION

The instructions and guidelines provided in this section cover hardware installation topics such as mounting options, supplying power to the unit, and installing option cards. These instructions are presented as follows:

- *Mounting Options* on page 51
- *Supplying Power to the Unit* on page 53
- *Installing Dial Backup and Network Interface Modules* on page 54
- *Installing the NetVanta VPN Accelerator Card (included in P/N 4200368L1)* on page 57

For information on configuring a specific application, refer to the quick configuration documents provided on the *ADTRAN OS System Documentation CD* or the *Command Line Reference Guide* (also included on your CD).

WARNING

To prevent electrical shock, do not install equipment in a wet location or during a lightning storm.



Electronic modules can be damaged by static electrical discharge. Before handling modules, put on an antistatic discharge wrist strap to prevent damage to electrical components. Place modules in antistatic packing material when transporting or storing. When working on modules, always place them on an approved antistatic mat that is electrically grounded.

Tools Required

The customer-provided tools required for the hardware installation of the NetVanta are:

- Ethernet cables
- Network cables (module dependent)
- DSX-1 cable (T1/FT1 + DSX-1 module only)
- DBU cable (dial backup functions require an optional DIM)
- Phillips-head screwdriver (rack-mounted applications only)



*To access the command line interface (CLI) of the NetVanta, you will also need a VT100 terminal or PC with terminal emulation software and a console port cable. Instructions on how to access the CLI are given in the **Command Reference Guide** (provided on the *ADTRAN OS System Documentation CD*).*

Mounting Options

The unit may be installed in rackmount, wallmount, or tabletop configurations. The following sections provide step-by-step instructions for rack mounting and wall mounting.



*If you have purchased the VPN Accelerator Card for your NetVanta 1224STR, install it first (refer to *Installing the NetVanta VPN Accelerator Card (included in P/N 4200368L1)* on page 57).*

Rack Mounting the NetVanta

The NetVanta is a 1U-high, rack-mountable unit which can be installed into a 19-inch equipment rack. The following steps guide you in mounting the NetVanta into a rack.

Instructions for Rack Mounting the NetVanta	
Step	Action
1	To allow proper grounding, scrape the paint from the rack around the mounting holes where the NetVanta will be positioned.
2	Position the NetVanta in a stationary equipment rack. This unit occupies 1U of space.
3	Have an assistant hold the unit in position as you install two mounting bolts through the unit's brackets and into the equipment rack using a #2 phillips-head screwdriver.
4	Apply power to the unit (refer to <i>Supplying Power to the Unit</i> on page 53).




Be careful not to compromise the stability of the equipment mounting rack when installing this product.

Wall Mounting the NetVanta

By following these instructions exactly, the NetVanta can be safely mounted to the wall.

Instructions for Wall Mounting the NetVanta	
Step	Action
1	Remove the mounting ears. Rotate them 90 degrees so that the portion of the bracket with the mounting holes is flush with the bottom of the chassis. Reattach the mounting ears to the chassis (see Figure 33).
2	Decide on a location for the NetVanta. All NetVanta 1000 and 1000R Series units are mounted with the front panel facing down (see Figure 33). Keep in mind that the unit needs to be mounted at or below eye-level so that the LEDs are viewable.
3	Prepare the mounting surface by attaching a board (typically plywood, 3/4-inch to 1-inch thick) to a wall stud. <i>Important! Mounting to a stud ensures stability. Using sheetrock anchors may not provide sufficient long-term stability.</i>
4	Have an assistant hold the unit in position as you install two #6 to #10 (1 1/2 inches or greater in length) wood screws through the unit's brackets and into the mounted board (see Figure 33).
5	Proceed to the steps given in <i>Supplying Power to the Unit</i> on page 53.



To avoid damaging the unit, use only the screws included in the shipment when attaching mounting ears to the chassis.

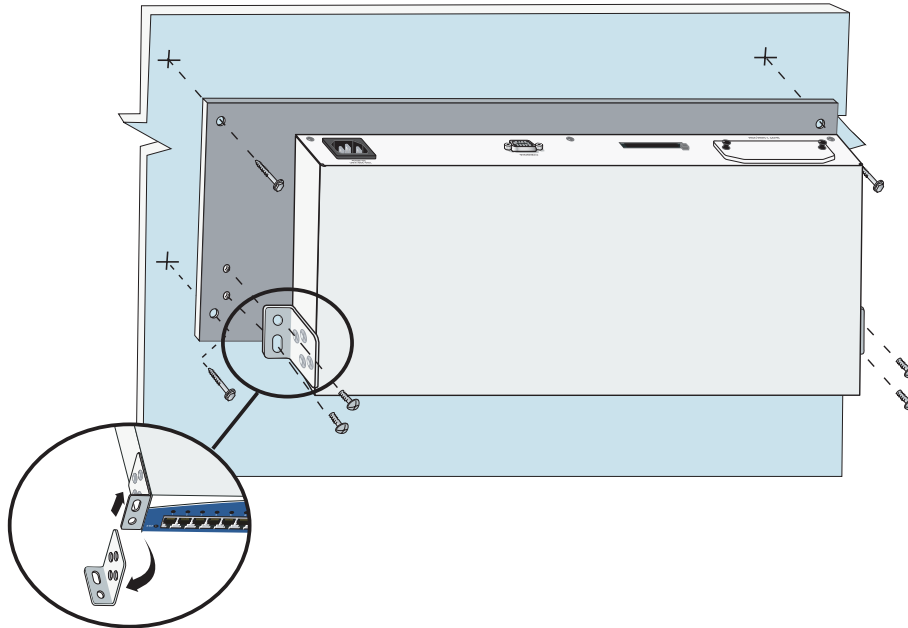


Figure 33. Wallmount Installation

Supplying Power to the Unit


NetVanta 1000 and 1000R Series AC-Powered Units


The AC-powered NetVanta 1000 and 1000R Series units come equipped with an auto-sensing 100 to 250 VAC, 50/60 Hz power supply for connecting to a properly grounded power receptacle. (A detachable power cable with a grounded, three-prong plug comes with the shipment.) To power these units, connect the power cable to an appropriate AC power source.

NetVanta 1224STR (DC)

The DC-powered NetVanta 1224STR connects to a centralized DC power source via the four-position power connector on the rear of the chassis (see *Figure 34* on page 54). Power and ground connections require copper conductors and a ring lug.

Instructions for Connecting DC Power Source to the NetVanta 1224STR	
Step	Action
1	With the power disconnected, connect the primary power source to input A of the power connector.
2	Connect a ground wire (fitted with a loop terminal end) to the grounding point using the screw provided. Connect the other end of the ground wire to a protective earth ground. See <i>Figure 34</i> on page 54.
3	If using a backup power source, connect it to input B of the power connector.

 <p>CAUTION</p>	<ul style="list-style-type: none"> • <i>Power to the NetVanta 1224STR DC System must be from a reliably grounded 24 or 48 VDC.</i> • <i>Use only copper conductors when making power connections.</i> • <i>Install unit in accordance with the requirements of NEC NFPA 70.</i> • <i>The branch circuit overcurrent protection shall be a fuse or circuit breaker rated minimum 48 VDC, maximum 10 A.</i> • <i>A readily accessible disconnect device, that is suitably approved and rated, shall be incorporated in the field wiring.</i> • <i>Maximum recommended ambient operating temperature is 50°C.</i>
---	--

 <p>CAUTION</p>	<p><i>The 10/100BaseT and Gigabit-Ethernet interfaces MUST NOT be metallically connected to interfaces which connect to the Outside Plant or its wiring. These interfaces are designed for use as intra-building interfaces only. The addition of primary protectors is not sufficient protection in order to connect this interface metallically to OSP wiring.</i></p>
---	---



To comply with GR-1089-CORE, Issue 3, this equipment **MUST** only be installed in a DC-C (common) bonding and grounding environment. It may not be utilized in a DC-I (isolated) bonding and grounding environment.

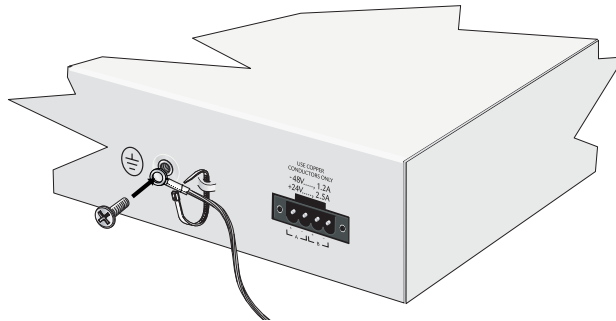


Figure 34. Grounding the NetVanta 1224STR (DC)

Installing Dial Backup and Network Interface Modules

The DIM plugs on to the NIM. The NIM is then installed into the rear panel option module slot. The following tables list the installation steps. Also see Figure 35 on page 55 and Figure 36 on page 56.

WARNING

For NetVanta modules with outside plant connections, ensure that all cables are removed from the module before installing or removing it from the NetVanta chassis.



Always remove power from the unit prior to removing or installing a module.



Improper installation may result in damage to the modules.

Instructions for Installing the DIMs	
Step	Action
1	Remove power from the unit.
2	If the NIM is already in the NetVanta chassis, remove all cables, release the pins at both edges of the NIM front panel and slide the module out of the chassis.
3	Carefully align the P1 connector on the NIM with the J1 connector on the DIM. <i>Using only fingertip pressure</i> so that neither circuit board bends or flexes, ensure that the connectors are firmly seated. Secure the DIM to the NIM using the screws and standoff posts supplied. See Figure 35.
4	Slide the NIM with the DIM attached into the NetVanta chassis, continuing with the normal NIM installation (refer to <i>Instructions for Installing the NIMs</i> on page 56).

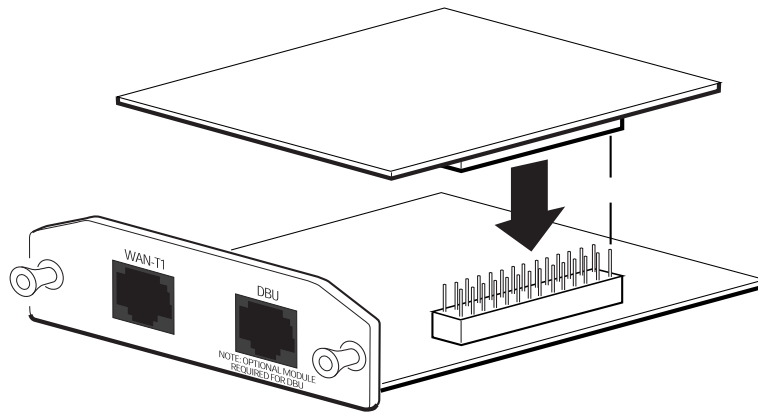


Figure 35. Installing DIMs

Instructions for Installing the NIMs	
Step	Action
1	Remove power from the unit.
2	Slide the option module into the option slot until the module is firmly seated against the chassis.
3	Secure the pins at both edges of the module.
4	Connect the cables to the associated device(s).
5	Restore power to the unit.

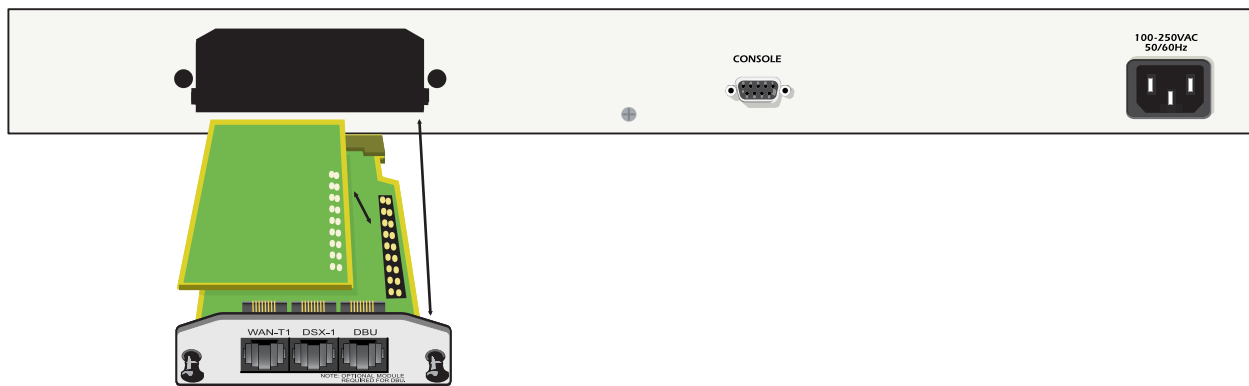


Figure 36. NIM and DIM Installation

Installing the NetVanta VPN Accelerator Card (included in P/N 4200368L1)

The optional VPN Accelerator card plugs into a 32-bit PCI slot and is designed to be used in the NetVanta 1224STR to provide encryption/decryption and security acceleration services. The card provides the following security services to the host processor: DES, triple-DES (3DES), AES, SHA-1, MD5, and random number generation. Performance metrics include 528 Mbps (DES), 176 Mbps (3DES), and 422 Mbps (AES). The power consumption of the card does not exceed 2 watts.

NOTE *The AOS Enhanced Feature Pack software is required to take advantage of the VPN acceleration features of this card.*

CAUTION *The NetVanta VPN accelerator card is intended to be serviced/installed by qualified service personnel only.*

Instructions for Installing the NetVanta VPN Accelerator Card	
Step	Action
1	Remove power from the unit.
2	Remove the nine screws and, if necessary, two mounting brackets (see Figure 37).
3	Using a 3/16-inch hex driver, remove the two jack screws located on either side of the DB-9 port.
4	Carefully lift and remove the unit's cover to expose the circuit board.
5	Gently slide the accelerator card into the PCI slot as shown. The card is keyed to fit into the slot only one way. To avoid damaging the card pins, do not use excessive force.
6	Replace the unit cover, screws, and mounting brackets.
7	Restore power to the unit.

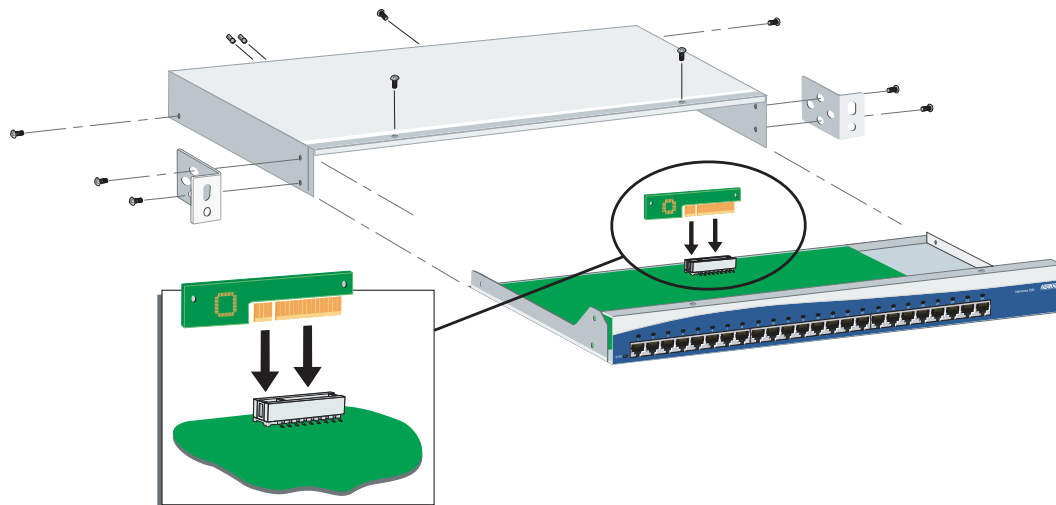


Figure 37. NetVanta VPN Card Installation

Installing a CompactFlash Card (NetVanta 1335 Series only)

The **CompactFlash** slot on the NetVanta 1335 Series supports CompactFlash® cards (16 MB to 1 GB). ADTRAN supports only ADTRAN-provided CompactFlash (16 MB to 1 GB) (refer to the list of part numbers on the front cover). Follow these instructions when installing a card.



The CompactFlash card is hot-swappable and can be inserted or removed while power is applied to the unit.

Instructions for Installing a CompactFlash Card

Step	Action
1	Slide the module into the CompactFlash slot until the card is firmly seated against the chassis.
2	The CompactFlash options will now be available in the GUI and the AOS CLI.

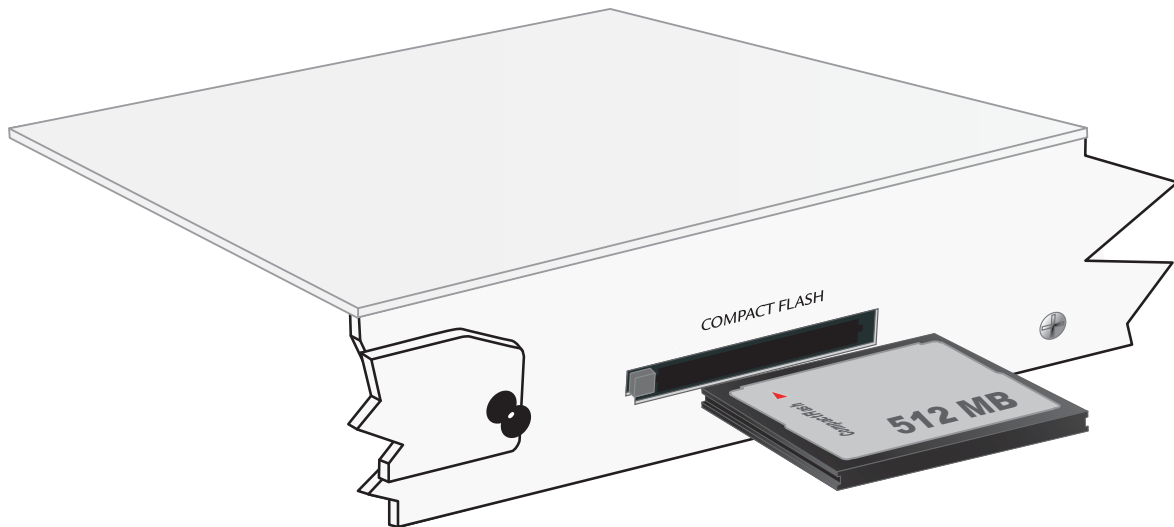


Figure 38. CompactFlash Card Installation

Installing Wireless Access Antennas (NetVanta 1335 WiFi and NetVanta 1335 WiFi PoE only)

The NetVanta 1335 WiFi Series units ship with two dual-band RP-SMA detachable antennas. These must be installed before operating the unit.

Instructions for Installing Antennas	
Step	Action
1	Place either of the two antennas directly onto the antenna port labeled ANT 1 on the rear panel. See <i>Figure 19</i> on page 28 for port locations.
2	Twist the antenna onto the threads until it is secure.
3	Repeat step 2 with the second antenna, attaching it to the ANT 2 port.

Your NetVanta is now ready to be configured and connected to the network. For more information on configuration for a specific application, refer to the quick configuration documents provided on the *ADTRAN OS System Documentation CD*. For details on the command line interface, refer to the *Command Reference Guide* (also included on your CD).

APPENDIX A. CONNECTOR PIN DEFINITIONS

The following tables provide the pin assignments for the base unit, network interface modules (NIMs), and dial backup interface modules (DIMs).

Base Unit Pinouts

Table A-1. CONSOLE Port Pinouts

Pin	Name	Description
1	DCD	Data Carrier Detect (output)
2	RD	Receive Data (output)
3	TD	Transmit Data (input)
4	DTR	Data Terminal Ready (input)
5	SG	Signal Ground
6	DSR	Data Set Ready Tied to pin 1 (output)
7	—	Unused
8	CTS	Clear to Send Tied to pin 1 (output)
9	—	Unused

Table A-2. SFP Slot Pinouts

Pin	Name	Pin	Name
1	RX_LOS	11	RGND
2	RGND	12	RX_DAT-
3	RGND	13	RX_DAT+
4	MOD_DEF(0)	14	RGND
5	MOD_DEF(1)	15	VddR
6	MOD_DEF(2)	16	VddT
7	TX_DISABLE	17	TGND
8	TGND	18	TX_DAT+
9	TGND	19	TX_DAT-
10	TX_FAULT	20	TGND

Table A-3. 10/100BaseT Ethernet Port Pinouts

Pin	Name	Description
1	TX1	Transmit Positive
2	TX2	Transmit Negative
3	RX1	Receive Positive
4, 5	—	Unused
6	RX2	Receive Negative
7, 8	—	Unused

Table A-4. 1000BaseT Gigabit-Ethernet Port Pinouts

Pin	Name	Description
1	TRD0+	Transmit/Receive Positive
2	TRD0-	Transmit/Receive Negative
3	TRD1+	Transmit/Receive Positive
4	TRD2+	Transmit/Receive Positive
5	TRD2-	Transmit/Receive Negative
6	TRD1-	Transmit/Receive Negative
7	TRD3+	Transmit/Receive Positive
8	TRD3-	Transmit/Receive Negative

Network Interface Module Pinouts

Table A-5. WAN-DDS Connector Pinouts

Pin	Name	Description
1	R1	Transmit data to the network—Ring 1
2	T1	Transmit data to the network—Tip 1
3-6	—	Unused
7	T	Receive data from the network—Tip
8	R	Receive data from the network—Ring

Table A-6. WAN-T1 Connector Pinouts

Pin	Name	Description
1	R1	Receive data from the network—Ring 1
2	T1	Receive data from the network—Tip 1
3	—	Unused
4	R	Transmit data toward the network—Ring
5	T	Transmit data toward the network—Tip
6-8	—	Unused

Table A-7. WAN-E1 Connector Pinouts

Pin	Name	Description
1	R1	Receive data from the network—Ring 1
2	T1	Receive data from the network—Tip 1
3	—	Unused
4	R	Transmit data toward the network—Ring
5	T	Transmit data toward the network—Tip
6-8	—	Unused

Table A-8. DSX-1 Connector Pinouts

Pin	Name	Description
1	R	Transmit data toward the DTE–Ring
2	T	Transmit data toward the DTE–Tip
3	—	Unused
4	R1	Receive data from the DTE–Ring 1
5	T1	Receive data from the DTE–Tip 1
6-8	—	Unused

Table A-9. G.703 Connector Pinouts

Pin	Name	Description
1	R	Transmit data toward the DTE–Ring
2	T	Transmit data toward the DTE–Tip
3	—	Unused
4	R1	Receive data from the DTE–Ring 1
5	T1	Receive data from the DTE–Tip 1
6-8	—	Unused

Table A-10. WAN-SHDSL Connector Pinouts

Pin	Name	Description
1-3	—	Unused
4	T	Transmit data toward the network–Tip
5	R	Transmit data toward the network–Ring
6-8	—	Unused

Table A-11. WAN-ADSL Connector Pinouts

Pin	Name	Description
1, 2	—	Unused
3	R	ADSL Ring
4	T	ADSL Tip
5, 6	—	Unused

Table A-12. Serial to Cable Connector Pinouts

Serial Pin	V.35 Pin	X.21 Pin	EIA 530 Pin	Name
1	P	2	2	TD_A
2	U	N/A	24	ETC_A
3	Y	N/A	15	TCLK_A
4	V	6	17	RCLK_A
5	R	4	3	RD_A
6	F	N/A	8	DCD_A
7	H	N/A	20	DTR_A
8	C	3	4	RTS_A
9	N/A	10	19	RTS_B (V.11 only)
10	N/A	12	13	CTS_B (V.11 only)
11	D	5	5	CTS_A
12	E	N/A	6	DSR_A
13	K	N/A	25	TM_A
14	S	9	14	TD_B
15	W	N/A	11	ETC_B
16	AA	N/A	12	TCLK_B
17	X	13	9	RCLK_B
18	T	11	16	RD_B
19-26	N/A	N/A	N/A	Unused
26	B	8	7	Ground

Table A-13. Analog Station (FXS) and Analog Trunk (FXO) Port Pinouts

Pin	Name	Description
1, 2	—	Unused
3	Ring	Ring lead of the 2-wire interface
4	Tip	Tip lead of the 2-wire interface
5, 6	—	Unused

Dial Backup Interface Module Pinouts (DBU Connector)



An optional DIM is required for dial backup applications.

Table A-14. Analog Modem and ISDN BRI DBU Connector Pinouts

Pin	Name	Description
1-3	—	Unused
4	R	Network–Ring
5	T	Network–Tip
6-8	—	Unused

Table A-15. ISDN S/T DBU Connector Pinouts

Pin	Name	Description
1, 2	—	Unused
3	R1	Network Receive–Ring 1
4	R	Network Transmit–Ring
5	T	Network Transmit–Tip
6	T1	Network Transmit–Tip 1
7, 8	—	Unused

Table A-16. Serial DBU Connector Pinouts

Pin	Description
1, 2	Unused
3	CTS
4	TXD
5	RXD
6	GND
7	DCD
8	Unused

Index

Numerics

1000BaseLX single-mode SFP module 15
1000BaseSX multi-mode SFP module 15
56K/64K NIM 35

A

ADSL, Annex A module 44
ADSL, Annex B module 45
ADTRAN operating system 15
antenna connectors 29
antennas 15, 26

C

command line interface 50
CompactFlash 26, 29
 installing a CompactFlash card 58
console port description 15

D

DBU LED 32
Dial Backup Interface Modules
 Analog Modem 46
 ISDN BRI 47
 ISDN S/T 48
 Serial 49
DIMs, installing 54
dual T1 NIM 39

E

E1/FE1 + G.703 drop module 41
E1/FE1 module 40
EMC table 6

F

front panel
 LEDs 32

G

grounding NetVanta 1224STR (DC) 53

I

installation
 rack mounting instructions 51
 wall mounting instructions 52
installing a CompactFlash card 58
installing DIMs 54
installing NIMs 56
installing the unit 50
installing VPN accelerator card 57
installing wireless access antennas 59

L

LEDs, description of 32

M

mounting options 51

N

NetVanta 1224
 brief description 16
 front panel 16
 rear panel 17
 shipping contents 16
NetVanta 1224R
 brief description 20
 front panel 21
 rear panel 22
 shipping contents 21
NetVanta 1224ST
 brief description 18
 front panel 18
 rear panel 19
 shipping contents 18
NetVanta 1224STR
 brief description 23
 front panel 24
 rear panel 25
 shipping contents 23
NetVanta 1335
 brief description 26
 front panel 27
 rear panel 28
 shipping contents 26
NetVanta 1524ST
 brief description 29
 front panel 30
 rear panel 31
 shipping contents 30
Network Interface Modules
 56K/64K 35
 ADSL, Annex A 44
 ADSL, Annex B 45
 Dual T1 39
 E1/FE1 40
 E1/FE1 + G.703 41
 serial 42
 SHDSL 43
 T1/FT1 36
 T1/FT1 + DSX-1 38
 T1/FT1 NEBS 37
NIMs, installing 56

O

option modules discussion 34

P

pinouts
 10/100BaseT ports 62
 1000BaseT ports 62

- ADSL connector 64
- console port 61
- DBU connector 66
- DDS connector 63
- DSX-1 connector 64
- E1 connector 63
- FXS and FXO 65
- G.703 connector 64
- serial to cable connector 63
- SFP slots 61
- SHDSL connector 64
- T1 connector 63
- port LEDs 32
- power
 - NetVanta AC-powered units 53
 - NetVanta DC-powered unit 53
 - supplying to unit 53
- power over Ethernet 15
- product registration 8
- product specifications 33
 - physical interfaces 33

- R**
 - rack mounting instructions 51
 - radio channels 7

- S**
 - safety instructions 4
 - serial module 42
 - SFP module descriptions 15
 - SHDSL interface 43
 - SHDSL module 43
- shipping contents
 - NetVanta 1224 16
 - NetVanta 1224R 21
 - NetVanta 1224ST 18
 - NetVanta 1224STR 23
 - NetVanta 1335 26
 - NetVanta 1524ST 30
- specifications 33
- STAT LED 32
- STK LED 32

- T**
 - T1, dual module 39
 - T1/FT1 + DSX-1 module 38
 - T1/FT1 module 36
 - T1/FT1 NEBS module 37
 - tools required for installation 50

- V**
 - VPN accelerator card 57

- W**
 - wall mounting instructions 52
 - WAN LED 32
 - warranty 8
 - WiFi 15
 - wireless access 15
 - antennas 59
 - wireless radio channel ranges 7