



ISBW2113B Bluetooth Indoor/Outdoor Speakers

IMPORTANT SAFETY INSTRUCTIONS

- Keep these Instructions Heed all Warnings.
- Follow all instructions
- Do not use this apparatus near Clean only with a dry cloth.

- accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outle, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- specified by the manufacturer. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part I 5 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this sequence does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to '19 to correct the interference by one or more of the following measures.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus. L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, et el qu'un vase, ne doit être place's sur l'objet.
- objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet. Main plug is used as disconence device and it should remain readily operable during intended use. În order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely. La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendunt son utilisation. Pour être complétement déconnecé de l'allmentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or bottom of the apparatus Attention marquage est situé sur le paneau arrière ou inférieur de l'unité
- The marking information is located at the rear or bottom of apparatus Le marquage est situé sur le paneau arrière ou inférieur de l'unité.

WARNINGS AND PRECAUTIONS

- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- AVERTISSEMENT: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.

- AVERTISSE MENT: Pour fedurie le risque d'incendie ou de choc electrique, ne pas exposer cet appareil sous la pluie et l'humidié.

 CAUTION: Use o' cotornitos a radjustments o performance of procedures other than those specified may result in hazardous radiation exposure.

 WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 WARNING: Do not place this unit directly onto firmitire surfaces with any type of soft, porous or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.

 WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any thorescent lighting, as it may be the cause.

 CAUTION: Danger of explosion if battery is incorrectly replaced.

 Replace only with the same or equivalent type.

 PRÉCAUTION: Danger of explosion is less piles sont resuplacées de ficon incorrect. Remaplace les plates saudement par le même type de plate ou l'équivalent.

 WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechaequels he NiMH batteries.

- WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- WARNING: Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for dispose or recycling practices in your area. They should never be incinerated since they might explode
- WARNING: Shock hazard Do Not Open
- WARNING: Shock hazard Do Not Open.

 AUS: RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR

 Mains plug is used as disconnect device and it should remain readily operable dur intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains soct outlet completely. La prise du secteur est utilisé pour déconnecter le système.

 La prise du secteur ne doir pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complétement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.










Introduction


switch to turn the unit

on or off.

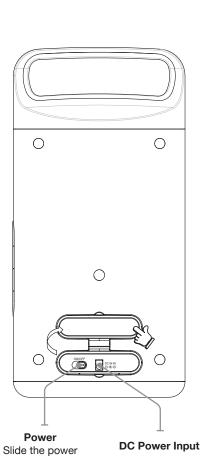

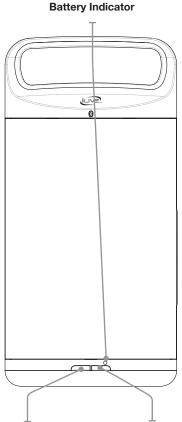

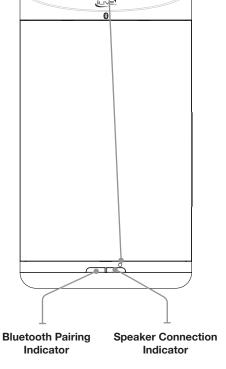

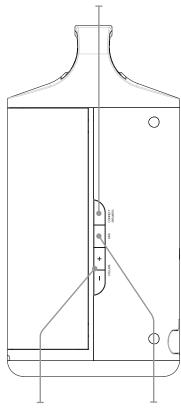

Connect Speakers Press to connect the speakers.

Volume Press to adjust the volume.

Pair Press to begin pairing the speakers.

For Warranty Informatio of this User's Guide, go to www.iLiveElectronics.com Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com Copyright © 2013 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Customer Service: 1-888-999-4215



Setup

Charging the Internal Batteries

DC power input: requires an AC/DC power adapter (included)


Connect one end of the included AC/DC power adaptor to the unit and one end to an AC power outlet to recharge the

Note: Each speaker must be charged independently.

Battery Indicator

Status	Indicator
Power Off	No light
Charging	Red light
Fully Charged	No light
Low battery	Flashing red light

(Please charge each speaker for at least 8 hours before using).

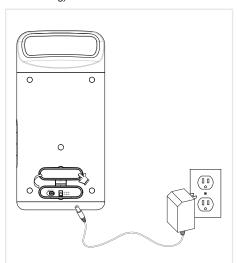

Speaker Connection & Bluetooth Setup

Pairing the Speakers

(This process should be done FIRST before pairing a Bluetooth device. This should only need to be done upon first use.)

Power on the speakers by sliding the power switch to the ON position on both units (first make sure both speakers are fully charged).

The Bluetooth Indicator and Speaker Connection Indicator will flash slowly in unison. If the Speaker Connection Indicator is not flashing, but is solid white both speakers your speakers are already paired. You can skip to the Pairing a Bluetooth Device section.

Press the Connect Speakers button on both speakers simultaneously.

The Speaker Connection Indicators will flash quickly.

Wait until both Speaker Connection Indicators are solid white, this means the speakers have been successfully paired.

Please note that this process can take up to 1 minute.

Note: For all future uses please turn on both speakers and wait for them to connect (it may take up to 1 minute for them to pair automatically even after initial use). There should be no need to press Connect Speaker button again.

If any pairing issues should occur, please follow the above steps again.

Pairing a Bluetooth Device

Make sure you have first followed the instructions for Pairing the Speakers.

> When pairing, the device should remain within 3 feet of the speakers.

Press the Pair button on ONLY one of the speakers. The pair indicator will begin flash quickly.

> Using the native controls on your Bluetooth device, select the "ISBW2113" in your Bluetooth settings to pair.

> If your device requests a password, enter the default password " 0 0 0 0 ".

Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.

When successfully paired, the pairing indicator will stop flashing and will remain solid.

> After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device.

If your device should become unpaired, follow the above steps again.

If any pairing issues should occur, un-pair the unit on your Bluetooth device and follow the above steps again.

Note: If two speakers with the ISBW2113 name appear on the pairing list of your device, please erase one of ISBW2113 listed in your Bluetooth device and repeat the above steps again.

Playing Audio Wirelessly

- Follow the instructions for Pairing a Bluetooth Device.
- Use the native controls on the connected Bluetooth Device to select a
- To play, pause or skip the selected track, use the native controls on the connected Bluetooth Device.
- Any audio played through the connected Bluetooth device will now be heard through the speakers.



International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.iLiveElectronics. Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.iLiveElectronics.com

For Warranty Information of this User's Guide, go to www.iLiveElectronics.com Email Support: prodinfo@dplinc.com, Email Parts: partsinfo@dplinc.com
Copyright © 2013 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Customer Service: 1-888-999-4215



