



2.

π

Quick Start Guide

3.

Freedom of Perspective

4.

Product Components

Camera Lens cap Quick Start Guide

Micro USB to Type C USB cable

5.

Camera Operation Instructions

Photo/ Video Mode Switch Power Button (shutter) WiFi Switch

Memory Card Slot and Micro USB Port Power Indicator

Smartphone Clip Tripod Mounting Hole

6.

Micro SD card installation

Remark: Supports Class10 and above, exFAT format and a maximum capacity of 64GB.

7.

Downloading the Pi GO! APP

Remark: Refer to the serial number on the back of the camera for the wireless network name. Default password/PIN is 12345678.

EY8X
W12345678
Serial number
W12345678

8.

Important Safety Information

- Using or connecting non-genuine products might shorten the lifespan of the product, or cause explosions. Doing so might also damage the product and further void the warranty.
- Do not disassemble the product or allow any object to collide with the product. This may cause electric shocks, short-circuit or cause a fire.
- Please use this product between temperature conditions 0°C to 35°C. Avoid exposing the product to direct sunlight for extended periods of times. This may cause damages to the product or explosions.
- Please wipe this product with soft cloth. Keep the camera in the storage bag when not in use.
- Do not connect or insert conductive material (metal components or pencil led etc.) into the connector.
- Do not cover the product with a blanket when in use.
- The product might heat up after long-term use. Avoid touching the product when it heats up as doing so may result in low temperature burns.
- Do not discard the product as household waste. Doing so may cause fire or harm the environment.
- Do not shake the camera or the smartphone when the camera is installed on your smartphone along with the smartphone clip-on accessory. Doing so may cause the camera to drop off from the accessory and damage the camera.

9.

Limited Warranty

One year standard limited warranty is provided for this product starting from the date of sale, guaranteeing that there are no material, manual or design flaws for the hardware and accessories included in the original product package. This warranty is not applicable to (1) batteries and other consumable components, unless there is flaw in the material itself; (2) cosmetic damages, including but not limited to scratches and dents on the surface; (3) damages resulted from using with another product or with non-genuine accessories. (4) Damages caused by external factors such as accidents, improper use or improper handling. Or (5) Removed, incomplete or unidentifiable product serial number label.

Contact us

Please visit our website at [redacted] for more information.