

# Panasonic

## Operating Instructions Digital Cellular Phone

EB-G50

# G50



GSM

*Before operating this equipment please read these instructions completely.*

## FCC Regulations

### Conditions of Use

Operation of this Panasonic mobile phone is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Panasonic mobile phone generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1). Reorient or relocate the receiving antenna.
- 2). Increase the distance between the device and receiver.
- 3). Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- 4). Consult the dealer or an experienced radio/TV technician for help.

The radiated output power of this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 1.5 cm or further from the human body. However, the user of wireless radios may be restricted in some places or situations, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio. Several restrictions and cautions of using mobile phone are listed in the **Important Information**.

# FCC RF EXPOSURE INFORMATION

## Read this information before using your handset

In August 1996 the Federal Communication Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

### Body-worn Operation

This device was tested for typical body-worn operations. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure requirements and should be avoided.

*For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)*

## Contents


Important Information	i
Care and Maintenance	ii
Quick Reference	1
Location Of Controls	1
Display Icons	2
Getting Started	3
Basic Operation	5
Switching the Phone On/Off	5
Making a Call	5
International Dialling	5
Answering a Call	5
Ending a Call	5
Emergency Calls	6
Initially Setting the Time/Date	6
Accessing the Phonebook to Dial	6
Earpiece Volume Control	6
SIM Lock	6
Using the PIN	7
Setting Alert Type	7
Key Guard	7
Phonebook	8
Browsing Phonebook	8
Creating a Number	8
Grouping Phonebook Entries	9
Reviewing the Phonebook	10
Hot Key Dial Numbers	10
My Numbers	10
Personalising Your Phone	10
Language	10
Changing the Ring Tones	11
Display Setting	12
Profile Mode	12
User Messages	12
Defaults	12
Own Menu	13
My Phonebook	13
Game (STK)	14
Text Messages	14
Setting the Phone for Short Text Messages	14
Setting the Message Centre Number	14
Creating a Text Message	15
T9 Text Input	16
Other Text Modes	16
Editing Text	17
Receiving Text Messages	17
User Messages	17
Review	17
Parameters	17
Broadcast	18
Key Guard	18
Browser	19
Browser Setting	19
Browser Menu	20
Phone Menu	20
Call Service	20
Diverting Calls	21
Restricting Calls	22
Network	22
Connectivity	22
Application	23
Game	23
(STK)	23
Schedule	23
Clock	23
Calculator	24
Currency	25
Melody Composer	25


Melody Manager	25
Picture Manager	25
<b>Records</b>	<b>26</b>
Last Dialed Numbers and Redial	26
Erase Records	26
<b>In Call Menu</b>	<b>26</b>
Holding Calls	26
Call Waiting	27
Hands Free	27
Accepting/Rejecting a Second Call	27
Conference	27
Call Transfer	27
<b>Menu Structure</b>	<b>28</b>
<b>Trouble Shooting</b>	<b>29</b>
<b>WAP Settings</b>	<b>31</b>
<b>Specifications</b>	<b>32</b>


# Important Information


## Safety Considerations


The following information should be read and understood as it provides details which will enable you to operate your phone in a manner which is both safe to you and your environment, and conforms to any legal requirements regarding the use of cellular phones.


 This equipment should only be charged with an approved AC-adaptor (EB-CAD55xx\*). Other usage will invalidate any approval given to this apparatus and may be dangerous. Ensure the voltage rating of the Fast Travel Charger is compatible with the area of use when travelling abroad. note: xx identifies charger region e.g. CN, EU, HK, UK.

 Use of Battery pack other than that recommended by the manufacturer may result in safety hazard


 Switch off your cellular phone when in an aircraft. The use of cellular phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and may be illegal. Failure to observe this instruction may lead to the suspension or denial of cellular phone services to the offender, or legal action or both.

 Do not incinerate or dispose of the battery as ordinary rubbish. The battery must be disposed of in accordance with local legislation and may be recycled.


 It is advised not to use the equipment at a refuelling point. Users are reminded to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress. Never expose the battery to extreme temperatures (in excess of 60°C) or charge the battery for much longer than recommended.


 Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.


## Car and Maintenance

 Pressing any of the keys may produce a loud tone. Avoid holding the phone close to the ear while pressing the keys.

Extreme temperatures may have a temporary effect on the operation of your phone. This is normal and does not indicate a fault.


 Do not modify or disassemble the equipment. There are no user serviceable parts.


 Do not subject the equipment to excessive vibration or shock.

 Avoid contact with liquids. If the equipment becomes wet immediately remove the power and contact your dealer.

 Do not leave the equipment in direct sunlight or a humid, dusty or hot area.

 
Keep metallic items that may accidentally touch the terminals away from the equipment.

 Always charge the battery in a well ventilated area, not in direct sunlight, between +5°C and +35°C. It is not possible to recharge the battery if it is outside this temperature range.

 When disposing of any packing materials or old equipment check with your local authorities for information on recycling.

# Quick Reference

## Location of Controls

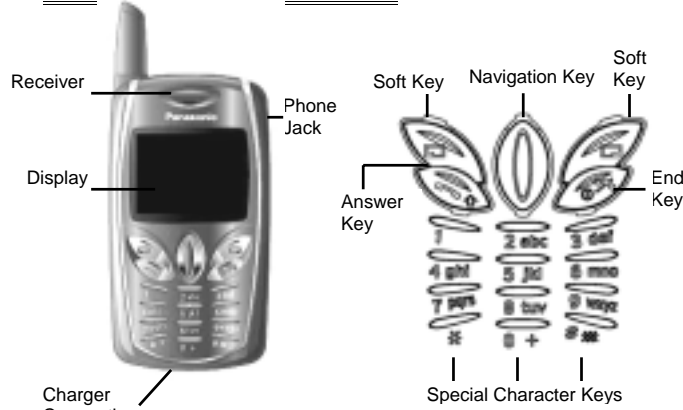

Navigation Key: moving up and down through the options in the display area. In idle mode, pressing to enter **Own Menu**. **Own Menu** is a shortcut to access your favourite menus. You can set it in the **Personalise**.



Perform the functions indicated by text shown on the LCD screen. In idle, long press left soft key to enter **Messages**, long press right soft key to enter **Profile Mode List**.



Numeric key pads. Long Press to enter a "+" or "P". When you need to dial an extension number, dial the phone number firstly then long press to add a "P" and enter the extension number.



Make a call or answer a call. In idle mode, check the last dialled list.




To end a call, return to idle mode, return to previous menu or reject an incoming call. Long press it to switch the phone on/off.



In idle, long press to activate **Browser**.

In idle, long press to switch the **Mute Mode** on and off.

## Display Icons

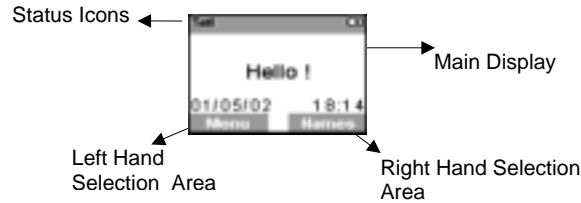 

### Status Icons

The status icons are displayed or animated according to the currently activated functions. The Antenna, Signal and Battery icons are displayed when the handset is switched on and connected to a network.



is displayed when you are registered to a non-home network – **roaming**.



is displayed when **call divert** is enabled.



is displayed when **vibration alert** is enabled.



is displayed when **all tones** or **ring volume** is off.



is displayed when an **unread message** is stored or lights when message area is full.





is displayed when **Phone Lock** is enabled.




indicates the voice mail icon.



indicates the received signal strength.

 indicates the battery level:  - low battery.

 indicates the alarm is set.

# Getting Started

## Removing the Battery



Open the battery by moving the release-latch upward and remove the battery away. Please see the left pictures.

**Note:** Before removing the battery, turn the phone off completely.

## Fitting the SIM

The SIM is inserted into the back of the phone underneath the battery. Hold the phone in a horizontal position where the antenna is on your right hand side and slide the SIM into the slot, with the metal connectors facing down. Ensure that the bevelled corner is positioning in the top left corner. Please see pictures above.



## Fitting the Battery

Locate the two lugs at the bottom of the battery into the back of the phone. Slightly push the battery and click into place. Please see the left picture.



## Charging the Battery

Insert the charger into the base of the phone and connect the travel charger to the socket-outlet. Then the charger indicator bar will start scrolling. It is recommended to charge 4 hours before first use.

### Battery Level Indicator

	While charging	Charging complete
Phone on		



When charging is completed, disconnect the charger from the phone.

## Disconnecting the Fast Travel

### Charger



Disconnect the charger from the main power supply. Pull downward charger plug to release it from the base of the phone. Please see the picture.

### Low Battery Warning


When the battery power is low a warning tone will sound and a **LOW BATTERY** (□) message will be displayed. If this occurs during conversation, finish your call immediately. The power will automatically shut off after the warning tone. Fully recharge the battery. (Calls can be made and received while the phone is charging). It is recommended that the battery is fully discharged to maintain an optimum battery life and performance. See "Charging the Battery" page 3.

## Basic Operation

Thank you for purchasing this Panasonic digital cellular phone. This phone is designed to operate on the GSM/GPRS triple band.


**Before operating this phone please read the "Important Information" section - see page i.**

### Switching the Phone On/Off



Be sure to insert the SIM card and battery beforehand. Long press  to switch the phone on or off.

### Making a Call

Ensure that the signal strength meter shows network coverage is available in the current area.



Enter the area code > phone number > .

### International Dialling

Idle + Hold  until "+" is displayed > Enter a country code > area code > phone number .

**Note:** Many countries / regions include an initial "0" in the area code. This should, in most cases, be omitted when dialling international numbers.

### Answering a Call



 to answer a call or  to reject the call.

If a call is not answered, the number of incoming calls missed will be displayed.

## Ending a Call


Press .











## Emergency Calls

To make an emergency call the antenna symbol  must be presented. Enter **112**  or if no SIM is fitted to the phone, press **SOS** to make an emergency call.

## Initially Setting the Time/Date

You can set time and date displayed on the idle screen.

**Idle > Menu > Application > Clock > Clock Setting > Time & Date > Set** to set time and date. Here is a step by step explanation for your reference. All instructions in this menu will be presented by symbol .



**<Step Instruction>** From Idle mode, press  **Menu** and use  to navigate **Application**, press  **Select** and use  again to highlight **Clock**. Press  **Select** and use cursor to highlight **Clock Setting**, press  **Select** and use  to select **Time & Date**. Press  and  **Set** to the editing screen and use  to move cursor to modify. You can choose the date and time format. Enter the digits for the date and time in the




format you like. Enter the digits for the time using 24 hour clock. Press **OK** return to the previous page.

## Accessing the Phonebook to Dial

You can access to the phonebook to browse or dial numbers.

**Idle > Names >**  **(searching a name) >** .

## Earpiece Volume Control

During a call, use  to decrease or increase the volume.

## SIM Lock

Once you set this function with your SIM card in it, this phone can only recognize your SIM. When other SIM card inserts, the phone code is needed to enter.

**Idle > Menu > Phone Menu > Security > SIM Lock > Enter 4 – 8 digital phone code > OK > Set (select On or OFF) > OK.**

To set SIM Lock, set “Phone Code” in the **Phone Lock** menu.

## Using the PIN(4 to 8 digits)

The PIN (Personal Identification Number) protects your SIM against unauthorized use. If you enable the PIN, every time the phone is turned on you will be prompted to enter the PIN.

The PIN2 controls security for the **Fixed Dial** and **Call Charge** metering. If either PIN/PIN2 is entered incorrectly 3 times the phone will be locked and then you will need to enter the PUK/PUK2 code. Contact your service provider for the PUK/PUK2 code.

*Note: If the PUK/PUK2 code is entered incorrectly 10 times, the SIM will cease to operate permanently. All information stored in the SIM will be lost and the SIM will need to be replaced. Contact your service provider for more details.*

## Enabling/Disabling the PIN

Once you enable the PIN, you have to enter the PIN whenever you switch the phone on.

**Idle > Menu > Phone Menu > Security > Codes > PIN Control > Enter PIN (Between 4 and 8 digits) > OK > Set (Select On or Off) > OK**


## Setting Alert Type

When required, the phone can be set up to vibrate or ring when a call is received. **Idle > Menu > Personalise > Alert Type** Choose one type from **None, Ring & Vibration, Vibration only** or **Ring only**.

## Key Guard

This function can avoid you from pressing the keypad accidentally, such as in the packet or purse.

**Idle > Menu > Key Guard > Yes**

After that, there will be a  shown on the idle display.

Disable the Key Guard: **Idle > Free > OK**

# Phonebook

It is possible to store phone numbers in two locations:

One is in the **SIM Phonebook**. The other one is in the **Mobile Phonebook** which means that if you change the SIM, the numbers in the phone will not lose.

The Mobile Phonebook has an advantaged function that you can group your phonebook entries together. Details please see **Creating a Number (3B)** below.

## Browsing Phonebook


You can browse **SIM Phonebook** and **Mobile Phonebook**.


- 1 **Idle > Menu > Phonebook > Browse > SIM Phonebook** or **Mobile Phonebook**
- 2 Search the name you wish to browse.
- 3 If you browse **SIM Phonebook**, press **Menu**, then **Edit**, **Delete**, **Copy to Mobile**, **Copy All to Mobile**, **Search** will be shown. Also if you browse **Mobile Phonebook**, **Copy to SIM**, **Search** will be displayed.

## Creating a Number

- 1 In **Idle** enter the numbers you would like to save and press **Save**
- 2 There is another operation to create a number. Press **Idle > Menu > Phonebook > Create > SIM Phonebook** or **Mobile Phonebook**

 
### **3A Choosing SIM Phonebook**

3A-1 Enter the Name --- see "Text Input" on page 15. Press  downward to the next screen.

3A-2 Enter Phone numbers with numerical keys. Then press  downward to the next screen.

10



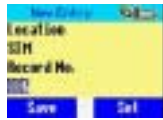


3A-3 Select Location. You can choose a storing location in SIM or FDN by pressing **Set**. Press down arrow key to the next screen.

3A-4 Select Record No. You can choose a location record number by pressing **Set**.

3A-5 Press **Save**.

### 3B Choosing Mobile Phonebook

 3B-1 Enter the Name --- see "Text Input" on page 15. Press down arrow key to the next screen.

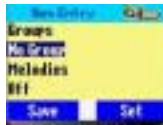

3B-2 Enter the Phone number with numerical keys.

Press downward to the next screen.

3B-3 Select a Group. You can locate phonebook members in different groups, such as Friends, Family etc., by pressing **Set**.

3B-4 Select Melodies. You can define a specific melody for each person.

3B-5 Press **Save**.


## Grouping Phonebook Entries

 
The ability to group phonebook entries together such as: Friends, Colleague, Family, Others, VIP or No Group etc., you can define a specific melody for each group. In this case, once a member calls, you can tell that this call is coming from which group.

### Reviewing the Numbers from Groups

You can only review and delete group members in this submenu. Members cannot be grouped here.



- 1 **Idle > Menu > Phonebook > Group Setting**
- 2 Use  to select a group
- 3 **View** the Groups' members or **Delete** the group members.



## Personalising Your Phone -----

-----  
If you haven't grouped your phonebook, you will see **List Empty**.

 


## Reviewing the Phonebook

The **Review** function in the phonebook menu shows how many locations are available in the **Phonebook**.

From **Idle > Menu > Phonebook > Review**

**A summary of the Phonebooks will be displayed.**



## Hot Key Dial Numbers

It is a quick access to dial phone numbers from the **SIM Phonebook**. Long press any digit key from 1 – 9 to recall the first 9 numbers stored in the corresponding SIM location. To activate the **Hot Key Dial**, you need to switch on this function.

**Idle > Menu > Phonebook > Hot Key Dial > On/Off**

## My Numbers

My Numbers is a convenient part of **Phonebook** where voice, fax and data phone number(s) can be stored and viewed. This feature depends on the SIM card.

### Adding Numbers

**Idle > Menu > Phonebook > My Numbers > Menu > Edit > enter**  
Phone Number > **Save**



# Personalising Your Phone

## Language

It is possible to change the language that the phone uses for both display messages and text entry.

**Idle > Menu > Personalise > Language >** (select a preferred language)

 
## Changing the Ring Tones

The ring tones and volumes of the phone can be changed to one of many pre-defined sounds. Alternatively you can use the **Melody Composer** to generate a custom ring tone.

**Idle > Menu > Personalise > Tones > Ring Type >** (select a preferred category) > (select a preferred sound)

## Composing a Melody

**Idle > Menu > Personalise > Tones > Melody Composer >** (select My Music) > **Melody Edit >** (select track)

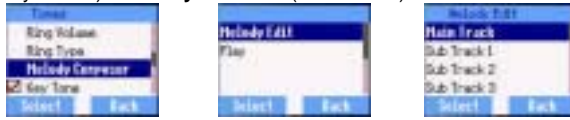

Using the following table as a reference, enter the notes (from the choice of low, middle and high), rests, and the durations of each, to generate your composition.

Key								Rep.	.	Rest	Duration	Low, Middle, High
Func.	C	D	E	F	G	A	B	Rep.	.	Rest	Duration	Low, Middle, High



If you want to attach the sub tracks, remember to save your earlier main track firstly and then press return to the previous page, then press to select **Sub Track** and start another editing. Once you finish the sub tracks edition, press **Menu** and **Save**. Press twice to jump to previous pages, and select **Play** to listen to your melody.

After composing the melody, press **Menu** and you can choose a Tempo



and Instruments. When the composition is complete to save it.

## Display Setting

You can set **Idle Screen**, **Greeting**, **Animation**, **Contrast** and **Back Light**.

### Greeting

A personalised greeting can be programmed for when the phone is switching on.

**Idle > Menu > Personalise > Display Setting > Greeting > Edit**

Use the text entry to add a greeting- see "Text Input" page 16.

## Profile Mode

In the Profile Mode, you can choose and customise an appropriate mode from **Headset**, **Normal**, **Meeting**, **Noisy**

**Idle > Menu > Personalise > Profile Mode >**  (select a mode) >  
**Activate > OK**

## User Messages

There are 10 pre-set common used messages for you to choose and there are 5 empty space for you to add. Press **Select** and all these messages can be edited.


**Idle > Menu > Personalise > User Messages >** select a preferred entry

## Defaults

Any personal settings can be returned to their factory default settings.

**Idle > Menu > Personalise > Defaults > Select > Yes**

## Own Menu

It is a shortcut access that you can tick on/off the following options: Browser, Game, Phonebook, Language, Alert Type, Tones, Idle Screen, Profile Mode, Alarm, Calculator, Schedule, Received List, Send Message, Clock Setting and Currency. Once these options are selected, you can access to the **Own Menu** selection from Idle by pressing .

## My Phonebook

Through this option, you can browse the phonebook name list.

**Idle > Menu > Personalise > My Phonebook >** 

	<b>SIM</b>
	<b>Mobile</b>

However, you can choose **Mobile Phonebook** or **SIM Phonebook** in this menu after that when returning to **Idle**, press **Names** and you can browse the selected phonebook.

## Game (STK)

If SIM card provides SIM Tool Kit services, this menu will become the STK gateway. You can still access to game from **Application**.

**Idle > Menu > Game** or **Idle > Menu > Application > Game**

When you see the mouse, press Numerical key from 1 to 9 to hit the mouse with the highest speed. Keep in mind that the Cat is not your target. Example: if you pres 5, you will hit the thing hidden in the 5<sup>th</sup> hole. This game will end automatically within a limited period of time. After ending, you will get a score. This score might be the highest one in the record. Good luck!

## Text Messages

It is possible to receive, display, edit and/or send text messages up to 760 characters (depending on characters or symbols).

### Setting the Phone for Short Text

#### Messages

Before a text can be sent, it is necessary to enter the Message centre number into Parameters (the Service Provider will supply the Message Centre number).

The Message Centre number may have been pre-programmed on the SIM

 
### Setting the Message Centre

#### Number

**Idle > Menu > Messages > Parameters > Message Centre**  
 Enter message centre number in international dial form – see  
 “International Dialling” page 5.

## Creating a Text Message

**Idle > Menu > Messages > Create** Press numeric  
 key repeatedly (if required) to enter and  
 select characters, numbers or special symbols.   
 to switch “Input Mode”. Press to turn T9 on/off.



### EMS (Enhanced Message Service)

While editing the message, press **Menu > Picture & Sound** can insert/add pictures or sound into the message.

However, only if the receiver's mobile phone support this task.

Use to choose the pictures you want to send and press .

Or press to select music.






Please note that one message can only transmit 10 sounds.

Once complete the message, press **Menu to Send, Save or Save and Send**. After select **Send**, enter the destination phone number or press **Names** to navigate. Then press **OK** to send.

### Text Mode (abc, ABC and Numeric)


	1 / ( ) < = > % ~ € &
	a b c 2 ä à ç or A B C 2 Ä
	d e f 3 é è or D E F 3 É
	g h i 4 ì or G H I 4
	j k l 5 or J K L 5
	m n o 6 ö ñ ò or M N O 6 Ö Ñ

	p q r s 7 ß or P Q R S 7
	t u v 8 ü ù or T U V 8 Ü
	w x y z 9 æ ø å or W X Y Z 9 Æ Ø Å
	Space 0 . , ? ! + - : ; ' " ' ; _
	* Γ Δ Θ Λ Ξ Π Σ Φ Ψ Ω
	Long press: space # £ \$ ¥ ¤ @ \ §
	Short press to turn T9 on or off.
	Switch Input Modes

## T9® Text Input


Using this mode of text entry dramatically reduces the number of key presses required:

Press a key once for any letter you require on that key. The desired letter may not be displayed. Continue pressing other keys until the end of a word is reached; then check that the word has been typed correctly before continuing on to the next word.

If the combination of letters typed has produced a word which is not the one you require, press  repeatedly until the correct word is displayed. Continue to the next word.

If the word you require is not in the internal dictionary (i.e. It is a proper noun or a rarely used word) then it should be entered using the Normal (ABC) mode.



## Other Text Modes

To access any of the other text entry modes use  to switch through until the desired mode.

When using Capital letter mode (ABC), number mode (123), etc., each time a key is pressed in quick succession it will display the next


character available on that key. Releasing the key, or pressing another key will enter the currently displayed character and the cursor will move to the next position.


## Editing Text

Long press  will move cursor up or down one text line (or field in Phonebook). Pressing  will move left or right one character. When the cursor is moved over a character and another key pressed this will insert the new character immediately before the selected character.

Pressing **Clear** will delete the character to the left of the cursor.

## Receiving Text Messages

When a Short Text Message is received completely, the message indicator  will flash on the display, with an audible tone.

**Idle > Menu > Messages > Received List > Read** to read the message. Use  to navigate through the messages and to identify the sender and the time the message was sent.

**Note:** If the message indicator is displayed, this means that the message area is full and you need to delete old messages in order to receive new messages.

### Reply, Forward, Edit and Delete a Message

When a message is received, read the options and follow the prompts to create a reply and edit new message or forward, delete the message.

## User Messages

Default messages can be chosen by you. To create or edit, please see

"User Message" on **Personalise** page 10. Use  to select.

**Idle > Menu > Messages > User Messages >** select a preferred entry.

## Review

Review allows you to check usage of the message area.

**Idle > Menu > Messages > Review**



## Parameters

### Idle > Menu > Messages > Parameters

The following parameters can be set:

Text Messages/Key Guard -----  
-----

### Message Centre

Enter or change the Message Centre's number. Normally the number has already saved in the SIM, so you may not need to enter it again.

### Protocol

The Message Centre may be able to convert the message to the format specified by the selected protocol.

### Lifetime


This is the duration that your message is stored at the Message Centre. Delivery attempts will be repeated until the message has been delivered or life time expires.

### Report

When your message has been delivered, a confirmation will be received.

## Broadcast


You need to specify the 'topic(s)' of information and the language that you wish to receive as broadcasts and tick the "**Broadcast**" on before you can receive them.

**Idle > Menu > Messages > Broadcast > Topic List > Current**  to cycle through the available topics. To add new topics, select <Add Topic> and select a preferred topic, or select **User Defined** to create a new topic.

**Note:** This function should depend on the Network Service Operator.

## Key Guard

The Key Guard function is used to prevent any keys from being accidentally pressed e.g. when the phone is being carried.  
**Idle > Menu > Key Guard > Select > Yes** to enable "Key Guard"

Emergency calls can still be made - see "Emergency Calls" page 6.  
Press 112 and 

**Note:** When making emergency calls with the "Key Guard" enabled, there will be no visual indication that the number is being dialled

## Browser ----- -----

### Disabling Key Guard

When **Free** is displayed, press **Free > OK**.

## Browser


The phone's WAP (Wireless Application Protocol) Browser enables the you to access Internet services supported by the network, such as news, weather reports, sport etc.

### Browser Setting


Before Internet services can be accessed, you need to subscribe to your network operator or Internet Service Provider (ISP) to enable the relevant configuration information. Please contact your network service provider to ensure that your network setting is right.

**Note:** Modifying previously entered settings can cause failure of the Browser.

#### **Idle > Menu > Browser > Sever Setting**

There are two servers may be pre-set up on the phone, so use  to select one of the server settings. Otherwise, you have to enter the essential data (Sever Name, IP Address, IP Port, Homepage, Select Mode, Linger Time, CSD Settings and GPRS Settings) by manual at the first time.

Those configuration parameters will be given by Network service provider.

Once completing the entry, use  to choose one of the setting then **Activate**.

The first time that the browser is activated there will be no content stored so the Home URL content will be displayed (as defined by the network operator). The Home URL will be recalled from the cache, each time the browser is activated. (Cache is the phone's memory that stores content downloaded in the past).

## Phone Menu ----- -----

### Browser Menu

#### Starting Browser

**Idle > Menu > Browser > Start Browser**

Once you have set and activated the browser setting, you can start browsing the Home page of network operator.

#### Bookmarks


**Idle > Menu > Browser > Bookmarks**

In this menu, there are 10 empty places for you to enter the favourite websites. You can also Edit, Erase, Launch the website.

## Phone Menu

### Call Service

#### Time/ Charges

**Idle > Menu > Phone Menu > Call Service > Time/Charges** Use  to select one of the functions: **Last Call**, **All Voice Calls**, **Cost Left**

**Last Call** function will display the duration and call charge, if available, of the last call. Times are indicated as: minutes (0-59) and seconds (0-59).

**All Voice Calls** function displays the accumulated duration and call charge, including incoming and outgoing calls.

**Cost Left** function will show the left units that you have set beforehand. (Please refer to **Setting the Max Cost** below )

### Call Waiting

Once you activate this function, you can receive a second call while talking.

**Idle > Menu > Phone Menu > Call Service > Call Waiting**

### Call Identification

In the Call Service menu, the Caller's ID and Withhold ID functions allow you to check the status of whether a Caller's Identification is seen.

**Idle > Menu > Phone Menu > Call Service > Withhold ID or Caller's ID**

**Note:** When checking the status the phone must be registered with a network.

### Charge Settings

Firstly, a price per unit must be entered. This is the cost that the Service Provider charges for one unit of call time.

**Idle > Menu > Phone Menu > Call Service > Charge Settings**

Edit the values. At this point you will be asked to enter your PIN2. Enter a currency unit.

#### Setting the Maximum Cost

This function allows you to pre - determine the maximum cost of calls made.

**Idle > Menu > Phone Menu > Call Service > Charge Settings > Max**

**Cost** Enter the maximum unit you want to set. At this point you will be

asked to enter your PIN2.


Enter a value (number of units) which is to be the maximum permitted, and the corresponding cost will be displayed.


**Note:** The duration of one unit may vary during the day, peak and off-peak times. Therefore, the call charge can be calculated accordingly. However, call charge information may not give an accurate reflection of the tariffs charged by your Service Provider.

## Diverting Calls

Voice call can be diverted using different circumstances and to different numbers. For example you may wish voice calls to be diverted to voicemail box event that the phone is switched off.

**Idle > Menu > Phone Menu > Call Divert**

Use  to select the circumstances that you wish to activate call diverts. Then enter phone number to divert to.

When a divert situation is enabled the divert icon (  ) is displayed.


When updating or checking the status of **Call Divert** the phone must be registered with a network.

## Restricting Calls

### Call Barring

The "Call Bar" function is used to restrict certain outgoing and/or incoming calls. "Call Bar" is controlled by a security password that is supplied by the Service Provider. When updating or checking the status of Call Bar the phone must be registered with a network. Different Call Bar restrictions can be used for voice call. Any combination of call restrictions can be set.

**Idle > Menu > Phone Menu > Security > Call Bar**

Use  to select the circumstances you need, then enter call bar password.

## Network

Network setting enables you to change the network parameters.

### Auto Network

You can set "Auto Network" **On** or **Off**.

### New Network

Once you set the "Auto Network" **On**: the phone will automatically search an available network for you. If you set it **Off**, you can select a network manually.

### Network List

You can create and edit a network list according to your preferences.

### Band Select

You can choose a network band: 900/1800, 900/1900, 900, 1800, 1900MHz.

## Connectivity

You can check the transmission capacity and time. Also set GPRS setting and CSD setting (please refer to **Browser** Server Setting).

# Application

## Game

Idle > Menu > Application > Game

Please refer to Page 14.


## Schedule

The Schedule can be used to register reminders for personal events as well as planning holiday periods.

**Idle > Menu > Application > Schedule** The Schedule can be presented as a weekly or monthly format. Use numerical keys 2, 4, 6, 8 to select a day.

 


For the first time entry, highlight the date and press **Agenda > Select > New entry**. Choose a Type from **Memo, Meeting**

Then press  downward to add a **Description**



Enter Start/ End **Date and Time** then press **Save**.



## Clock

This phone incorporates a clock with date/time, an alarm and a power off feature.

### Clock Setting


**Idle > Menu > Application > Clock > Clock Setting > Time & Date**

Press **Select** to set time and date. In the "Clock Setting" menu, you can choose to display the time in the idle mode or not.

**Idle > Menu > Application > Clock > Clock Setting > Display Time > On/Off**

### Setting the Alarm

**Idle > Menu > Application > Clock > Alarm**

Press **Set** to set **Time** and choose a repeat format. Enter the digits with 24 hour clock. Press  to leave. When the set time is reached, the alarm will sound. If the alarm is due during a call, an alarm indicator will display.

**Caution:** Ensure that the setting of the Alarm will not contravene any regulations whereby it may automatically power on when in an aircraft or medical facility etc. - see "Important Information" page i.



### Setting a Power Off Time

The phone can be set to turn itself off automatically at a specified time using the Power Off feature. The procedure for setting/adjusting the Power Off automatically is similar to the setting of Alarm.



## Calculator


There are four arithmetic calculations enabling you to perform simple calculations (addition/subtraction/multiplication and division).

**Idle > Menu > Application > Calculator**

Enter a number (maximum 7 digits) and it will be displayed on the upper right of the display. If a decimal point is required press , if a minus sign is needed press .



Use  to select the arithmetic operation you need.  
Enter a number (maximum 7 digits) and press  (=) then the result will be obtained.


If  is used to select another arithmetical operation to perform, an intermediate calculation will be performed and the result displayed on the upper line

## Currency

The currency convertor enables the you to convert from/to a home currency using a conversion rate that you enter.

**Idle > Menu > Application > Currency**

### Rate Setting

Enter an exchange rate in the space where the pencil is. Press **OK** and **Save**. If a decimal point is required, then press .

### Rate Computing

Since you have saved the exchange rate, enter the numbers you want to convert and press **Convert**.

## Melody Composer

**Idle > Menu > Applications > Melody Composer** Details please refer to **Changing the Ring Tones** on page 11.

## Melody Manager

Check the list of melodies or downloaded melodies.

## Picture Manager

You can find a list of predefined pictures, and also you can view, delete, rename, set the idle screen from the downloaded pictures.

## Records




### Last Dialed Numbers and Redial

Recently dialed phone numbers will be stored in **Last Dialed**.

If Caller Identification is known, caller's phone number, for an answered call will be stored in the **Answered** menu and an unanswered call will be stored in the **Unanswered** menu.

When the store is full the next phone number will overwrite the oldest.

**Idle > Menu > Records** to view the **Last Dialed**, **Unanswered**, **Answered**.

Use  to target the phone number (or name) you wish to redial and press . Or in idle, press  to view the last dialed numbers directly. You can modify, save or delete the phone number before dialling.

### Erase Records

**Idle > Menu > Records > Erase Records** You can **Erase All**, **Erase Last Dialed**, **Erase Answered**, **Erase Unanswered**.


## In Call Menu

During a call, there are several advanced functions, however; some of the in-call options are provided by network service provider.

### Holding Calls


#### Holding a Call

During a call, the display will show **Menu** and **Hold**.


- 1 Press **Hold**.
- 2 "Call Held" displayed.
- 3 Press  back to retrieve the call.

## Call Waiting

During a call, once a second call is coming, the display will show **Reject** and **Swap**




 
- 1 Press **Swap**. Hold the first call. Talk to the second person.
- 2 "Call Held" displayed.
- 3 Press  select **Swap** to retrieve the call.

## Hands Free

During a call, press  **Menu > Hands Free** Then **Hands Free** will be activated. In this case, you can speak to the phone without holding it.

## Accepting/ Rejecting a Second Call

A second call can be received, if "Call Waiting" is switched on. This is enabled from the **Idle > Menu > Phone Menu > Call Service > Call Waiting**. During a call:


- 1 Press  or  to accept a call.  
The current call will be placed on hold.
- 1 Press  or  to **Reject**.

## Conference

A conference call enables three to be in conversation at the same time. During a call, press **Menu > Conference**

## Call Transfer

When two calls are in use:

During calls, press **Menu** and Use  to select **Call Transfer**.  
The two calls will be connected to each other and your call will be ended.

**Note:** Two calls transfer cannot be utilized while in Conference mode.



# Menu Structure

## 1 Personalise

- Language
- Tones
  - Ring Volume
  - Ring Type
  - Melody Composer
  - Key Tone
  - Warning Tone
- Display Setting
  - Idle Screen
  - Network Name
  - Greeting
  - Animation
  - Contrast
  - Backlight
  - Colour Setting
- Alert Type
  - Ring & Vibration
  - Vibration Only
  - Ring Only
  - None
- Profile Mode
  - Normal
  - Meeting
  - Noisy
  - Headset
- User Messages
- Auto Answer
- Any Key Answer
- Defaults
- Own Menu
- My Phonebook
  - SIM
  - Mobile
  - T9 Input

## 2 Game (STK)

## 3 Phonebook

Browse

- Create
- Group Setting
  - Friends
  - Colleagues
  - Family
  - Others
  - VIP
- Review
  - My Numbers
  - Hot Key Dial
  - My Phonebook

## 4 Browser

- Start Browser
- Bookmarks
- Sever Setting

## 5 Key Guard

## 6 Messages

- Created
- Inbox
- Outbox
- Archive
- User Messages
- Review
- Parameters
- Broadcast

## 7 Phone Menu

- Call Service
  - Time/Charges
  - Call Waiting
  - Withhold ID
  - Caller's ID
  - Charge Settings
  - Phone line
- Call Divert
  - All Voice Calls
  - Not Reachable
  - No Reply

- Busy
- Status Check
- Cancel All
- Security
  - Call Bar
  - Codes
  - Fixed Dial
  - SIM Lock
- Network
  - Auto Network
  - New Network
  - Network List
  - Band Select
- Connectivity
  - GPRS info
  - Bearer Setting

## 8 Applications

- Games (STK)
- Schedule
- Clock
  - Clock Setting
  - Alarm
  - Power Off Time
- Calculator
- Currency
- Melody Composer
- Melody Manager
- Picture Manager

## 9 Records

- Last Dialed
- Answered
- Unanswered
- Erase Records

## Trouble Shooting

Problem	Cause	Remedy
Phone will not switch on		Check that the battery is fully charged and correctly connected to the phone
Extremely short battery life for a new battery	The network you are using and the condition of the battery can affect battery life	
Short battery life for an old battery	The battery has worn out	Replace with a new fully charged battery
The charging indicator does not light, the battery level indicator does not appear and the phone cannot be switched on when charging	The battery is not attached to the phone or when the battery has been deeply discharged the phone will take a short time until the indicator lights	Leave the phone charging the battery for a few minutes before the indicator is lit and attempting to switch it on
Battery fails to charge	The battery is not attached to the phone	Ensure the battery is fitted to the phone prior to commencing charging.

	Battery has been connected to the phone after AC adapter has been switch on	Ensure the battery is fitted to the phone prior to commencing charging.
Calls cannot be made	The phone is locked	Unlock the phone
	Outgoing calls are barred	Disable the outgoing call barring, or barred dial
Calls cannot be made from Fixed dial Store	The phone is not registered to a network	Move to a coverage area and operate your phone after it has registered with a network.
		Check your SIM supports Fixed Dial
		Check if the Fixed Dial is switched on Check the phone number is stored in the Fixed Dial Switch the phone on
Calls cannot be received	The phone is not switched on	Switch the phone on.
	Incoming calls are barred	Disable the incoming call barring.
	The phone is not registered to a network	Move to a coverage area and operate your phone after it has registered with a network.
Emergency calls cannot be made	You are not in a GSM coverage area	Check that the antenna symbol is display- move to a coverage area and operate your phone when antenna symbol is displayed
Phone numbers cannot be recalled from phonebook	The phone is locked	Unlock the phone

---

	Phone number has been restricted	Switch off restriction
--	--	------------------------

---

## WAP Settings

Use the table below to record your WAP settings.

Item	Current Setting
Server Name	
Dial Number	
Call Type	
Login Name	
Password	
IP Address	
IP Port	
Homepage URL	
Linger Time	



# Specifications

## Phone (Including Battery)\*

Type	GSM 900 Class 4 GSM1800 Class 1 GSM1900 Class 1
Temperature Range	+5°C - +35°C
Charging	-20°C - +60°C
Storage	
WAP	WAP 1.2.1
Weight	Max 65 g
Dimensions	
Height x Width x Depth	77 x 43 x 16.9mm (excluding antenna)
Supply Voltage	720 mAh Li-ion
Standby Time	78.3 Hrs ~ 230 Hrs
Talk Time	1.6 Hrs ~ 7.9 Hrs
Charging Time (Phone off)	Less than 120 mins (Travel Charger)
Antenna	External Stub Antenna
SIM Type	3V Plug-in only SIM

**Note:** Charge time will be longer when the phone is turned on. Battery life is affected by the network being used, SIM card usage, and the condition of the battery.



© Panasonic Mobile Communications Co., Ltd. 2003  
Information in this document is subject to change without notice. No part of these instructions may be reproduced or transmitted in any form or by any

means without obtaining express permission from Panasonic Mobile Communications Co., Ltd.

