
User Manual

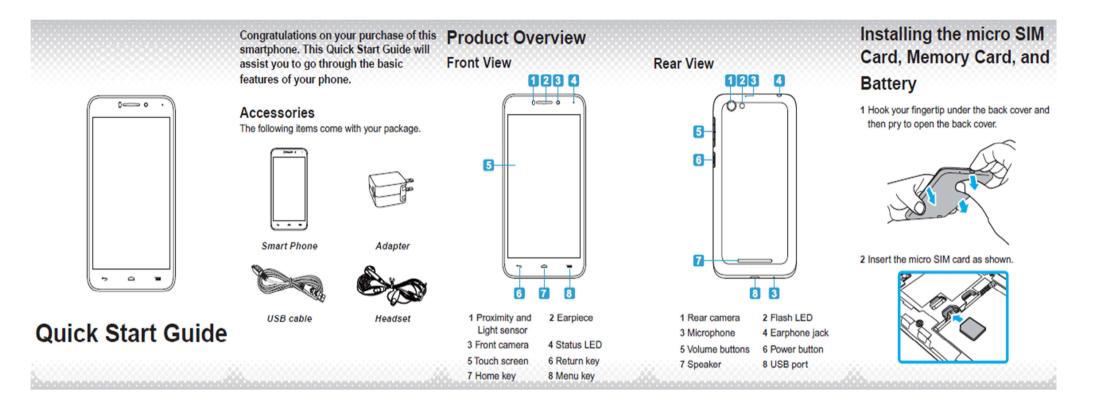





3 Insert the memory card with the gold contacts facing down. Push it fully into the slot until it clicks into place.

4 Insert the battery.



5 Align the hooks on the back cover with the designated holes on the device and push the back cover firmly to secure it into place.

Charging the Battery



- Pull out the pin on the AC adapter.
 Connect one end of the USB cable to the AC adaptor.
- 3 Connect the other end of the USB cable to the micro USB connector of the device.4 Plug the AC adaptor to the wall outlet to start charging.

Turning On Power

To turn on the power, press and hold the Power button to turn on the device.

Unlocking the Screen

After powering on the device, the locked Home screen is displayed.

To unlock the screen, drag (a) towards fin.



Home Screen

From the Home screen, you can quickly access common features and view notifications, battery and connection status on the status bar.

Tap 🛞 and scroll left/right to access all preinstalled applications in your phone.



Adjusting Volume

There are two ways to quickly adjust the volume of your phone:

- Press the Volume (+/-) buttons repeatedly to adjust the volume.
- Press the volume button once. Drag the volume slider to adjust the volume.



Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.