



<i>Important Information</i>	5
<i>Safety And Precautions</i>	6
<i>Before You Start</i>	9
<i>Getting Started</i>	16
<i>Basic Calls and Phone Use</i>	21
<i>Call Options</i>	26
<i>Personalizing Settings</i>	28
<i>Text Entry</i>	41
<i>Message</i>	44
<i>i-mode</i>	49
<i>Camera</i>	59
<i>Phonebook</i>	62
<i>My data</i>	68
<i>Java™ application</i>	73
<i>Accessory</i>	74
<i>Index</i>	82

## **Important Information** **5**

Read this information before using your phone ..... 5

## **Safety And Precautions** **6**

Emergency services ..... 6

General care ..... 6

Aircraft safety ..... 6

Hospital safety ..... 6

General safety ..... 6

Road safety ..... 6

Vehicles equipped with an air bag ..... 7

Third party equipment ..... 7

Service ..... 7

Non-ionizing radiations ..... 7

Efficient use ..... 7

Radio frequency energy ..... 7

Disposing of your used NEC products ..... 7

Exposure to radio frequency energy ..... 7

Licenses ..... 8

## **Before You Start** **9**

Cellphone system structure ..... 9

Parts and functions ..... 10

Display information ..... 10

Key functions ..... 11

Main menu ..... 11

Keypad shortcuts ..... 12

Main phone features ..... 13

Displayed icons for LCD ..... 14

Overview of menu function ..... 15

## **Getting Started** **16**

SIM card ..... 17

Preparing the battery ..... 18

Powering on the phone ..... 20

## **Basic Calls and Phone Use** **21**

Making an emergency call ..... 21

Dialing calls ..... 21

Ending a call ..... 21

Using handsfree ..... 22

Receiving calls ..... 22

Placing a call on hold ..... 23

Making a second call ..... 23

Receiving a second call (subscription dependent) ..... 23

Making multi-party calls (subscription dependent) ..... 23

Unsuccessful calls/Auto redial ..... 24

Call features ..... 24

Keylock/Auto key lock ..... 25

Screen Saver ..... 25

## **Call Options** **26**

Dialed calls ..... 26

Call lists ..... 26

Charge Info ..... 26

Charge settings ..... 27

## **Personalizing Settings** **28**

Voice volume .....	28
Answer options .....	28
Minute reminder .....	29
Auto key lock .....	29
ALS setup .....	29
Time/date .....	29
FAK setting .....	30
Language .....	30
Phone modes .....	31
Power on greetings/animations .....	33
Wallpaper .....	34
Colour style .....	34
Animation .....	34
Brightness .....	34
Contrast .....	35
Calls .....	35
Security .....	37
Network .....	39
T9 input .....	40
Reset settings .....	40

## **Text Entry** **41**

Mode change .....	41
Text edit screen option menu .....	41
T9 language .....	42

## **Message** **44**

Message overview .....	44
Predefined text .....	46
Message settings .....	47
Memory status .....	47
Cell broadcast .....	48

## **i-mode** **49**

What is i-mode .....	49
What Can be Downloaded? .....	49
i-mode icon .....	50
i-mode Settings .....	50
iMenu .....	51
Mail .....	51
Java application .....	56
SMS .....	56
Bookmarks .....	57
Go to webpage .....	57
Saved pages .....	58
Settings .....	58

## **Camera** **59**

Taking a picture .....	59
Camera (before taking a picture) .....	60
Camera ption menu (after saving a picture) .....	61

Lists .....	62
Storing numbers & name in phonebook .....	63
Own number .....	67

**My data****68**

Record Voice .....	68
Photos and pictures .....	69
Sounds .....	71
Memory status .....	72

**JavaTM application****73****Accessory****74**

Scheduler .....	74
ToDo list .....	75
Notepad .....	76
Alarm clock .....	77
Auto off .....	77
Auto on .....	77
Countdown .....	78
Stopwatch .....	78
Calculator .....	78
Currency converter .....	79
Composer .....	80
Voice memo .....	80
PC sync .....	81

# Important Information

*Read this information before using your phone*

## Conditions of Use

Operation of this NEC mobile phone is subject to the following two conditions; (1) this device may cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This NEC mobile phone generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the device on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving internal antenna.
- 2 Increase the distance between the device and receiver.
- 3 Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

The radiated output power of this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 2.5 cm or further from the human body. However, the user of wireless radios may be restricted in some places or situations, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio. Several restrictions and cautions of using mobile phone are listed in the *Safety and Precautions* in the next chapter.

## FCC RF Exposure Information

In August 1996 the Federal Communication (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previous set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved internal antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

## Body-worn Operation

This device was tested for typical body-worn operations. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the phone, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## Declaration of Conformity

The product was shown to meet the requirements of the R&TTE Directive through third party tests to harmonized standards.

Hereby, *Quanta Computer Inc.*, declares that this NEC mobile phone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

# Safety And Precautions

## Emergency services

To make an emergency call in any country

- Press 112, the worldwide emergency number.
- Ask the operator for the service which you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Services. Give your location and, if possible, remain stationary to maintain phone contact.  
The 112 emergency number service is available on every digital network service. The number 999 is an alternative emergency number for UK only, and can only be used with a valid SIM card.
- *Due to the nature of the cellular system, the success of emergency calls cannot be guaranteed.*
- *For customized local emergency numbers, please check with your local units for the number.*

## General care

A cellphone contains delicate electronic circuitry, magnets, and battery systems. You should treat it with care and give particular attention to the following points.

- Do not allow the phone or its accessories to come into contact with liquid or moisture at any time.
- Do not place anything in the phone.
- Do not expose your phone to extreme high or low temperatures.
- Do not expose your phone to naked flame, cigars or cigarettes.
- Do not paint your phone.
- Do not drop or subject your phone to rough treatment.
- Do not place the phone alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the phone.
- Do not leave the phone or the battery in places where the temperature could exceed 60 degrees celsius; e.g. on a car dashboard or on a window sill, behind glass in direct sunlight, etc.
- Do not remove the phone's battery while the phone is switched on.
- Take care not to allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.
- Do not dispose battery packs in a fire. Your phone's Li-ion batteries may be safely disposed at Li-ion recycling points.
- Do not put your phone's battery in your mouth as battery electrolytes may be toxic if swallowed.
- Do not attempt to dismantle the phone or any of its accessories.
- This equipment is fitted with an internal battery that can only be replaced by a qualified service engineer. There is a risk of explosion if the battery is replaced by an incorrect type. Disposal of used battery must be in accordance with the manufacturer's instructions.
- Using any battery pack, AC adapter or Vehicle power adapter (option) not specified by the manufacturer for use with this phone creates a potential safety hazard.

- The earpiece may become warm during normal use and the unit itself may become warm during charging.
- Use a damp or anti-static cloth to clean the phone. Do NOT use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the casing.
- Recycling: the cardboard packaging supplied with this phone is ideal for recycling.
- Do not leave the battery pack empty or disconnected for a long time, otherwise certain data may be initialized.
- Your phone contains metal which may cause itching, rashes or eczema depending on your constitution or physical condition.
- Take care not to put your phone in the back pocket of your trousers or skirt and then sit on it. Also, do not put your phone at the bottom of a bag which may be subjected to excessive weight or pressure. Doing so may damage the LCD and camera lens and cause them to malfunction.

## Aircraft safety

- Switch off your cellphone and remove its battery when inside or near the aircraft. The use of cellphones in the aircraft is illegal. It may be dangerous to the operation of the aircraft and may disrupt the cellular network.  
Failure to observe this instruction may lead to suspension or denial of cellphone service to the offender, or legal action, or both.
- Do not use your phone on the ground without the permission of the ground crew.

## Hospital safety

- Switch off your phone in areas where the use of cellphones is prohibited. Follow the instructions given by the respective medical facility regarding the use of cellphones on their premises.

## General safety

- Observe "Turn off 2-way radio" signs, such as those near stores of fuel, chemicals or explosives.
- Do not allow children to play with the phone, charger or batteries.
- Small parts are included in your phone. Keep them out of reach of small children, for whom it could cause a choking hazard.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a cellphone is used next to them. Observe any warning signs and manufacturer's recommendations.
- If you have a weak heart, you should take extra precautions when setting functions such as the Vibrator and Voice volume functions for incoming calls.
- If you set the Vibrator setting to anything other than OFF, be careful that the phone is not near a source of heat (e.g. a heater) and that it does not fall from a desk due to the vibration.

## Road safety

- You MUST exercise proper control of your vehicle at all times. Give full attention to driving.
- Observe all the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call if driving conditions so require.
- You MUST NOT stop on the hard shoulder of a motorway to answer or make a call, except in

- an emergency.
- Switch off your cellphone at the refuelling point, such as a petrol station, even if you are not refuelling your own car.
  - Do not store or carry flammable or explosive materials in the same compartment where a radio transmitter is placed, such as a cellphone.
  - Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment can advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by radio transmissions, consult your dealer and do not switch on your phone until it has been checked by qualified and approved installers.

### Vehicles equipped with an air bag

An air bag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improper installation of wireless equipment in vehicle could result in serious injury when the air bag inflates.

### Third party equipment

The use of third party equipment, cables or accessories, not manufactured or authorised by NEC, may invalidate the warranty of your cellphone and also adversely affect the phone's operation. For example use only the NEC mains cable supplied with the AC charger.

### Service

The cellphone, batteries and charger contain no user-serviceable parts. We recommend that your NEC cellphone be serviced or repaired by an NEC authorised service centre. Please contact your Service Provider or NEC for advice.

### Non-ionizing radiations

The radio equipment shall be connected to the antenna via a non-radiating cable (e.g. coax). The antenna shall be mounted in a position such that no part of the human body will normally come into contact with any part of the antenna unless there is an intervening metallic screen, for example, the metallic roof.

Use only the internal antenna that has been specifically designed for your phone. Use of unauthorized antennas, modifications or attachments could damage the mobile phone and may violate the appropriate regulations, causing loss of performance and radio frequency (RF) energy above the recommended limits.

### Efficient use

For optimum performance with minimum power consumption, please note the following:

- Your phone has the internal antenna. Do not cover part of the internal antenna of the phone with your hands. This affects call quality, may cause the mobile phone to operate at a higher power level than needed and may shorten talk and standby times.

### Radio frequency energy

Your phone is a low-power radio transmitter and receiver. When it is turned on, it intermittently receives and transmits radio frequency (RF) energy (radio waves). The system that handles the call controls the power level at which the phone transmits.

### Disposing of your used NEC products



- In the European Union

EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes mobile telephones or electrical accessories, such as chargers or headsets. When you dispose of

such products, please follow the guidance of your local authority and/or ask the shop where you purchased the product. The mark on the electrical and electronic products only applies to the current European Union Member States.

- Outside the European Union

If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority and ask for the correct method of disposal.

### Exposure to radio frequency energy

Your mobile phone is designed not to exceed the limits for exposure to RF energy set by national authorities and international health agencies. \* These limits are part of comprehensive guidelines and establish permitted levels of radio wave exposure for the general population. The guidelines were developed by independent scientific organizations such as ICNIRP (International Commission on Non-Ionizing Radiation Protection) through periodic and through evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

\* Examples of radio frequency exposure guidelines and standards that your phone is designed to conform to:

- ICNIRP, "Guidelines for limiting exposure to time-varying electric, magnetic, and electromagnetic fields (up to 300 GHz)-International Commission on Non-Ionizing Radiation Protection (ICNIRP)", Health Physics, vol. 74, pp. 494-522, April 1998.
- 99/519/EC, Council Recommendation on the limitation of exposure to the general public to electromagnetic fields 0 Hz-300 GHz, Official Journal of the European Communities, July 12, 1999.
- ANSI/IEEE C95.1-1992, "Safety levels with respect to human exposure to radio frequency electromagnetic fields, 3kHz to 300 GHz". The Institute of Electrical and Electronics Engineers Inc., New York, 1991.
- FCC Report and Order, ET Docket 93-62, FCC 96-326, Federal Communications Commission (FCC), August 1996.
- Radio communications (Electromagnetic Radiation Human Exposure) Standard 1999, Australian Communications Authority (ACA), May 1999.



## Licenses

- T9<sup>®</sup> Text Input and the T9<sup>®</sup> logo are registered trademarks of Tegic Communication.™ T9 Text Input is licensed under one or more of the following:  
U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; Australian Pat. Nos. 727539, 746674, and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595, and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959, and 71979; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1. People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional patents are pending worldwide\*
- ©2002 Music Airport Inc., <http://www.music-airport.com/Compact NetFront, JV-Lite, AVE, AVE-SSL and AVE-TCP> are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc in the U.S. and other countries.
- This product contains ACCESS CO., LTD's Compact NetFront™ Plus internet browser software.  
Copyright ©1998-2005 ACCESS CO., LTD.

### **Compact NetFront Plus**

Compact NetFront™ is a registered trademark or trademark of ACCESS CO., LTD in Japan and selected countries worldwide.


- i-mode and i-mode logos are trademarks or registered trademarks of NTT DoCoMo.

For the purpose of improvement, the specifications for this product and its accessories are subject to complete or partial change without prior notice.

# Before You Start

## Cellphone system structure

Every time you use your phone, there are several components involved for the phone to operate successfully and to process a call:

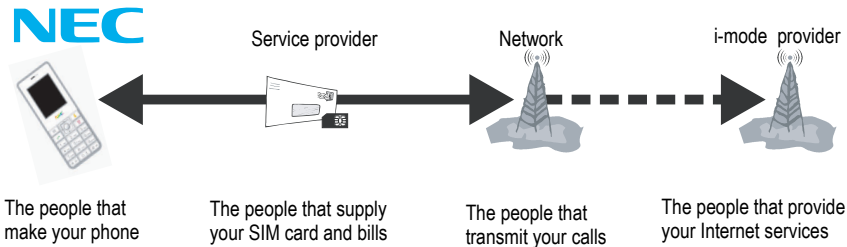


All the features described in this user manual are supported by your phone. However, for all these features to work, you must have a valid SIM card (supplied by your service provider) that also supports these features. If the network that transmits your calls does not support a certain feature, the feature will not work even if you have a fully featured SIM card. This last point is especially important when you are roaming networks.

### User Guide Legend

*This type of paragraph contains important information worth noting.*

*This type of paragraph contains details of where to find related information to the topic being explained.*

*This type of paragraph contains important information.*

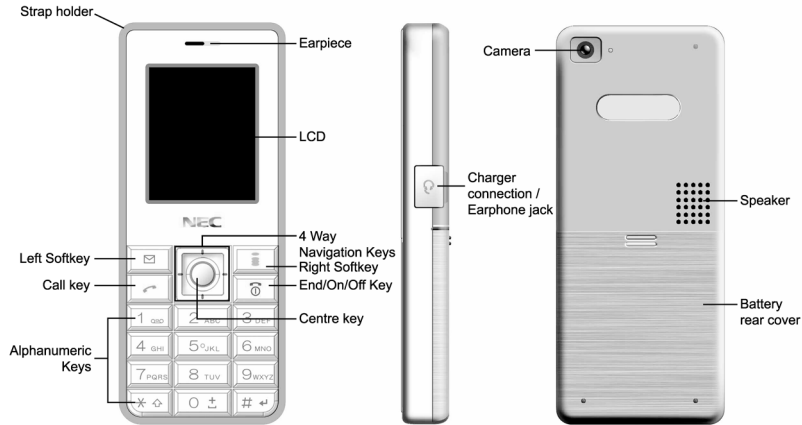

## Display information

### LCD graphic display area


This area contains the greetings graphic on power up, status graphics, as well as information when searching for networks and making calls. The standby screen shows the current network, vibrator status, current active mode, current time and date and whatever you have keyed using the phone's keypad.

### Status icon area

This area contains icons that indicate battery strength, new SMS or MMS messages received, new voice mail or i-mode status messages received, whether GPRS is activated, connection status, network signal strength etc.

### Help and softkey area

Depending on the current mode, this area contains applicable information or context dependent softkey functions. When "Menu" is displayed above the Left Softkey area of the LCD, press **Left Softkey** to access the available options under "Menu".

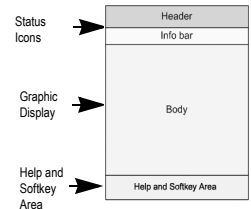


**The title of the selected options will be displayed in the header.**


## Key functions


The following describes the key functions of the navigation keys and left/right Softkeys and  key of your phone:



- ◀ navigation key: Press to scroll left or move the cursor to the left of the screen. Also serves as a shortcut key to **Phonebook** menu from the standby screen.
- ▶ navigation key: Press to scroll right or move the cursor to the right of the screen. Also serves as a shortcut key to **Message** menu from the standby screen.
- ▲ navigation key: Press to scroll up or move up the cursor. Also serves as a shortcut key to **Phone modes** menu from the standby screen.
- ▼ navigation key: Press to scroll down or move down the cursor. Also serves as a shortcut key to **My data** menu from the standby screen.
- Centre key: Press to confirm the function. Press to display main menu screen from the standby screen. Press to display the option menu screen from the main menu screen. Press to toggle your desired function On/Off in the each menu screen.

 (End or On/Off) key: Press to return to the standby screen in a function, power on/off the phone, or end a call.


 (Call) key: Press to make a call. Press once to display the **Dialed calls** list.

 Left Softkey: Press to activate the function displayed on the screen directly above it (bottom left of the screen). Also serves as a shortcut key to **Mail** from the standby screen.

 Right Softkey: Press to activate the function displayed on the screen directly above it (bottom right of the screen). Also serves as a shortcut key to **i-mode** from the standby screen.

 **The phone will return to standby mode when  key is pressed, but not when the phone is in the following functions: PC sync, camera, SMS/MMS/JAVA™ editor, MFE(Multi-field editor), Call control, etc.**

## Main menu

The menu structure starts with the main menu. Main menu consists of nine different display screens that indicate main functions. To access each main menu function, press  key from the standby screen. When the settings screen is displayed, use the ▲ and ▼ navigation keys to scroll through the main menu functions or press number keys (1-9) to access the following menus.

The following describes the main menu screens in the order of appearance:

 

 

- 1 **Settings** : provides various settings of your phone. Refer to page 28 for details.
- 2 **Message** : provides messaging functions. Refer to page 44 for details.
- 3 **i-mode** : provides access to i-mode network. Refer to page 49 for details.
- 4 **Phonebook** : displays, adds and edits the list of phonebook entries. Refer to page 62 for details.
- 5 **Camera** : provides access to the camera function. Refer to page 59 for details.
- 6 **My data** : displays the list of sound and picture files stored in your phone. Refer to page 68 for details.
- 7 **Java™** : provides access to Java™. Refer to page 73 for details.

- 8 **Accessory** : provides such as appointments, notes and more. Refer to page 74 for details.
- 9 **STK** : provides SIM related functions (this will be replaced by Call options icon if the SIM card does not support STK services).

## Main menu screens, menus, check boxes/radio buttons

The different functions and settings of your phone can be accessed by selecting Options menus, and check boxes / radio buttons:

### • Main menu screens

A screen represents a category or a particular function. To access each main menu function, press  key from the standby screen. When the settings screen is displayed, use the  and  navigation keys to scroll through the main menu functions. Then press  key/**Left Softkey** to confirm or directly press the number keys when the Settings screen is displayed.

### • Option menus


A menu is a named link to a function or setting. The different types of Options menu operations include: accessing a function, adjusting levels, selecting an option, and to toggle a function on or off. To select a menu, move the navigation key to highlight the required option and press **Left Softkey** or the corresponding shortcut number key designated for the Options menu.

### • Check box/ Radio button

A check box enables / disables an option as displayed in the Options menu and multiple check boxes can be selected at the same time. Selecting a radio button automatically cancels the previous selection, hence only one radio button can be selected at one time. A check box / radio button option can be selected / canceled by highlighting it and pressing **Left Softkey**.







## Options menu operation example


Changing of the phone modes using the Options menu is carried out as follows:

- From the standby screen, press  key.
- Press **Left Softkey** to access the Options menu for Phone modes.
- Select **Activate** to activate the phone mode, or **Change settings** to edit the phone mode settings.

## Keypad shortcuts

The following single key shortcuts are available from the **standby screen** (the screen that automatically appears when the phone is on and not in use)

- Press the  navigation key to access **Phonebook**.
- Press the  navigation key to access **Message**.
- Press the  navigation key to access **Phone modes**.
- Press the  navigation key to access **My data**.
- Press the  key to access the main menu.
- Press the **Left Softkey** to access the **Mail**.
- Press the **Right Softkey** to access **i-mode** unless you have a missed call or a new message to read.
- Press  key once to access the **Dialed calls list**.

- Press  key twice to redial the last called number.
- Press and hold the **Right Softkey** to access Java™.
- Press and hold the **▲** navigation key to switch on/off all signal tones.
- Press and hold the **▼** navigation key to access Java™.
- Press and hold **0** to enter + when making an international call.
- Press and hold **1** to call the voice mailbox centre.
- Press and hold **#** to lock/unlock the keypad.
- Press and hold **\*** to switch the ALS line 1/2 (if the SIM card support ALS).
- Press and hold **2-9** number keys to access FAK (fast access key) functions. For **FAK settings**, please see page 30.


## Main phone features

The GSM/GPRS phone can be used in almost any part of the world with the Tri-band (GSM 900/1800/1900 bands) features.

Your phone has the following features:

- 2 Softkeys
- Li-ion Battery
- Alternate Line Service (ALS) compatible
- Calculator
- Caller ID alert and vibrator
- Currency converter
- Date, Time & Alarm functions
- Phonebook pictures and ring tones
- Main-LCD screen: 128 (width) by 160 (height) pixels with 65,000 colour
- Camera: 300,000 pixels
- Messaging (SMS, EMS, MMS, Email)
- Short Messaging Service (SMS)
- Enhanced Messaging Service (EMS)
- Multi-media Messaging Service (MMS)
- Multi-party call capability (conference call)
- Scheduler, ToDo list, Notepad
- Alarm clock, Auto off, Auto on, Countdown, Stopwatch
- Composer
- Voice memo
- Personalize your phone
- 40-layer polyphonic ring tones
- Wallpapers
- Power on animations
- Picture caller ID
- Phonebook (can store up to 250 records)
- SIM memory phonebook (can store up to 255 records, depending on the SIM capacity)
- T9® Text Input
- Phone mode settings (Normal, Meeting, Pocket and Car)
- Voice mail
- i-mode
- Camera
- Java™

## Displayed icons for LCD

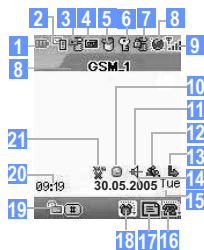

- 1** Indicates the battery level.  
 Appears during charging.

- 2** Indicates that the SMS SIM in your phone is full.

Indicates that the SMS ME in your phone is full.

Indicates that there is a new message on sever.

Indicates that new EMS in your phone.

- 3** Indicates that the mail & MMS in sever.  
 i-mode mail on server.  
 MMS on server.  
 Both i-mode mail and MMS on Server.  
 new i-mode mail/MMS in phone.

Indicates that the Inbox in your phone is full.

Indicates that there is an unread SMS.

- 4** Indicates that new voice mail messages are on the network.

**5** Java active.

**6** Indicates secured communication on SSL.

**7** i-mode lock.  
 i-mode net access.

GPTS attached.

GPRS Deactive.

**8** ALS 1  
 ALS 2

**9** Indicates the signal strength level.  
 Appears when you are outside the service area.

Indicates Line status (ALS Line 1/No ALS).



Indicates Line status (ALS Line 2 Unencrypted).

**10** Indicates that the alarm is set.

**11** Indicates that the volume is at the lowest (silent) setting.

**12** Indicates that Car mode is set to ON.

Indicates that Pocket mode is set to ON.

Indicates that Meeting mode is set to ON.

**13** Indicates the call diversion is set.

**14** Date

**15** Day of the week

**16** Indicates that there is a missing call.

**17** Indicates that there is a message SMS.


**18** Indicates that there is a missed alarm.

**19** Indicates key lock enabled.

**20** Local time

**21** Indicates the IR modem is set to on, the auto start of a Java™ application has failed.

## Overview of menu function

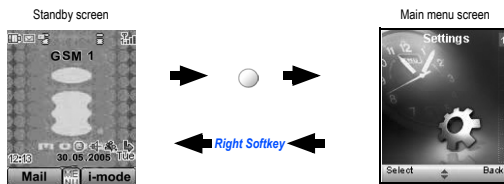

To access each main menu function, press key from the standby screen and use the and keys to scroll through the main menu functions. Press key again to confirm the main menu. Alternatively, press the main menu key number directly (see the following table). Pressing 0 from the main menu will display your own number.

Key	Main menu	2nd Level menu
1	Settings	Phone
		Phone modes
		Display
		Calls
		Security
		Network
		T9 input
		Reset settings
		2
Inbox		
Draft		
Outbox		
Predefined text		
Settings		
Memory status		
Cell broadcast		

Key	Main menu	2nd Level menu
3	i-mode	Settings
		i-mode
4	Phonebook	Lists
		Call options
5	Camera	<View finder>
6	My data	Photos
		Pictures
		Sounds
		Record voice
		Memory status
7	Java™	<Java file list>
		<List of folders>

Key	Main menu	2nd Level menu
8	Accessory	Organizer
		Clock
		Calculator
		Composer
		Voice memo
9	STK (SIM related functions) or Call options	



## Getting Started

Your phone is equipped with a battery and a charger. Other optional accessories can customize your phone for maximum performance and mobility. All the features described in this user guide are supported by your phone.

For all the features to work, you must have a valid SIM card (included in the package supplied by your service provider) that also supports these features.

Even if you have a fully featured SIM card, any feature not supported by the network transmitting your call will not work. This last point is especially important when you are roaming among networks.

Before you attempt to use your phone, check that you have:

- A valid SIM card inserted in the phone
- Fully charged battery

### Service activation

Before you can use your new NEC phone, the service must be activated by your service provider. Please contact your local service provider regarding phone activation.

### Voice mail messaging and text messaging

Voice mail messaging and text messaging services, when available, are provided by your service provider. Before you can receive voice or text messages with your phone, you must subscribe to these service options. Contact your service provider for information on the availability and setup of these services.


### Phone password


When your service is activated, a 4-8 digit PIN is programmed into the SIM. The PIN locks and unlocks your phone, and provides access to restricted phone settings. Check with your service provider for additional information on your security PIN.

## SIM card

Before using your phone, you must sign-up/register with a wireless network service provider to receive a personal SIM (Subscriber Identity Module). The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and your SIM phonebook information. It is stored in a recess in the battery compartment.

The phone is unusable (except for emergency calls) until a valid SIM card is inserted. It is possible to transfer your SIM card to another compatible phone and access your network services. Your phone will display a warning message if the SIM card is not inserted properly.

 **The SIM card contains personal data such as your electronic phonebook, messages, as well as details of the network services you have subscribed to. The phone will not work (except for emergency calls on some networks) unless a valid SIM is inserted.**




 **If the phone or the SIM card is lost or stolen, you should contact your service provider immediately in order to prevent unauthorized use.**

### Inserting a SIM card

Before inserting a SIM card, make sure the power is switched off.

 **Be sure to turn the phone off before inserting and removing a SIM card. Otherwise, damage to the SIM card can occur.**

- 1 Press down the rear cover.
- 2 While pressing down the rear cover, slide the rear cover about 3 mm in the direction indicated by the arrow.
- 3 Remove the rear cover.
- 4 Press the slit of the battery in the direction shown by the arrow.
- 5 While pressing the battery, slide the battery to reveal the SIM card holder.
- 6 Place the SIM card by pressing and sliding gently in the direction shown by the arrow, with the gold contacts facing down and the edge in the correct corner. Make sure that the SIM card is fully inserted in the holder.

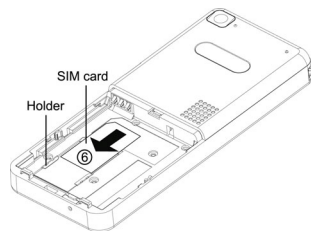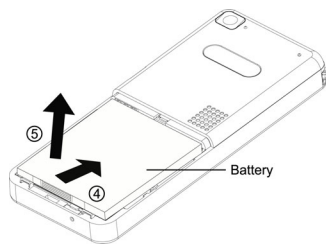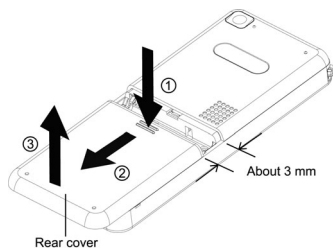



 **Do not bend or scratch your SIM card.**

 **If the SIM card is not fully inserted when the battery is replaced, damage to the SIM card can occur.**

-  **Be careful not to damage electric parts of the SIM card holder when inserting a SIM card.**
-  **Do not apply extreme stress to the rear cover. Damage may occur to the rear cover, LCD, or keypads of the phone.**

## Removing a SIM card

- 1 Press the SIM card gently in the direction shown as the arrow.
- 2 While pressing the SIM card, slide the SIM card in the direction shown by the arrow.
- 3 Remove the SIM card.

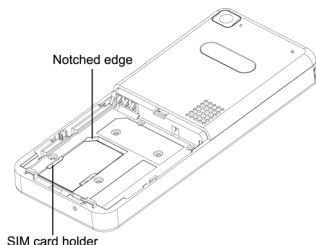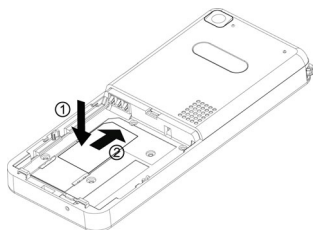

-  **The phone supports a number of languages and the keyboard symbols have been chosen for world-wide operation.**
-  **If the SIM card is already inserted, see "Powering on the phone" on page 20.**


## Preparing the battery

### Charging the battery for the first time

Your phone is powered by a rechargeable battery. A new phone battery must be fully charged before using your phone for the first time.

- Before attempting to use your phone, insert the phone's battery. Place the battery metallic end towards phone's metallic part. Lower the battery towards the phone to lock into place and slide back the rear cover until you hear a click.
- Connect the NEC battery charger supplied with your phone to a suitable main power socket.
- Connect the charger plug into the connector at the base of the phone.
- Check that the battery icon becomes animated on the LCD. Leave the phone charging until the battery icon stops moving to ensure that the battery is fully charged.

-  **DO NOT connect a charger or any other external DC source if the phone's battery is not inserted.**

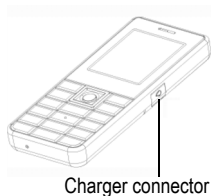


## Checking the battery

The battery charge indicator shows the approximate charge level of the battery while the phone is in use and not being charged.

- Check the icon at the top right corner of the screen.

The blocks on the display show the charge status of your battery pack.

Full battery power 


Partial battery power 

Low battery power 

Battery empty (red) 

## Low battery indication

When the battery voltage falls below the working level, a message "Battery is low" will be displayed along with an empty battery icon on the top left corner of the screen. When displaying battery low notification, the phone also emit a short alert tone. Once these indicators are observed, the phone battery has approximately one minute of use remaining. After which, the phone powers off automatically.

 **Please charge the battery as much as possible when the battery is very low.**

## Charging the battery

The charger unit begins to restore the battery power when it is connected to the phone.

- Connect the charger plug to the connector at the base of the phone.
- Check that the battery icon is displayed and the screen is lighted up.


During charging, the battery icon becomes animated on the LCD. Leave the phone charging until the battery icon stops moving to ensure that the battery is fully charged.

 **Do not connect/disconnect the charger plug forcibly. Damage to the charger connector can occur.**


 **When disconnecting the charger, hold the plug, not the cord.**


 **Do not try to charge the battery if the temperature is below 5°C(41F) or above 35°C(95F).**

**Please charge the battery as much as possible when the battery is very low.**

 **You are recommended to switch off the phone while charging. If you need to receive calls, your phone can be switched on and left in standby while being charged, although the total time taken to charge is then increased.**

The phone is designed to be charged with NEC equipment listed with the specifications of your phone.




 **Using any battery pack or AC adapter not specified by NEC for use with this phone may be dangerous and may invalidate any warranty and approval given to the phone. Do not leave the charger connected to the power supply when it is not in use.**

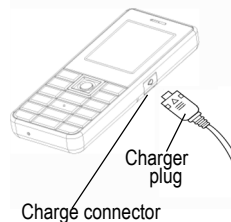

## Changing the battery


Make sure the phone is switched off. Some settings, stored numbers, and messages may be lost if the battery is removed while the power is on.

- 1 Press down the rear cover.
- 2 While pressing down the rear cover, slide the rear cover about 3 mm in the direction indicated by the arrow.
- 3 Remove the rear cover.
- 4 Put the new battery into place in the direction indicated by the arrow, making sure that the metallic part in the right direction and the tabs of the battery fit properly into the notches in the phone.
- 5 Lower the battery towards the phone to lock into place.
- 6 Place the rear cover about 3 mm away from the end with the notches and slide the rear cover in the direction indicated by the arrows until a click is heard.

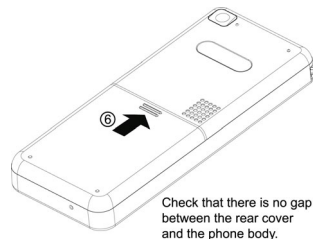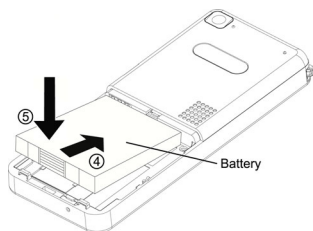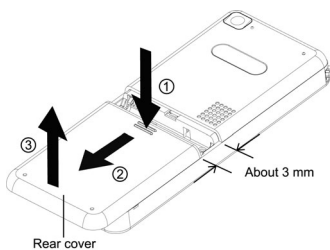


## Powering on the phone

### Switching the phone on


Press and hold  key for at least two seconds to switch on.


The screen is either blank, displays an animation, or displays a greetings message during the powering on process. After the powering on process, the phone displays the standby screen.

You may need to enter your PIN code or password.

 **The greetings message may not be as indicated if any locks have been set or the wrong SIM has been inserted.**

### Switching the phone off

Press and hold  key for at least two seconds to switch off.

 **When you switch off and switch on your phone, the data in the phonebook list and messages folder will take some time to initialise before they can be properly displayed.**

## Basic Calls and Phone Use



You can make a call in the same way as a normal push-button phone. Press  key after entering the area code and phone number.

### Making an emergency call

You may make an emergency call when your SIM card is not inserted in your phone. Simply power on your phone and dial the emergency number of your local region. For local emergency number, please contact your local authorities.

### Dialing calls

 **Use the full STD area code even if you are calling to a person in the same town.**


- Enter the phone number in the standby screen and check the number on the display.
- Press  key to dial the call.
- To end the call at any time, press  key to return to the standby screen.




During the call, the screen displays either the phone number dialed and a connection graphic, or the name and picture ID of the called party if they have been previously allocated to the number dialed.

The number dialed and its related information will be stored in the Dialed calls list.

Each time a call is made after the Dialed calls list is full, the oldest call information will automatically be replaced by the latest call made and be placed at the top of the list.

### Accessing the dialed calls list

- Press  key to access the Dialed calls list.


Highlight the number to be dialed by pressing the  and  navigation keys and press  key to start dialing.



Press **Left Softkey** to display the Options menu for the Dialed calls list. Select to either Extract number, Copy to the phonebook, Delete the individual number or Delete all the numbers in the call list.

### Accessing the other dialed lists

- Press  key from the standby screen and the  and  navigation keys to access Received calls and Missed calls.


### Ending a call

- Press  key to end a call and return to the standby screen.

 **If you hold down  key, your phone will be switched off.**

## Using handsfree

Insert the handsfree to the charger/earphone jack at the side of the phone. When there is an incoming call:


- Under **Auto answer** mode, the call will be connected automatically.
- Under manual answering mode, press  key to connect the call.

## Receiving calls


When you receive a call:


- The phone rings (if ring tone is set to ON).
- The number of the calling party may be displayed on the screen if the caller has activated calling line identification.
- The calling party's number along with the name and caller ID picture may be displayed if the caller's information is already stored in the phonebook.

If the caller has withheld his/her caller ID, the message "**Restricted**" is displayed to show that the number is being withheld. If the network service provider cannot identify the number, the message "**Unknown**" is displayed to show that number is not known.


 **When your phone is receiving MMS, the incoming call signal may be ignored. The caller may be notified that the line is currently unavailable.**

## Accepting a call

- Press  key or **Left Softkey**.

 *You can set your phone to answer a call by pressing any key except  key. See "Answer options" on page 28. If you are making a call, the phone gives priority to receiving a call unless you have already pressed  key.*


## Rejecting a call

- Press  key or **Right Softkey**. The call will be transferred to the voice mailbox automatically.

You can also choose to put your calls on hold or to activate **Call waiting** or **Call diversion**. These options are dependent on your network and subscription plans with your local mobile service provider.

If a call is received but not answered, the screen will display an icon.

Information of received and answered calls are stored in **Received calls**.

 *Calling line identification is subscription dependent. If you have subscribed to the service and the caller has allowed his number to be transmitted over the network, the number of the caller or the corresponding name will be displayed on the handphone screen.*




## Placing a call on hold

You can place a received or dialed call on hold by pressing **Right Softkey**. Press **Right Softkey** again to return to the call.

If a call is received but not answered, the caller's information is stored in **Missed calls**.


To return to a missed call:

Press  key to return to the standby screen. Select **Phonebook > Call options > Missed calls** from the main menu.

 **Alternatively, press  key from the standby screen to access the Dialed calls list and press  navigation key to display Missed calls.**



## Making a second call

Dial the second call while on the first call. This will put the first call on hold.

- To toggle between the first and second call, select **Swap** by pressing **Right Softkey**.
- To end the active call, press  key.


## Receiving a second call (subscription dependent)

You can answer a second call while already on the first call if you have subscribed to call waiting service. Your phone will emit a tone to alert you if there is a second incoming call.

- To accept the second call, press  key to put the first call on hold and answer the second call.
- To toggle between the first and second call, select **Swap** by pressing **Right Softkey**.
- To end the active call, press  key.

## Making multi-party calls (subscription dependent)

You may hold a conversation with up to two parties at the same time in a conference.

- Make a call to the first party. When it is connected, proceed to dial the second call to the next party. The first call is put on hold.
- When the second call is connected, press **Left Softkey** to select **Menu**, then highlight **Conference** and press **Left Softkey**.
- The first and second party is now connected.
- To split the call, press **Left Softkey** to select **Menu**, then highlight **Private call** and press **Left Softkey**.
- Highlight any number on the list and press **Left Softkey** and the call will be splitted.
- To end the multiparty call, press  key.

 **Multi-party call facilities are SIM card and network dependent.**





## Unsuccessful calls/Auto redial

With Auto redial activated, your phone will redial a number up to 10 times if the first attempt is not successful.


When a dialed number cannot be connected, a tone is heard and an alert message will be shown on the display. The phone returns to the standby screen and the number will be automatically dialed again after a short delay. The phone will try to redial the number up to 10 times. Failure to connect a call might be due to network problems or if the party you are calling is busy or engaged.

To end a redial attempt, press **Right Softkey**.

 **To redial the last number you have made, press  key twice.**

## Call features

### Fast dial

Fast dials can be activated in the Abbreviated Dialing Numbers by entering a number between 1 to 255 (depending on your SIM card) and pressing **#**. The phone details that correspond to the record number will be displayed. Press  key to dial.

Each phonebook entry will be saved either in the SIM card or Phone.

### Voice mail

Most mobile service providers offer this external voice mail service to their subscribers. The voice mail function enables you to divert received calls to a voice mail centre where callers can leave voice messages in the voice mailbox under the following circumstances:

- if your phone is switched off or is not able to receive signals;
- if you did not answer the call;
- if you are currently on the phone and did not activate **Call waiting**.

You will be notified of a voice mail message by an icon in the standby screen. If voice mail service is not included in your mobile service provider's package, you will have to subscribe to the service separately and configure the settings manually. The voice mail service is network dependent. Contact your mobile service provider for more details regarding your voice mail number.

 **The voice mail service is SIM card and network dependent. Contact your service provider for details on your voice mail number.**

#### To set the voice mailbox number

From the standby screen, press **◀** navigation key until the **Voice mailbox** screen is displayed or from the main menu, select **Phonebook > Lists**, then press **▶** navigation key until the **Voice mailbox** screen is displayed.


Highlight **Number:** and press **Left Softkey** to edit the voice mail number. Press **Left Softkey** to confirm and return to the **Voice mailbox** display screen.

#### To retrieve a voice mail





Use the **▼** navigation key to highlight **Voice mailbox** and press **Left Softkey** to call the voice mail centre.

 **Alternatively, press and hold 1 in the standby screen to call your Voice mailbox directly.**

### To divert a received call to the voice mail centre

Make sure the correct voice mail mailbox number is set beforehand. When you receive a call you wish to divert, press  key or **Right Softkey** to divert the call to the voice mail centre.

### Volume control

To adjust the earpiece volume during a call, use the /  navigation key to increase volume and the /  navigation key to decrease volume.

### *Keylock/Auto key lock*

To lock/unlock the key pad, press and hold the **#** key. To automatically lock the keypad, from the main menu, select **Settings > Phone > Auto key lock**. Press **Left Softkey** to activate the function and the phone locks the keypad when the phone is in idle for more than a minute.





 **You can make a emergency call eve if the keypads are locked.**

### *Screen Saver*

The phone is designed with the screen saver function. When the phone is not in use for 30 seconds, the screen saver activates automatically.

## Call Options

From the main menu, select **Phonebook > Call options** to access this function.

 A quick way to view received and dialed calls list from the standby screen is to press  key and scroll to the respective lists using the  and  navigation keys.

### Dialed calls

The Dialed calls screen will display the date and time of the last 15 calls made on your phone.

From the main menu, select **Phonebook > Call options > Dialed calls**.

- Press **Right Softkey** to return to Call options screen.


 
### Call lists

There is a total of 3 call lists in your phone's memory:

1. Dialed calls
2. Missed calls
3. Received calls

From the main menu, select **Phonebook > Call options**.

- Press **1** for Dialed calls, **2** for Missed calls and **3** for Received calls.



In the Dialed calls list, press **Left Softkey** to display the Options menu. Use the  and  navigation keys to highlight an option in the list and press **Left Softkey** on the following menus:

- **Extract number** to display the phone number. Press **Left Softkey** to store the number in the SIM/Phone phonebook.
- **Copy to** to store the number in the SIM/Phone phonebook.
- **Delete** to delete the number.
- **Delete all** to delete all the numbers in the list.

### Charge Info

  The Charge Info screen will display the duration and costs of the different types of calls made from your phone.

From the main menu, select **Phonebook > Call options > Charge Info**.

- Use the  and  navigation keys to highlight and press **Left Softkey** to view the time/charge information for the following: Last call, All voice calls, Total incoming, Total outgoing and Cost left. You can press **Right Softkey** to Reset the calls counter or **Left Softkey** to return to the Charge info screen.

The Charge settings feature enables you to set a limit in units so your phone cannot be used once the limit is reached.

 **The charge settings service is SIM card and network dependent.**

From the main menu, select Phonebook > Call options > Charge settings.

- Select **Currency** to edit the unit price of each call. You will have to enter your PIN2 before changes can be made.
- Select **Cost/unit** to set the cost per unit and per min. You will have to enter your PIN2 before changes can be made.
- Select **A/c limit** to edit **Display credit** and **Max cost**. You will have to enter your PIN2 before changes can be made.
- Select **Auto display** to toggle On/Off the display of call duration and charges after each call is made. When this function is activated, a tick will appear in the check box.


# Personalizing Settings


## Voice volume

To adjust the volume during a call, use the ▲/▶ navigation key to increase volume and the ▼/◀ navigation key to decrease volume.

When you are not making any calls, use the following procedure:

From the main menu, select **Settings > Phone > Voice volume** to display the **Volume** screen with a volume slider.

- Use the ▲/▶ navigation key to increase, or use the ▼/◀ navigation key to decrease the volume to the required level.
- Press **Left Softkey** to save the current setting and return to **Phone** menu.
- Press **Right Softkey** to reject any volume changes and return to **Phone** menu.
- Press  key to reject any volume changes and return to the standby screen.

 **Voice volume can also be adjusted by pressing the number key on the Volume screen.**

## Answer options

Your phone allows you to select one or more of the following three answer modes:

- Any key answer
- Ring silencer

### Any key answer

When this feature is enabled, you can answer an incoming call by pressing any key except  key.

From the main menu, select **Settings > Phone > Answer options**.

- Highlight **Any key answer** and press **Left Softkey** to toggle Any key answer On/Off. A tick will appear in the check box beside the option.
- Press **Right Softkey** to accept changes and return to the **Phone** menu.

### Ring silencer

When this feature is enabled, the phone is switched to silent mode.

- From the main menu, select **Settings > Phone > Answer options**.
- Highlight **Ring silencer** and press **Left Softkey** to toggle Ring silencer On/Off. A tick will appear in the check box beside the option.
- Press **Right Softkey** to return to the **Phone** menu.

## Minute reminder

You can access this function to set the reminder that tells you how long you are talking on the phone by minute.

From the main menu, select **Settings > Phone > Minute reminder**.

Use the ◀ and ▶ navigation keys or press the **Right Softkey** to toggle the reminder On/Off. Use the ▼ navigation key to move down to the next field to set a Timer for the reminder. Press **Left Softkey** to save and return to the Phone menu.

## Auto key lock

You can select your keypad keys by activating the Auto key lock; that way, you may prevent your keypad from being accidentally pressed. From the main menu, select **Settings > Phone > Auto key lock** to toggle on/off the feature by pressing **Left Softkey**. A tick in the check box indicates that the function has been activated. If your key pad is not used for a minute, the phone automatically locks the key pad.

## ALS setup

If your SIM card supports Alternate Line Service (ALS), you can set which line to use for your phone:

- From the main menu, select **Settings > Phone > ALS setup**.
- Use the ▲ and ▼ navigation keys to highlight the desired line options.
- Press **Left Softkey** to turn on the radio button for the highlighted option and return to the Phone menu.

 **ALS setup function is SIM card and network related and may only be available from your mobile service provider.**

## Time/date

You can access this function to set the time/date displayed in your phone and hence enable other related functions. For example: the alarm function. Use the following procedure to set the time and date:

### Set timezone

- From the main menu, select **Settings > Phone > Time/date > Set timezone**.
- Press ▲ and ▼ navigation keys to move along the world map to select the city/time zone closest to you. Press **Left Softkey** to confirm the time zone selection.
- The phone will prompt you as to whether Daylight saving is required. Press **Left Softkey** if it is required or press **Right Softkey** if it is not.
- Subsequently, your phone will prompt you whether to set the selected city as your local city, press **Left Softkey** to confirm or press **Right Softkey** to reject. The phone returns to the Time / date menu display.

## Set date/time

From the main menu, select Settings > Phone > Time/date > Set date/time.

- Press the **Left Softkey** to start editing the date using the text editor.
- Use the **▼** navigation key to move to the Time field and edit the time.
- After editing, press the **Left Softkey** to save all changes made. The phone returns to the Time / date menu screen.

## Set time format

From the main menu, select Settings > Phone > Time/date > Set time format.

- Use the **▲** and **▼** navigation keys to highlight 12 Hour/24 Hour format. Press **Left Softkey** to confirm the selection and turn on the radio button. The phone returns to the Time / date menu screen.


## Set date format

From the main menu, select Settings > Phone > Time/date > Set date format.

- Use **▲** and **▼** navigation keys to highlight either DD/MM/YYYY, DD.MM.YYYY, MM/DD/YYYY, MM.DD.YYYY, YYYY/MM/DD or YYYY.MM.DD format.
- Press **Left Softkey** to confirm the selection and turn on the radio button. The phone returns to the Time/date menu screen.

## FAK setting

FAK (Fast Access Key) is a shortcut to the major functions of the phone by simply pressing the key itself.


 **You can also press the number key from the standby screen, press Left Softkey twice and select the function to allocate for the number key.**

- From the main menu, select Settings > Phone > FAK setting.
- Use the **▲** and **▼** navigation keys to highlight the Fast Access Key (2 to 9) that you want to set up. Press **Left Softkey** to select and display the Option menu for the list of functions.
- Use the **▲** and **▼** navigation keys to highlight the function to be assigned to the FAK and press **Left Softkey** to confirm the selection (turns on the radio button) and return to the FAK setting display menu.
- To use FAK, press the number key and **Left Softkey** from the standby screen.

## Language

If the display is showing any language other than your own, use the following procedure:

- From the main menu, select Settings > Phone > Language.
- Use the **▲** and **▼** navigation keys to select the required language and press **Left Softkey** to confirm the selection and turn on the radio button. The phone returns to Phone menu screen.

 **When you have changed the display language, please wait until the new setting becomes effective.**

 **If you select Automatic, the language specified in your SIM card or the default language is automatically selected.**

You can set your phone to operate in any one of four modes in the **Phone modes** menu:

- Normal mode
- Meeting mode
- Pocket mode
- Car mode

### Phone mode selection

From the main menu, select **Settings > Phone modes**. Use the ▲ and ▼ navigation keys to highlight a phone mode in the list. Press the **Left Softkey** to display the **Options** menu. You can choose to either **Activate** the phone mode or to **Change settings** by pressing the **Left Softkey** when your selection is highlighted.

 **Alternatively, press ▲ navigation key to display the Phone modes menu from the standby screen.**


### Phone mode settings

When a phone mode is selected, some of your phones settings will be altered according to the selected phone mode. The phone functions that can be altered include:

- Ringer setting (On/Off)
- Ringer (for Any call/Phonebook call/Alarm/Message/Friends/Colleagues/Family/Biz partner/VIP)
- Ringer volume (for Any call/Phonebook call/Alarm/Message/Friends/Colleagues/Family/Biz partner/VIP)
- Key tone (On/Off)
- Info tones (On/Off for Warning tone/Cell broadcast/Message sent)
- Vibrator (On/Off)
- Earphone setting(On/Off for Earphone&Speaker/Earphone)
- Illumination (Off/LCD only/Key & LCD)
- Auto answer (On/Off, only available for the Car mode)

 **Any changes made to the Ringer setting options in a phone mode are stored and used when that mode is selected again.**

 **Use the ▲ and ▼ navigation keys to move the highlight bar to the previous or next item in a list.**

 **To toggle an option On/Off: On (a tick is displayed in the check box beside the option) Off (the check box beside the option is empty)**

### Changing phone mode settings

To change the settings of a particular phone mode, use the following procedure.

With the standby screen displayed, press ▲ navigation key or select **Settings >Phone modes** from the main menu.

Use the ▲ and ▼ navigation keys to highlight the phone mode you wish to change from the following:



- Normal mode;
- Meeting mode;
- Pocket mode;
- Car mode.

Press **Left Softkey** to display the **Option** menu. Use the ▲ and ▼ navigation keys to highlight either **Activate** to activate the phone mode or **Change settings** to change the phone mode's settings, then press **Left Softkey**. When you select **Change settings**, you can make the following changes:

### Ringer setting

To change the ringer setting, highlight **Ringer setting** and press **Left Softkey** to toggle Ringer setting between On (a tick appears in the check box) and Off (the tick disappears).

### Ringer

To change the ring tone or melody, select **Ringer** to display the Ringer menu screen.

- Highlight the type of calls to change from the menu: **Any call/Phonebook call/Alarm/Message/Friends/Colleagues/Family/Biz partner/VIP**.
- Press **Left Softkey** to access the **Sounds** folder.
- Highlight the desired ringtone and press **Left Softkey** to select and return to the Ringer menu screen.

### Ringer volume

To change the ring volume settings, select **Ringer volume** to display the Ringer volume screen.

- Highlight the type of calls to change and press **Left Softkey** to select: **Any call/Phonebook call/Alarm/Message/Friends/Colleagues/Family/Biz partner/VIP**.
- The volume screen showing the level of ring volume is displayed. Use the ▲ navigation key to increase or ▼ navigation key to decrease the volume setting to the level required (the level bar moves in the direction corresponding to the key pressed).
- Press **Left Softkey** to save the current ring volume setting or **Right Softkey** to reject any ring volume changes.
- The phone returns to the Ringer volume screen.

### Key tone

To change the settings, highlight **Key tone** and press **Left Softkey** to toggle between On ( a tick appears in the check box) and Off (the tick disappears).

### Info tones

To change the Info tones settings, select **Info tones** to display the Info tones screen.

- Use the ▲ and ▼ navigation keys to highlight the type of Info tones you wish to change: **Warning tone / Cell broadcast / Message sent**.
- Press **Left Softkey** to toggle between On (a tick appears in the check box) and Off (the tick disappears).
- Press **Right Softkey** to accept the changes and return to the previous **Profiles** menu.

## Vibrator

To change the setting, highlight **Vibrator** and press **Left Softkey** to toggle between On (a tick appears in the check box) and Off (the tick disappears).

## Earphone setting

To change the setting, select **Earphone** setting and pressing **Left Softkey**.

## Illumination

To change the illumination settings, select **Illumination** to display the Illumination screen with radio button selections: **Off**, **illuminate LCD only** or **illuminate Key & LCD**.


- Use the **▲** and **▼** navigation keys to highlight your desired setting and press the **Left Softkey** to confirm and turn on the radio button.

 **With the illumination always on, the battery life is reduced.**

## Auto answer

**Auto answer** option is only available for **Car mode**. The **Auto answer** feature allows a received call to be connected automatically if you are using your phone as a car phone or with a hands-free kit. To change the **Auto answer** settings:

- Highlight **Auto answer** and press **Left Softkey** to toggle between On (a tick appears in the check box) and Off (the tick disappears).


 **Auto answer only works if your phone is working with a handsfree kit or a headset.**

## Power on greetings/animations

Two types of greeting/animation screens can be displayed when the phone is power-on:

- No greeting (standard powering on screen display animation).
- Text greeting (standard powering on screen with text greeting).

The type of greeting to display can be selected as follows:


- From the main menu, select **Settings > Display**.
- Highlight **Greetings** and press **Left Softkey** to toggle power-on text greeting on. The text editor screen is displayed. Enter a text greeting.
- Press **Left Softkey** to save the greeting and return to **Display** menu. Press  key to return to **Display** menu screen.
- To switch the text greeting function off, highlight **Greetings** and press **Left Softkey** from the **Display** menu screen. The text editor screen is displayed. Long press **Right Softkey** to clear the text and press **Left Softkey** to save. A tick in the check box beside the option disappears.

 **For more information on "Text entry", please refer to page 41.**

## Wallpaper

You can select an image file from **Photos/Pictures** folders to be displayed as a background to the standby screen.

To select the wallpaper and its style, use the following procedure:

- From the main menu, select **Settings > Display > Wallpaper**.
- Use the **▲** and **▼** navigation keys to highlight either **Set wallpaper** or **Style**. Press the **Left Softkey** to enter each option.
- In the **Set wallpaper** display screen, select **Photos/Pictures** to display the folder for the selection of the desired wallpaper or select **Off** to set the background display off (a blank screen will be displayed at standby mode).
- With the **Photos/Pictures** folder displayed, highlight your desired wallpaper from the list. Press **Left Softkey** to confirm the selection. Press  key to return to the standby screen. The selected wallpaper is displayed.
- In the **Style** display screen, select **Fit to screen/Tile/Best fit/center** to confirm the selection of wallpaper display style. The radio button for the selected style is turned on.

## Colour style

You can select from the different colour styles available in your phone:

- From the main menu, select **Settings > Display > Colour style**.
- Use the **▲** or **▼** navigation keys to highlight a colour style and press **Left Softkey** to confirm the selection.
- The LCD menu screen will be displayed in the selected colour style.

## Animation

You can select one of the two available animations available in your phone:

- From the main menu, select **Settings > Display > Animation**.
- Use the **▲** or **▼** navigation keys to highlight either **Animation 1** or **Animation 2**. Press **Left Softkey** to confirm the selection and turn on the radio button.

## Brightness

To alter the brightness of your phone's display screen, use the following procedure:

- From the main menu, select **Settings > Display > Brightness**.
- Use the **▲** and **▼** navigation keys to highlight the desired brightness level for your phone: **Low/Medium/High/ Max**.
- Press **Left Softkey** to confirm the selection and turn on the radio button.

## Contrast

To alter the contrast of your phone's display screen, use the following procedure:

- From the main menu, select **Settings > Display > Contrast**.
- Use the **▶/▲** navigation key to increase the contrast level or the **◀/▼** navigation key to decrease the contrast level until the screen reaches a suitable contrast level.
- Press **Left Softkey** to save any contrast changes, or press **Right Softkey** to reject any contrast changes.


## Calls

The Calls screen allows you to activate **Call diversion**, **Call waiting**, **Auto redial**, and **Withhold ID**. From the main menu, select **Settings > Calls**.

### Call diversion

You may preset your phone to divert incoming calls to a specified phone number for the following conditions:

- Divert for all calls (All incoming calls to your phone will be diverted to the number you have specified)
- Not reachable (Calls will be diverted if your phone is switched off or is out of range for signals to reach)
- No reply (An incoming call will be diverted if the phone is not answered after the time period determined by the network. The period can be set to a maximum of 30 seconds in 5-second intervals)
- Busy (Call divert will be activated if you are in the middle of a call. If call waiting is activated, a call waiting tone can be heard during the call)
- Receiving fax (Divert all fax calls to a number with a fax connection)
- Receiving data (Divert all data calls to a phone number with a PC connection)

 ***The divert status and details that you have selected will be stored in the network and not in your phone. (e.g., the divert status will remain even when the SIM card is changed).***

#### Setting up call divert and editing the number

- From the main menu, select **Settings > Calls > Call diversion**.
- Use the **▲** and **▼** navigation keys to highlight the desired condition to divert your incoming calls.
- Press **Left Softkey** to display the Option menu.
- Highlight **Set** and press **Left Softkey** to display the edit screen.
- Enter or make necessary amendments to the phone number in which the calls will be diverted to, or press **Left Softkey** to choose a number from the phonebook.
- Press **Left Softkey** to confirm the entered number. After a short pause, the network will confirm your setting.

 ***There may be additional charge for this service depending on your network.***

 ***There may be unavailable settings depending on your network.***

**Check call divert status for a condition or to disable call divert**

- From the main menu, select **Settings > Calls > Call diversion**.
- Use the ▲ and ▼ navigation keys to highlight the condition that you need to check.
- Press **Left Softkey** to display the Option menu.
- Highlight **Check status** and press **Left Softkey** for the network to transmit and display the status of the selected condition.
- To disable call divert for the selected condition, highlight **Clear** from the **Options** menu and press **Left Softkey** to confirm.

 *There will be a short delay while the network sends the divert status of your phone.*

### **Status check and cancellation of all call divers**

**Status check** allows you to check the current divert status for all the different conditions.

- From the main menu, select **Settings > Calls > Call diversion > Status check**. After a short pause, the network transmits and displays all the call divert status previously set.

**Cancel all call divers** allows you to clear all call divers that has been set previously.

- From the main menu, select **Settings > Calls > Call diversion > Cancel all**. Press **Left Softkey** to confirm or **Right Softkey** to reject the cancellation.

 *Only the call types supported by the Network are displayed on the current status screen.*

## **Call waiting**

Call waiting allows you to answer an incoming call during another call. A call waiting tone can be heard during the call to alert the user of another incoming call.

### **Setting call waiting On/Off**

- From the main menu, select **Settings > Calls > Call waiting**.
- Select **Active** to set call waiting on.
- Select **Cancel** to set the call waiting off.

The setting is saved and a confirmation message from the network will be displayed.

### **Checking status of call waiting**

- From the main menu, select **Settings > Calls > Call diversion > Call waiting**.
- Select **Status** from the menu. A message from the network will be displayed to indicate whether call waiting is activated or cleared.

## **Auto redial**

The **Auto redial** option allows your phone to re-dial an unsuccessful call up to 10 times. To set the auto redial on or off, use the following procedure:

- From the main menu, select **Settings > Calls**.
- Highlight **Auto redial** and press the **Left Softkey** to toggle automatic redial On/Off. A tick in the check box beside the option indicates the activation of Auto redial.

## Withhold ID

The feature allows you to withhold your ID when making a call to others.

- From the main menu, select **Settings > Calls > Withhold ID**.
- Press **Left Softkey** to withhold for all calls and **Right Softkey** to cancel.

## Security

The security settings protects your phone from improper and unauthorized use.

 ***These confidential numbers should be kept in a safe place for future access, if required.***

You may be required to enter one of the following security codes as shown below. When the phone prompts you for one of these codes, use the keypad to enter the appropriate number and press **Left Softkey** to confirm.

- PIN code (provided by your network to protect your SIM card if it is stolen)
- PIN2 code (provided by your network for charge information and FDN services protection)
- PUK/PUK2 code (respective personal unblocking code in case you forget the PIN/PUK code)
- Phone code (provided along with the phone and have to be entered at the first security setting)

If you forget any of these codes, ALWAYS contact your service provider as they are the ONLY source for your codes.


 ***If the PIN2 code is entered incorrectly 3 times, you will need to contact your service provider for a PUK2 code.***

 ***The PIN codes and security codes are between 4 to 8 digits.***

## Change PINs

The PIN will be requested most of the times when the phone is switched on. This feature can be deactivated, at the risk of unauthorized usage of your phone. Some mobile service providers do not permit the deactivation of this control.

You can set up your phone to require your **PIN code** entered when the phone is switched on before the phone can be used and receive any incoming calls. If you entered your **PIN code** incorrectly for more than three times (not necessarily in the same session), you will have to contact your mobile service provider for a **PUK code** to unblock your SIM card.

 ***Your phone supports advanced features (e.g. FDN) that may require a PIN2 code to be entered before they can be accessed or modified.***

### To activate PIN

- From the main menu, select **Settings > Security**. Highlight **PIN activate** and press **Left Softkey** to toggle **PIN activate** Enable/Disable. You will have to key in a **PIN code** for activation. A tick in the check box beside the option indicates that **PIN activate** has been activated.

### **PIN/PIN2/Phone code change**

- From the main menu, select **Settings > Security > Code**.
- Select either **Change PIN/Change PIN2/Chg. phone code**.
- Key in the current code. You will be prompted to enter the new code when the correct current code is entered. Enter the new code again and press **Left Softkey** to confirm the new code.
- A confirmation screen is displayed momentarily and the phone returns to **Code** display menu.

 *The PIN2 code is SIM card related and may only be available from your service provider.*

### **Phone lock**

The Phone lock menu allows you to lock your SIM card from unauthorized usage. If **Phone lock** is On, SIM data can be accessed only when the correct PIN code is entered. To enable/disable **Phone lock**, proceed as follows:

- From the main menu, select **Settings > Security**.
- Highlight **Phone lock** and press **Left Softkey** to toggle **Phone lock** On/Off. A tick in the check box beside the option indicates that **Phone lock** has been activated. You will have to key in a **Phone code** to activate **Phone lock**.

### **Bar calls**

This feature allows you to restrict the following type of calls made or received on your phone. You will need a 4-digit password provided by your mobile service provider to activate ring. You may have to register separately for each type of ring.

- All outgoing (All outgoing calls, except emergency numbers 112 and 999 will be barred)
- Outgoing international (International outgoing - Only calls within the home country can be made on the phone)
- Outgoing international except home (International outgoing without home country - International calls not permitted. However calls can still be made to your home country when you're abroad)
- All incoming (All incoming calls will be barred, including the forwarding of the calls to the mailbox)
- When roaming (You will not be able to receive calls when you are outside your home network. This means that no charges will be incurred for incoming calls)

#### **To place restrictions on certain type of calls:**

From the main menu, select **Settings > Security > Bar calls**. Use the **▲** and **▼** navigation keys to highlight the type of calls you want to restrict and press **Left Softkey** to display the Options menu.

- Select **Set** to activate. You will be prompted to enter the bar password.
- Select **Clear** to disable ring for the selected type of calls. You will be prompted to enter the bar password.
- Select **Check status** for the network to transmit and display the ring status of the selected type of calls.

#### **Change password**

- To change the password for ring, select **Settings > Security > Bar calls > Change password** from the main menu. Enter the call barring password. You will then be prompted to enter a new password twice. Press **Left Softkey** to confirm the password.

## Status check

To check the status of calls barring for all the different types of calls, select **Settings > Security > Bar calls > Status check** from the main menu. After a short pause, the network transmits and displays all the ring status previously set.

## Cancel all

To cancel all barrings previously set, select **Settings > Security > Bar calls > Cancel all** from the main menu. The password provided by your mobile service provider will be needed for this function. Press **Left Softkey** to confirm or **Right Softkey** to reject the cancellation.

## Fixed dialing

This function allows you to restrict the use of dialed number to FDN only. To change the settings for Fixed dialing:

- From the main menu, select **Settings > Security**.
- Highlight **Fixed dialing** and press **Left Softkey** to toggle **Fixed dialing On/Off**. You will have to key in the PIN2 code to display a message to activate/deactivate Fixed dialing. A tick in the check box beside the option indicates that **Fixed dialing** has been activated.
- Roaming allows you to use your phone in many parts of the world and to pay all charges through your home network Mobile Service Provider. Your network operator usually has agreements with named networks in other countries. The phone also allows you to set network preferences of your own. When dialing you will need to add the international access codes when required, so storing all numbers with the codes (such as 01 for the US) is helpful.



**Call your service provider to activate international service options.**

**Before leaving your home country you should select preferences such as call block or call transfer.**



**You will be charged for calls forwarded to you while you are roaming.**

**The FDN facility is network dependent.**

## Network

### Network info

- From the main menu, select **Settings > Network > Network info**.
- Use the **▲** and **▼** navigation keys to highlight the network you want to connect to and press **Left Softkey** to select. The screen will return to standby mode after a confirmation message is displayed.

### Choose network

- From the main menu, select **Settings > Network > Choose network**. Press **Left Softkey** to confirm. This will restart the network search that will be very useful if you are not on your home network or you need to register on a different network.

### Set automatic or manual network selection

- From the main menu, select **Settings > Network**.
- Highlight **Auto network** and press **Left Softkey** to toggle the automatic network search On/Off. A tick in the check box beside the option indicates the activation of Auto network.



**Before you manually select a network, ensure it is covered under the agreement you have with your mobile service provider.**



## View/Edit/Delete network list

When "Automatic network" is activated, the network will be selected according to the ranking order in your Pref. network. You can manually select a separate network from the list of the GSM networks available.

- From the main menu, select **Settings > Network > Pref. network** to display the Pref. Network screen with Home Network information.
- Press **Left Softkey** to display the list of networks you have added to your list. To edit this list, press **Left Softkey** and select **Insert** or **Add** to end with **Left Softkey** to display the Net operator screen, listing the major net operators.
- Use **▲** and **▼** navigation keys to highlight the net operator you wish to add to your list and press **Left Softkey** to confirm adding it to your list. The phone returns to the Network menu screen.
- To delete a network from the list, select **Settings > Network > Pref. network**. Press **Left Softkey**, highlight the network you wish to delete and press **Left Softkey** again to display the Option menu. Select **Delete** to confirm the deletion.

 *Before editing your pref. network, please contact and consult with your mobile service provider.*

## Band

- From the main menu, select **Settings > Network > Band**. Use **▲** and **▼** navigation keys to highlight the required band and press **Left Softkey** to select and turn on the radio button. The phone returns to the Network screen.
- The available bands are 900MHz; 1800MHz; 1900MHz; 900/1800MHz; 900/1900MHz

 *Frequency bands must be adjusted to suit the location when roaming (Europe, U.S., etc.), for the phone to work properly.*

## GPRS info

GPRS info displays details about the size and time of the data that has been transferred to your phone via GRPS frequency. From the main menu, select **Settings > Network > GPRS info**. From the GPRS info screen, press **Left Softkey** to reset the parameter or **Right Softkey** to go back to Network.

## Transfer rate

Select an appropriate data transfer rate for your phone. From the main menu, select **Settings > Network > Transfer rate**. Press **Left Softkey** to select from 115.2kb/s, 57.6kb/s, 38.4kb/s, and 19.2kb/s or press **Right Softkey** to return to Network.


## T9 input

Please refer to page 42 for details.

## Reset settings

To revert your phone to its default factory settings, select **Settings > Reset settings** from the main menu and press **Left Softkey**. Press **Left Softkey** again confirm resetting or press **Right Softkey** to abort resetting and return to Settings menu. You will be prompted to enter your phonecode.

 *Reverting to the default factory settings will NOT reset data in My data, Message and the Phonebook menu.*

 *If you have set the security code on your phone, you will be prompted to enter the security code in order to restore to factory settings.*

## Text Entry

This section describes how you can enter text (letters, numbers and symbols). The same method of text entry can be used in all of the phone's editing display.

### Mode change

In the text entry screen, pressing \* key can change the text entry mode in the normal text input or when T9® is activated. Pressing and holding the # key will toggle T9® input On/Off. The sequence of the entry mode is as follows:

<i>Normal Text Input</i>	<i>T9 Input Activated</i>
<b>abc</b> (All lower case)	<b>T9 abc</b> (T9® English)
<b>Abc</b> (Sentence case)	<b>T9 Abc</b> (T9® English)
<b>ABC</b> (All upper case)	<b>T9 ABC</b> (T9® English)
<b>Numeric Input</b> (123)	<b>Numeric Input</b> (123)

### Text edit screen option menu

Press **Left Softkey** in Edit mode when typing or editing text to display the **Options** menu. These options are available:

#### Inserting object


Highlight Insert object and press **Left Softkey** to display the following options:

- Highlight **Predefined sounds** and press **Left Softkey** to select built-in sound clips to be inserted into your message. Use ▲ and ▼ navigation keys to select the desired sound clip to be inserted and press **Left Softkey** to confirm.
- Highlight **Predefined animations** and press **Left Softkey** to select the animation icons to be inserted into your message. Use ▲ and ▼ navigation keys to select the desired animation icon to be inserted and press **Left Softkey** to confirm.
- Highlight **Own animations/Own pictures/Own sounds** to select animations, tones, or pictures stored in the phone to be inserted into your message. Use ▲ and ▼ navigation keys to select the desired attachment and press **Left Softkey** to confirm.

## Format

Highlight Format and press **Left Softkey** to display the following options:

- Highlight **Text format** and press **Left Softkey** to choose the following text formats for your message: **Underline/Strikethrough/Italics/Bold** or choose the desired **Font (Mid font/Large font)** for your text. Highlight your selection and press **Left Softkey** to confirm. A tick appears in the corresponding check box beside the option. Continue with your selection and press the **Right Softkey** to save the format settings and return to the previous Option menu.
- Highlight **Text color** and press **Left Softkey**. Use ▲ and ▼ navigation keys to edit the **Text color** and **Background color** of your text message. In each highlighted field, use ◀ and ▶ navigation keys to choose the desired colour for your message. Press **Left Softkey** to save and return to the message

 **Text formats like Italics and Bold cannot be applied simultaneously to your messages.**

## Predefined text

You may add a predefined text into your message editing screen. Highlight **Predefined text** and use ▲ and ▼ navigation keys to scroll through a list of texts and press **Left Softkey** to open the Options menu: either **Select** or **View** the text. Once you choose either option, the phone returns to the edit screen.

## Insert number


You may attach a phone number to the message that you are editing and send it. Highlight **Insert number** and use the ▲ and ▼ navigation keys to scroll through the phonebook and press **Left Softkey** to attach the number.

## T9 language

### T9 preferred

To select whether to activate T9 input, use the following procedure:

- From the main menu, select **Settings > T9 input**. Highlight **T9 preferred** and press **Left Softkey** to toggle T9® preferred On/Off. A tick in the check box indicates that T9 input has been activated.

 **Alternatively, you can press and hold the # key in the text entry screen to toggle T9® input On/Off.**

### T9 English text input

Your phone supports T9® Text Input and will try to deduce the correct word by individually comparing the entered letters with an extensive in-built dictionary, enabling fast and intuitive text input.

For each letter to be keyed in, you will only need to press the number key corresponding to the alphabet once. The screen will display the word you may require based on the in-built English dictionary of the mobile phone. An example of it shown as follows:

- With the text entry screen displayed, press \* key to switch to desired T9® English input case(**T9 abc/T9 Abc/T9 ABC**) before entering the word/sentence.
- To enter the word "good", press **4, 6, 6** and **3** then press **0** to complete the word with a spacing after the word.

- To enter "Peter is good", press **7, 3, 8, 3** and **7** to display 'Peter', then press **0** to confirm.
- Press **4** and **7** to display 'is', then press **0** to confirm.
- Press **4, 6, 6** and **3** to display "good", then press **0** to confirm. The sentence is now completed.

#### Other key functions

- **0**: To insert a space and/or complete the word.
- **Left Softkey**: To display other words with the same combination of letters (eg. words like **home, gone** and etc. can be formed by pressing the number keys **4, 6, 6, 3** and **Left Softkey**).
- **Right Softkey**: To delete the letter to the left of the cursor
- **◀ / ▶** navigation key: To move the cursor around and each of the words keyed will be highlighted.
- **\*** key: To toggle the different modes of text entry.
- **#** key: To activate the symbol list; Press and hold to toggle T9® input On/Off.

#### Normal text input (ABC)

With the text entry screen is displayed, long press **\*** key until the entry mode is Normal text (ABC) input. Use number keys to enter letters. For example, to enter **e**, press **3** twice; to enter **f**, press **3** three times.

#### Other key functions


- **0**: To insert a space.
- **Right Softkey**: To delete the letter to the left of the cursor.
- **◀ / ▶** navigation key: To move the cursor around.
- **\*** key: To toggle the different modes of text entry.
- **#** key: Press to activate the symbol list; Press and hold to toggle T9® input On/Off.

#### Numeric input

With the text entry screen is displayed, press **\*** key until the entry mode is Numeric input (123).

# Message

From the main menu, select **Message**. Using this function, you can send and receive text messages with attached sound, image files, etc.

 **Alternatively, you can press ► navigation key to access the Message menu directly from the standby screen.**

The following folders in the **Message** menu have the following functions:

- **Inbox** : The received messages are saved. (To enter, select **Inbox** from **Message** menu screen.)
- **Draft**: The edited messages are saved.(To enter, select **Draft** from **Message** menu screen)
- **Outbox**: The sent messages are saved and specified. (To enter, select **Outbox** from **Message** menu screen.)

 **When the storage memory is full, your sent messages will not be stored in the Outbox.**

## Message overview

Your phone supports the following messaging services:


- **SMS (Short Messaging Service)** allows you to send short messages. To send an SMS message, the destined phone number must be a mobile phone with an SMS service subscription. A text messages of up to 1520 characters can be transmitted and received via your phone. When long SMS messages are sent or received by the phone, they are automatically broken down into a series of short SMS messages. (Do take note of the higher charges for these long messages sent). Pictures and sounds can also be included inside the SMS.
- **EMS (Enhanced Messaging Service)** is similar to SMS and allows you to send to another EMS capable mobile phone. In your EMS message, you can include formatted text, small graphics, animations and musical sounds. If the destined phone is only capable of SMS, only the text part of the message will be received.

 **The Short Messaging Service and linking of SMS messages are network dependent.**

## Message list screen options menu

The following options will be displayed when **Left Softkey** is pressed in the message list (Inbox/Draft/Outbox)screen:

- View-Display the message contents.
- Reply via SMS - Display the SMS Edit screen to type a message to reply to the sender and select options menu: **New SMS**, **Edit**, **Answer is Yes** and **Answer is no**.(available for **Inbox only**)
- Forward - Display the **Edit** screen for the forwarding of the message. (available for **Inbox only**)
- Detail-Display the date, time and sender's information.(available for **Inbox/View mode only**)
- Edit - Display the message in the **Edit** screen for editing. (available for **Draft/Outbox only**)
- Delete - Delete the highlighted message
- Delete all - Delete all the messages in the current folder.
- Extract number - Display the phone number of the message.

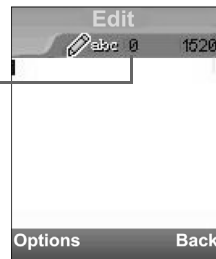

**This number indicates the size of the message equivalent to the number of SMS messages (maximum of 10).**

To select an option, highlight the option and press **Left Softkey**.

 **Depending on the type of message you are viewing, the available options menu may change.**

## SMS edit screen options menu

When creating an SMS in the **Edit** screen, press **Left Softkey** to access the following options:


- **Send** - Send the edited SMS and subsequently save it in **Outbox**.
- **Save** - Save the edited SMS in **Draft**.
- **Insert object** - Insert pictures, sound or animations into the edited SMS.
- **Format** - Change the format of the fonts.
- **Predefined text** - Insert a pre-defined user message into the edited SMS.
- **Insert number** - Insert a phone number from the Complete Phonebook.


To select an option, highlight the option and press **Left Softkey**.

## To read a message

Select **Message** from the main menu or press  navigation key directly from the standby screen.

- Press **Left Softkey** to display the message list of the highlighted mailbox (**Inbox/Draft/Outbox**).
- Highlight the message to be read and press **Left Softkey**. Select **View** from the **Options** menu. The message contents will be displayed.

 **Please review message only after the whole series of SMS has been received by your phone. When the phone has not finished receiving the long message, there will be a popup notification that the message is incomplete and it cannot be viewed.**

 **If you receive a message at the same time the alarm is due to ring, you will not receive any popup notification that a new message is received; as alarm clock is a higher priority event. Likewise, no notification will be received when the message is received during a call or when there is an incoming call. The phone will emit a beep tone only if the call is put on hold.**

## Creating and sending a message


The following describes the operations related to creating and sending a message.

### To create and send a new SMS message

Select **Message** from the main menu or press  navigation key directly from the standby screen.

- Select **Create** to display **Edit** screen.
- Input your message.
- When done, press **Left Softkey** to display the **Options** menu. Highlight **Send** and press **Left Softkey**. Input the recipient's number using the text editor.
- To send the SMS to a number in the phonebook list, press **Left Softkey** and highlight **Phonebook** from the **Options** menu, then press **Left Softkey** again and choose accordingly.
- Press **Left Softkey** to insert a number from the phonebook list.

- To send, press **Left Softkey** to display the Options menu, then press **Left Softkey** again to send. After sending, the SMS will be saved in the Outbox.

 For more information on 'Inserting object' and 'Format', please refer to page 41 and 42.

#### To reply SMS to a received message

Select **Message** from the main menu or press ► navigation key directly from the standby screen.

- Select **Inbox** from the **Message** menu screen. Highlight the message to reply to, press **Left Softkey** for the Options menu. Select **Reply via SMS** and select options: **New SMS**, **Edit**, **Answer is Yes** and **Answer is no**.
- The **Edit** screen will be displayed with the text editor.
- Input the message and press **Left Softkey** for the Options menu when the SMS reply is done. Highlight **Send** and press **Left Softkey** to send the SMS reply. The message is sent and saved in **Outbox**.

#### To forward a received message

Select **Message** from the main menu or press ► navigation key directly from the standby screen.

- Select **Inbox** from the **Message** menu screen. Highlight the message to forward and press **Left Softkey** for the Options menu. Highlight **Forward** and press **Left Softkey**.
- If necessary, press **Left Softkey** again for the Options menu. Highlight **Send** and press **Left Softkey** to forward SMS.

### Useful Tips For SMS and EMS

The useful tips for writing and sending a message are shown below:

#### Saving an unfinished and unsent message:

In the message **Edit** screen, press **Left Softkey**, select **Save** to save the message in **Draft**.

#### Editing and sending a message saved in Draft:

Displaying the **Draft** message list screen, highlight the saved message.

- Press **Left Softkey**, select **Edit**. After editing the message, press **Left Softkey** to display the Options menu. Select **Send** to send the message.

### Predefined text

From the main menu, select **Message** > **Predefined text**. The list of predefined text for you to add into your messages will be displayed. Highlight the desired message and press **Left Softkey** to either **Select** or **View**.

- Highlight **Select** and press **Left Softkey** to display the message editing display. After changes are made, press **Left Softkey** to either **Send** and save or just **Save** the message.

## Message settings

The following describes the setting items for SMS/EMS settings and Cell broadcast settings:

### Service centre

- Use the ▲ and ▼ navigation keys to highlight **Service centre** and press **Left Softkey** to edit the SMS Message centre number.
- Press **Left Softkey** to save any changes made to the number. This number is saved in the SIM card.

### Message type

- Use the ▲ and ▼ navigation keys to highlight **Message type** and press the **Left Softkey** to display the **Message type** screen.
- Use the ▲ and ▼ navigation keys to highlight the different options and press **Left Softkey** to select: **Standard text/Fax/ X.400/Paging/E-mail/ERMES/Voice mail**. The corresponding radio button beside the option will be turned on.

### Validity period

Select the duration that the SMS/EMS message will be stored in the SMS/EMS centre while trying to deliver the message.

- Use the ▲ and ▼ navigation keys to highlight **Validity period** and press the **Left Softkey**.
- Highlight **1 hour/12 hours/1 day/1 week/Maximum**. Press **Left Softkey** to select and turn on the radio button of the highlighted option. The phone returns to the Setting menu screen.

### Status report

Select this option to request for a receipt when the SMS message is sent successfully.

- Use the ▲ and ▼ navigation keys to highlight **Status report** and press **Left Softkey**. A tick in the check box indicates that **Status report** is activated.

 *The status report facility is network dependent.*

### Direct reply

- Use the ▲ and ▼ navigation keys to highlight **Direct reply** and press **Left Softkey** to toggle it On/Off. A tick in the check box indicates that **Direct reply** is activated.

### SMS via GPRS

- Use the ▲ and ▼ navigation keys to highlight **SMS via GPRS** and press **Left Softkey** to toggle it On/Off. A tick in the check box indicates that this function is activated.

## Memory status

The available memory and the used-up memory will be displayed.

- With the standby screen displayed, press ► navigation key or select **Message** from the main menu.
- Select **Memory status** to display the SMS memory status of the phone and the SIM memory status.



From the main menu, select **Message** > **Cell broadcast**.

-  *When cell broadcast service is activated, the phone operating time will be reduced.*
-  *Broadcast messages service is network dependent. Please contact your service provider for details.*

### Message list

Select **Message list** to display the list of received cell broadcast messages.

### Broadcast

Highlight **Broadcast** and press **Left Softkey** to toggle the receiving of the cell broadcast messages On/Off. A tick in the check box indicates that the receiving of cell broadcast messages is activated.

### Topic list

Any number of topics can be added to this personal list. You can enter at least five entries using the channel number (ID) and if required, the name itself.

- To add a new topic, select **Topic list** > **User defined** > **<Add new>** to display the **Enter msg ID:** screen. Enter the ID and press **Left Softkey**. Enter the name and press **Left Softkey**.
- To add to a current topic, select **Topic list** > **Current** > **<Add Topic>** to display a list of topics to choose from.
- To delete a topic, highlight the topic, press **Left Softkey** and select **Delete**.

### Auto display

Turns the automatic display function On/Off for cell broadcast messages to be displayed in standby mode.

- Use the **▲** and **▼** navigation keys to highlight **Auto display** and press **Left Softkey** to toggle it On/Off. A tick in the check box indicates that **Auto display** has been activated.

### CB languages

The language in which you wish to receive cell broadcast messages in can be specified.

- Select **CB languages** to display the list of available languages. To add a new language, press **Left Softkey** and select **Insert**. Highlight the desired language to add to the list and press **Left Softkey** to confirm selection. The phone returns to the **Cell broadcast display** menu.

## **i-mode**

Your phone allows you to use the i-mode feature. With it, you can connect to Internet websites and use the mail function. This chapter guides you through setting up and using i-mode.

To access the i-mode service, you need to:

- Contact your service provider and subscribe to it.
- Set up the i-mode options in your phone.

### *What is i-mode*

i-mode is a platform for mobile phone communications. With i-mode, cellular phone users get easy access to Internet sites, as well as specialized services such as e-mail/Multimedia Message Service (MMS), online shopping and banking, ticket reservations, and so on.

#### **i-mode website connection**

With simple key operations, users can link to a variety of websites offered by content service providers.

#### **E-mail/Multimedia Message Service (MMS)**

In addition to the basic calling/receiving functions, your phone allows you to receive and send e-mails/MMS via the Internet.

#### **Website Browsing**

In addition to visiting the websites already provided by the i-mode service, you may also access to your preferred websites by directly entering their URLs into your phone.

### *What Can be Downloaded?*

You may download the following four types of content from any i-mode website:

- Ring tones
- Wallpapers
- Animations (Startup screens)
- Java™ applications

#### **What is a Ring tone?**

The ring tone sounds when your phone receives an incoming call, SMS, e-mail, and multimedia message service (MMS).

## What is a Wallpaper?

This is the picture displayed when your cell phone is in the idle or power-saving mode. You may download any of the 65536-colour pictures on the website to your phone.

## What is a Startup Screen Animation?

The animation is played when you power on your phone. You may download any of the 65536-colour animations on the website to your phone.

## What is Java™ applications?

See "Java™ applications" on page 73 for details.

### *i-mode icon*


See "i-mode icon" on page 14 for details.

### *i-mode Settings*

From the main menu, select **i-mode > Settings**.

#### Ringer time

The function allows you to set the length of **Ringer time** when you receive an e-mail or MMS:

- Select **Ringer time** from the **Settings** menu.
- Press **Clear** to delete the current settings on the screen.
- Enter the preferred time length (3-10 Sec.) by pressing keypad keys and press  to save the setting.

#### Connection No.

The function allows you to select the **Connection No.** you have set to connect to the i-mode service. You can choose from the factory or user settings.

- When you select **Connection No.** menu, you will see the current connection number that is in use with the radio button on.
- Select the preferred setting and press **Left Softkey** to activate the number.

 **Required parameter information includes APN, Proxy host, Proxy port, SSL port, Portal host, Mail URL, MMS URL, Username, and Password.**


To customize the connection number, follow the steps below:

- Select setting you want to change and press **Edit** to enter the parameter. You will be prompted to enter the phonecode.
- Enter the information required in the parameter fields and press **Save** to confirm your changes.

## i-mode lock

If the i-mode lock function is activated, users can not apply any i-mode service and receive/send e-mail/MMS.

- Select **i-mode lock**, the screen shows the lock status to be on or off. Press **Change** to toggle between lock/unlock mode. You will be prompted to enter the phonecode.

 **If i-mode lock is activated, the phone screen shows a lock icon.**

## iMenu


From the main menu, select **i-mode > iMenu**.

When connected to an i-mode website, it displays a list of options depending on the website. You can press the **Left Softkey** and the phone displays a list of browser Options menu:

Add bookmark	Add the current web page to the Bookmarks.
Bookmarks	Display a list of Bookmarks, which shows only when there is more than one Bookmark.
Save image	Save the images on the current web page.
Save page	Save the current web page.
Save phone#	Save the number on the web page to your phone book.
Certificate info	Display the certificate Information of the current web page, which must be a SSL webpage.
Go to webpage	Go to the website address or Select form the list.
Reload	Update the information on the current webpage.
Page info	Display the URL of the current webpage.
Create message	Create a message or display a message edit screen. You can Select to insert reference: Page address or Link and then edit the content of message.


## Mail



From the main menu, select **i-mode > i-mode > Mail**.

 **Alternatively, you can access Mail menu by pressing Left Softkey from the standby screen.**

### Compose mail



This function allows you to edit, send and save email.

- Select **Compose mail** and enter the editing screen.
- Select the item you would like to change and press . The phone displays the entry screen.

- Enter the **Mailing address** (To1 item), **Subject** (Max. 30 alphanumeric characters) and **Message** (Max. 4000 alphanumeric characters) of the mail, press . The mail-editing screen displays again, showing that the subject has been added.
- Select **Attachment**, press  and enter the attaching file screen.
- Select the file you would like to attach and press **Select** to display the preview screen. After the file is attached, the **Attachment** item will display the file name.
- Press **Send** to deliver the email.



While you are editing or writing an email, press **Menu** to have the following options:

<b>Send</b>	Send the e-mail.
<b>Save</b>	Save the e-mail that you are editing as a draft.
<b>Attach file</b>	Attach a file.
<b>Delete attachment</b>	Delete the attached file.
<b>Play/View file</b>	Play the audio file or view the image file.
<b>Open phonebk.</b>	Access the phonebook to add the mailing address.
<b>Add To</b>	Add more recipients' addresses.
<b>Add Cc</b>	Add courtesy copy recipients' addresses.
<b>Add Bcc</b>	Add blind courtesy copy recipients' addresses.
<b>Change to To</b>	Change the Cc. or Bcc recipients to To recipients.
<b>Change to Cc</b>	Change To or Bcc recipients to Cc recipients.
<b>Change to Bcc</b>	Change To or Cc recipients to Bcc recipients.
<b>Del. address</b>	Delete the chosen e-mail address.
<b>Attach header</b>	Add headers before a text.
<b>Attach sign.</b>	Add a signature after the text.
<b>Del. message</b>	Delete the message.
<b>Del. mail</b>	Delete the message currently edited.


Select **Send** and press  to deliver the e-mail and the phone returns to the Mail menu. Select **Save** and press  to save the message as a draft and the phone returns again to the Mail menu.



## Compose MMS

This function allows you to edit, send and save MMS.

- Select **Compose MMS** to enter the item directly.
- Select the item you would like to change and press . The phone displays the entry screen.
- Enter the **Mailing address/phone number** (To1 item), **Subject** (Max. 30 alphanumeric characters) of the MMS, press . The mail-editing screen displays again, showing the subject is added.
- When you are editing MMS, press **Menu** to have the following functions:

Send	Send the e-mail.
Save	Save the e-mail that you are editing as a draft.
Attach file	Attach a file.
Delete attachment	Delete the attached file.
Play/View file	Play the audio file or view the image file.
Open phonebk.	Access the phonebook to add the mailing address.
Add To	Add more recipients' addresses.
Add Cc	Add courtesy copy recipients' addresses.
Add Bcc	Add blind courtesy copy recipients' addresses.
Change to To	Change the Cc. or Bcc recipients to To recipients.
Change to Cc	Change To or Bcc recipients to Cc recipients.
Change to Bcc	Change To or Cc recipients to Bcc recipients.
Del. address	Delete the chosen e-mail address.
Attach header	Add headers before a text.
Attach sign.	Add a signature after the text.
Del. message	Delete the message.
Del. mail	Delete the message currently edited.

 **Attach file, Delete attachment and Play/View file are not available for MMS. They are always grayouted.**

Select **Send** and press  to deliver the MMS and the phone returns to the **Mail** menu. Select **Save** and press  to save the MMS as a draft and the phone returns again to the **Mail** menu.

## Inbox

This function allows you to read and manage received mails and MMS.

### Read mails/MMS

Select **Inbox** to enter the item.

Select the message you would like to read and press  read it. You may press menu to have the following options:

<b>Show all</b>	Show all messages.
<b>Show unread</b>	Show unread messages.
<b>Show read</b>	Show read messages.
<b>Show protect.</b>	Show protected messages.
<b>Delete one</b>	Delete chosen message.
<b>Delete read mail</b>	Delete read messages
<b>Delete all</b>	Delete all messages
<b>Title sort</b>	Sorts the messages by title.
<b>Address sort</b>	Sorts the messages by address
<b>Date sort</b>	Sorts the messages by the date

Displaying a message, you may press menu to have the following functions:

<b>Reply</b>	Reply to the message.
<b>Reply quoted</b>	Reply with a quoted message.
<b>Reply all</b>	Reply to all messages.
<b>Reply quoted all</b>	Reply to the quoted parts of all messages.
<b>Forward</b>	Forward the message.
<b>Delete</b>	Delete the message.
<b>Save address</b>	Save the address of the message .into the phone book.
<b>Add to phonebook</b>	Add the phone number of the message to phonebook.
<b>Create message</b>	Create a new message.
<b>Save melody</b>	Save the message melody.
<b>Save attachment</b>	Save the attachment.

<b>Copy message</b>	Copy the message for later use.
<b>Copy subject</b>	Copy the subject for later editing.
<b>Copy address</b>	Copy the address.
<b>Play SMIL</b>	Play SMIL file.
<b>Browse SMIL</b>	Browsing the MMS content.
<b>Protect On/Off</b>	If the mail is unprotected, the function is turned on. If the mail is protected, the function is turned off.

#### Sent mail

This function allows you to see the list of sent messages.

Select **Sent mail** to enter the option directly, and press **Menu** to have the following functions.

<b>Title sort</b>	Sorts the messages by title.
<b>Address sort</b>	Sorts the messages by address.
<b>Date sort</b>	Sorts the messages by date.
<b>Delete one</b>	Delete the chosen message.
<b>Delete all</b>	Delete all messages.

When choosing a mail/MMS, press  to read the content. The following options become available:

<b>Re-edit</b>	Re-edit the message.
<b>Delete</b>	Delete the message.
<b>Save address</b>	Save the address of the message into the phonebook.
<b>Add to phonebook</b>	Add the phone number of the message to Phonebook.
<b>Create message</b>	Create a new message.
<b>Copy message</b>	Copy the message for later use.
<b>Copy subject</b>	Copy the subject for later editing
<b>Play SMIL</b>	Play SMIL file.
<b>Browse SMIL</b>	Browse the MMS content.
<b>Protect On/Off</b>	If the mail is unprotected, the function is turned on. If the mail is protected, the function is turned off.



### Draft

Select **Draft** to enter the item directly, and you may press menu to have two options: **Delete one** or **Delete all**.

Select the draft you would like to edit (please refer to the above "**Compose mail**" for detailed information.)

### Selective retrieval

Displays the list of stored mail/MMS on the mail server, and lets you select whether to retrieve or delete each one.

### Check new mail

Select **Check new mail** to enter the item directly, and the phone will access to mail server and check if there is new mail.

### Mail settings

Select **Mail settings** to enter the option directly, and you will see the following options:

<b>Edit header</b>	Edit a header.
<b>Edit signature</b>	Edit your signature.
<b>Reply marker</b>	Select your reply marker.
<b>Auto play</b>	Set the phone to play the attachment or MMS automatically.
<b>Auto reception</b>	Set the phone to download mails automatically.
<b>Receive attachment</b>	The option allows you to receive the attached image and MIDI file.
<b>Attachment data</b>	The option allows you to received attached MFi file.
<b>Check settings</b>	This displays all the current settings of all the Mail menu options.
<b>Back</b>	Return to the Mail menu.

### Back

Return to the i-mode menu.

## *Java application*

Please see "Java™ application" on page 73 for detail.

## *SMS*

Please see "Message overview" on page 44 and "SMS/EMS settings" on page 47.

## *Bookmarks*

The option shows a list of **Bookmarks**, allowing you to edit again, change the title, delete or access the webpage listed in the **Bookmarks**.

Under the i-mode screen, you may either select **Bookmarks** to directly enter the **Bookmarks**.

Select the preferred **Bookmarks** and press menu, and you will see a list of options:

Open	Connect to the website and display the web page
Copy address	Copy the address of the chosen bookmark
Edit title	Edit the title of the chosen bookmark.
Create message	Create a message or display the message edit screen and the address of the chosen bookmark will be inserted to the text of the mail.
Delete one	Delete the bookmark that you select..
Delete all	Delete all the bookmarks.

## *Go to webpage*



With the function, you may select to enter a specific URL or select from the URL history list.

Under the i-mode menu screen, select **Go to Webpage** to enter it.

### Enter address

- Select to enter the item, and you may use keypad keys to enter website address.
- Select **OK** to save your entry or cancel to delete the entry.

### Address history

- Select **Address history** to enter the item .
- Select the preferred URL and press  to open the website address entry screen again.
- Select **OK** and press  to link to the webpage.

### Back

Select the item to go back to the menu screen.

## Saved pages

Select the item to enter the Saved Pages.

Press menu to have the following options:

Open	Open the saved pages.
Edit title	Edit the title you have saved.
Protect On/Off	If the screen data is unprotected, the function will be turned on. If the data is protected, the function is turned off.
Delete one	Delete the page you want to discard.
Delete all	Delete all the saved pages.

After you've chosen the preferred Saved pages, press menu to have the following options:

Save image	Save the image on the Saved Pages.
Edit title	Edit the title on the Saved Pages.
Certificate info	Display the certificate information of the currently displayed website. The function is available when it is SSL webpage.
Page info	Display the URL of the currently displayed webpage.
Protect On/Off	If the screen data is unprotected, the function is turned on. If the data is protected, the function is turned off.
Delete	Delete the current page.

## Settings

Under i-mode menu, Select settings and press  to directly enter the item. Entering Settings, you will see the following options:








Set time out	The function allows you to set the automatic time out (60/90 Sec. or Disabled). Select the preferred time out option and then select OK to confirm your change.
Load images	The function allows you load images from the webpage. Select either Yes or No to confirm or cancel the choice.
Certificates	The function allows you to look at the certificate details and set the certificates to either valid or invalid. Select the preferred certificate, press menu and 1 to check the certificate information or press menu and 2 to set the certificate to either valid or invalid.
Send terminal info	You may also send the terminal information.
Check settings	The function allows you to check the current settings of all options. Select <b>Check settings</b> to enter the option.
Back	Go back to the i-mode menu.

# Camera



The integrated digital camera in the phone allows you to take photos and send them out via the Multimedia Messaging Service (MMS) or as an e-mail attachment. The photos will be stored in JPG format in the phone, and can be viewed by most picture viewing programs.



## Taking a picture

To take and save a picture inside your phone, use the following procedure:



- From the main menu, select **Camera**. The Camera finder screen will appear in the main LCD and the actual composition of the picture will be shown.
  - Press  key to capture the picture. Check the picture and press  key to save the picture you just taken. When the preview screen is displayed, press **Left Softkey** to send the picture, **Right Softkey** to return to the camera finder screen without saving the picture.
  - The default file name for the picture is image+serial number, for instance image0001.
  - To return to the camera finder screen, press **Right Softkey**.
  - To switch off the camera function, press  key to return to the standby screen.
-  *Your phone's camera is constructed using extremely high precision technology, but there may be lines or dots on the screen that appear permanently dark or bright. Note also that the amount of noise in the image (white lines etc.) may increase noticeably when you take pictures in dimly-lit places.*
-  *Be careful not to apply force to the lens. This could damage the lens.*
-  *Be considerate of other people's privacy when you take a picture using the camera of your phone and send it to others.*
-  *Remember to turn off the camera after using to save power.*

## Zoom

When taking a picture in the camera finder screen, you can zoom in by pressing  navigation key. To zoom out, press  navigation key.

-  *The zoom function cannot be activated when an image size of 640 x 480 is selected. For a selected image size of 320 x 240, you can zoom in only once, and for a selected image size of 160 x 120, you can zoom in twice.*
-  *You can display the Quick keys by pressing # key on the camera finder screen.*

## Brightness


Press the  or  navigation keys to control the brightness level of the picture when taking a picture in the camera finder screen.

## Camera (before taking a picture)

 **When in camera mode, the phone returns to standby mode after 3 minutes of idling.**

Press **Left Softkey** from the camera finder screen to display the **Options** menu for the camera to set the following:

### Self timer

- Highlight **Self timer** and press **Left Softkey** to toggle this function On/Off. The picture is taken after 10 seconds after  is pressed during picture taking.

### Twilight

- Highlight this function and press **Left Softkey** to toggle this function On/Off. The exposure time will be increased during photo taking due to the poor light conditions.

### Close up

- You can take a close up photo by activating this mode.
- Highlight **Close up** and press **Left Softkey** to toggle this function On/Off

### Normal/Full screen

- You can switch the screen between Normal mode or Full mode.
- Highlight **Normal/Full screen** and press **Left Softkey** to toggle this function On/Off.

### Photo size

The image size can be set for external usage (e.g., on a PC) regardless of the image shown in the display screen (which will be at the default of VGA (640 x 480)).



- Highlight **Photo size** and press the **Left Softkey** to display the **Options** menu. Use the **▲** and **▼** navigation keys to highlight the image size that best suits your needs and press **Left Softkey** to confirm the selection.
- The available sizes are: VGA (640 x 480); QVGA (320 x 240); QQVGA (160 x 120).
- A larger image size will take up more memory space.

### Brightness

- Highlight **Brightness** and **Left Softkey** to adjust the brightness for the photo shoot with the use of **▲** and **▼** navigation keys. Press **Left Softkey** to confirm the setting.

### Image quality

- Highlight **Image quality** and press the **Left Softkey** to display the **Options** menu. The quality of the photos can be set as **Fine/Normal/Economy**. Use the **▲** and **▼** navigation keys to highlight and select the quality by pressing **Left Softkey**.
- A 'Fine' quality photo implies that the photos taken will be of better quality. However, the total number of pictures that can be taken will be reduced.

-  **Images shot in your phone cannot be used in ways that infringe copyright laws without the consent of the copyright holder, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use.**
-  **Users are also asked to note that the transfer of images protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.**

## Effect

- Highlight Effect and press the **Left Softkey** to display the Options menu.
- Use the **▲** and **▼** navigation keys to highlight and select the different colour tint to take your photo: Normal/Monochrome/Sepia/Bluish. Change the colour tint setting by pressing **Left Softkey**. The radio button beside the option will be turned on.

## Flicker control

When taking pictures under a fluorescent light, flickers may occur. To prevent flickers, use the following procedure:

- Highlight Flicker control and press **Left Softkey** to display the Options menu.
- Use the **▲** and **▼** navigation keys to select 50Hz/60Hz and press **Left Softkey** to confirm your selection. The radio button beside the option will be turned on.

## Default setting

By selecting this menu you can return the Options menu to the default settings.

- Highlight Default setting and press **Left Softkey** to reset the camera Options menu.

## Camera ption menu (after saving a picture)

### Send via iMail

- By selecting this menu, you can attach the saved picture to an mail.

### Send as MMS

- By selecting this menu, you can attach the saved picture to an MMS.

### Set as wallpaper

- By selecting this menu, you can set the saved picture as the wallpaper.

### View finder

- By selecting this menu, you can return to the camera finder screen.


### Go to my photos

- By selecting this menu, you can access the photos folder in My data.

Your phone can store up to 8 different contacts phonebooks:

- Complete (a list of all the numbers stored in the other phonebooks(Phone,SIM,FDN) except SDN numbers)
- Personal directories (ADN) in SIM
- Personal directories (ADR) in your phone memory (Phone)
- Own number
- Service dialing numbers (SDN)
- Fixed dialing numbers (FDN)
- Groups
- Voice mailbox

 **The phone number of a contact is displayed when the name is highlighted in the phonebook.**


 **When viewing any of the directories described, you can switch to the other directories (if your SIM card supports them) by using the ◀ navigation key.**

From the main menu, select **Phonebook > Lists** to display the phonebook entries. Alternatively, press ◀ navigation key directly from the standby screen. To display the other phonebooks, press either ◀ or ▶ navigation keys till the desired phonebook is displayed. The name of the type of phonebook list is displayed at the top of the list.

The next time you press ◀ navigation key from the standby screen, the phonebook displayed will be the last one in use before you exit the phonebook and return to the standby screen.

### Personal Directory (ADN)

The personal directory numbers are known as Abbreviated Dialing Numbers (ADN). Up to 255 numbers can be stored (along with only one name for each number) on your SIM (depending on your SIM card capacity). Up to 250 numbers can be stored along with a name, ring melody and a phonebook picture in your phone memory. The phone memory also allows you to store 4 phone numbers, 2 e-mail addresses, note, company, street, post code, country, city, and URL under one name. You can also group names in your phone memory to simplify searching. The numbers from either of these personal phonebooks can be viewed, altered and dialed when you need to do so.

 **The maximum number of 250 phone numbers that can be stored on a SIM card is shared between the ADN, FDN, and SDN directories.**

### Service Dialing Numbers (SDN)

The numbers stored in the SDN phonebook are supplied, ready to use, and installed by your service provider. The SDN phonebook contains numbers and services that cannot be edited by you. You will not be able to see the number that is dialed as only the associated text title will be shown.

 **Although SDN is supported by your phone, it must be present on your SIM. Check with your service provider.**

## Fixed Dialing Numbers (FDN)

Fixed dialing numbers is a function to limit the numbers that can be called using your phone. With the FDN feature turned ON, only contacts you stored in the FDN phonebook and emergency numbers can be called from your phone.

 Although FDN is supported by your phone, it must be present on your SIM. Check with your service provider.


## Storing numbers & name in phonebook


### Starting and recall stored number

The phone numbers in your personal phonebook can be located and then called using one of the following methods:

#### Alphabetical contacts phonebook list


From the main menu, select **Phonebook > Lists** to display the phonebook entries.


- To change phonebooks (e.g. from phone memory to SIM), press either ◀ or ▶ navigation key. The entries in the other personal phonebook will be displayed.
- Use the ▲ and ▼ navigation keys as appropriate to scroll through your phonebook directory or hold them down to scroll down continuously. To jump directly to names starting with a specific character, press the corresponding number key (e.g. press **5** once to jump to names beginning with **J** or twice to jump to names beginning with **K**). To jump to a name beginning with specific letters, press the corresponding number keys for the first few letters of the desired name.
- To call the highlighted phone record number displayed, press the  key.


 **When the phone number saved in the phonebook contains 8 digits, the name of the caller might not display on the screen when there is an incoming call, or in the missed calls and received calls list. When the phone number saved in the phonebook contains 11 digits and an 8-digit phone number is dialed, the name of the called party might not be displayed under the dialed calls list.**

#### Search by group

From the main menu, select **Phonebook > Lists** to display the phonebook entries. Press either ◀ or ▶ navigation key till the **Groups** list screen is displayed. Use the ▲ and ▼ navigation keys as appropriate to scroll through the **Groups** list. When the required group name is highlighted, press **Left Softkey** to display the **Options** menu. Select **View group** to display the names of the entries in the selected group.

- Use the ▲ and ▼ navigation keys as appropriate to scroll through the names.
- To call the phone record number, press the  key.

 **The cursor is positioned on the right of the title bar in the phonebook list. This allows you to enter the characters to perform a search for the contact you wish to recall.**

 **To call numbers in the SDN directory, press ◀ the navigation key until the SDN directory is displayed and then use either the scrolling or searching method to locate and call the number.**




## Editing or personalizing phone memory numbers

The edit function enables any phone number stored in the phone memory to be edited and have additional information/attributes added to the number.

### Accessing the option menu

From the main menu, select **Phonebook > Lists** to display the phonebook entries.


- Press either ◀ or ▶ navigation key until the desired phonebook is displayed: **Complete, SIM, Phone, Own number, SDN, FDN, Groups, or Voice mailbox.**
- When the desired phonebook record (name or number) is highlighted, press **Left Softkey** to display the Options menu, highlight **View** and press **Left Softkey** to display the Edit entry screen.

 **If the FDN function is set to ON, only numbers in the FDN directory can be called.**

### SIM memory edit

The Edit function can be used to alter the existing information in a SIM memory record as follows:

- When a SIM memory record has been accessed for editing purposes, the following fields can be edited: **Name, Phone number, Location and Record no..**
- Use the ▲ and ▼ navigation keys to highlight the fields to be edited.
- Use the text editing feature to make any changes necessary to the name or number and then press **Left Softkey** to save the changes and return to the previous screen and re-display the contact details.

 **To select a country code/ area code for the number while editing an entry, press **Right Softkey** to access the **+List** menu and select the desired country.**

### Phone memory edit

The Edit function can be used to alter the existing information in a phone memory record. You can alter the following information:

- Name
- Phone number

You can also add the following information to a record in the phone memory:

- Other phone numbers (Office number, Mobile number, Fax number).
- 2 additional e-mail addresses.
- A phonebook picture ID for the caller.
- A specific ringtone/melody for the caller.
- Other personal information into the information fields (Note, Company, Street, Post code, Country, City).
- A URL.
- Allocate the phone number to a group or remove the phone number from a group.

Editing existing phone memory information

- With the required phone record details displayed in the **Edit entry** screen, use the ▲ and ▼ navigation keys to highlight the fields to be edited and use the text editor to make the necessary changes to the details of the record.
- Press **Left Softkey** to save the entries and return to the previous screen.


 **To set the Caller picture and Caller ringtone, you can select from options by pressing .**

## Groups

### Creating a group name


There are 6 groups available to allocate phone numbers to (including 'No group').

To change the group names, use the following procedure:

- With the standby screen displayed, press ◀ navigation key or select **Phonebook > Lists** from the main menu to display the phonebook entries.
- Press either ◀ or ▶ navigation key till the **Groups** list screen is displayed.
- Use the ▲ and ▼ navigation keys to highlight the group name you wish to rename and press **Left Softkey** to display the **Options** menu. Select **Rename group** to display the editing display screen. Make the necessary changes to the name and press **Left Softkey** to save and return to the **Groups** list screen. Press  key to return to the standby screen.

### Add a phone contact to a group

With the group function, it is now possible to allocate specific members to be under a certain group. For example work, golf, and family, etc. When a member of the group calls, the assigned group image and melody will be activated.


- With the desired phone record to be added to the group displayed, go to **Edit entry** and use the ▲ and ▼ navigation keys to highlight **Group** field and press **Left Softkey** to change. Use the ◀ and ▶ navigation keys to toggle between the different groups (Friends, Colleagues, Biz partner etc.) available.
- Press **Right Softkey** to save changes and press  key to return to the standby screen.

### Ungroup a phone number or remove all entries from the group

To remove a contact from the allocated group, use the above-mentioned procedure but scroll to <No group> and save the changes. To remove all contacts from the allocated group, use the ▲ and ▼ navigation keys to highlight the desired group from the **Groups** list screen and press **Left Softkey** to display the **Options** menu. Highlight **Remove entries** and press **Left Softkey** twice to confirm the removing of all the contacts in the selected group.


## Change a group image

To change the group image, use the following procedure:

- With the Groups list screen displayed, use the ▲ and ▼ navigation keys to highlight the desired group and press **Left Softkey** to display the Options menu. Highlight Group image and press **Left Softkey** to display the default group image.
- Use the ◀ and ▶ navigation keys to scroll to the different default group images and press **Left Softkey** to confirm the selection of the new allocated image. The phone returns to the Groups list screen.
- Press  key to return to the standby screen.

## Assign a ringtone/melody to a group

To assign a specific ringtone/melody stored in your phone to a group, use the following procedure:

- With the Groups list screen displayed, use the ▲ and ▼ navigation keys to highlight the desired group and press **Left Softkey** to display the Options menu. Highlight Set ring tone and press **Left Softkey** to display the Sounds folder.
- Use the ▲ and ▼ navigation keys to scroll through the list of ringtones/melodies and press **Left Softkey** to confirm the selection of desired ringtone/melody for the group. The phone returns to the Groups list screen.
- Press  key to return to the standby screen.

## Deleting a single phonebook record

When any phonebook record is highlighted, press **Left Softkey**, highlight Delete and press **Left Softkey**. The confirmation screen displays. Press **Left Softkey** to confirm the deletion or **Right Softkey** to cancel the action. Press  key to return to the standby screen.

## Record to SIM/Protected SIM

When Edit entry screen is displayed in the SIM phonebook, select location field and press **Right Softkey** to toggle SIM/Protected SIM (protected area in the SIM card). You will have to enter your PIN2 code when you select Protected SIM as the location before you store the record. Press the **Left Softkey** to save the changes made. The phone returns to the phonebook list display.

## Moving from phone to SIM / SIM to phone

To move a phonebook entry in SIM to Phone or Phone to SIM, press **Left Softkey** for the Options menu. Highlight Copy to phone (or Copy to SIM) and press **Left Softkey** to confirm. To move all the SIM contacts over to the phonebook, highlight Copy all to phone and press **Left Softkey** to confirm.

## Copy from phone to SIM/SIM to phone

To copy a phonebook entry in SIM to Phone or Phone to SIM, press **Left Softkey** for the Options menu. Highlight Copy to phone (or Copy to SIM) and press **Left Softkey** to confirm. To copy all the SIM contacts over to the phonebook, highlight Copy all to phone and press **Left Softkey** to confirm.

## Delete all phone records

To delete all phone records in your Phone/SIM memory, use the following procedure.

- When any phonebook record is highlighted, press **Left Softkey**, highlight Delete all and press **Left Softkey** to delete. The confirmation screen displays.
- Press **Left Softkey** to confirm the deletion of all phone records or **Right Softkey** to cancel the action.
- Press  key to return to the standby screen.



## Assign a record number

- When any phonebook record in the SIM phonebook is displayed, press **Left Softkey** for the option menu. Highlight Go to location and press **Left Softkey** to key in a record number.

## Scratchpad number

Your phone has a scratchpad function that enables you to key in a telephone number even during a call and to dial it after the current call ended. This scratchpad number can also be saved for future use.

### Noting & calling a scratchpad number

 


During a call, key in the number using the keypad. The number is displayed on the display screen. Press  key to end the current call. The number that was keyed in is still displayed. Press  key to dial the number.

### Storing a scratchpad number

- With the scratchpad number still displayed, press **Left Softkey** to display the SIM/Phone phonebook edit screen. Key in the necessary details and press **Left Softkey** to save the name entry. The location of the saved record will be displayed.

## Own number

Own number menu allows you to enter and display your own numbers. To add an entry, use the following procedure:

- From the main menu, select Phonebook > Lists to display the phonebook entries.
- Press  navigation key until Own number menu screen is displayed.
- Use the  and  navigation keys to select one of the <Empty> slots and press **Left Softkey** to display the Options menu.
- Select View from the Options menu. Enter the desired phone number and name using the text editor. Press **Left Softkey** to save and return to Own number menu screen.
- To display the Capacity of the SIM card, select Memory status from the Option menu.

To delete a saved entry, highlight the entry from Own number menu screen and press **Left Softkey** to display the Options menu. Select Delete and press **Left Softkey** to confirm the deletion.

 **Alternatively, press 0 from the main menu directly.**


 **The Own number service is SIM card dependent.**

## My data

You can use this menu function to manage all the pictures and sounds saved in the phone. You can playback sound, ringtones or display pictures/ wallpapers downloaded from the Internet, or photos captured with the built-in camera function.

From the main menu, select **My data**.

 **You can also get to the My data display screen by pressing ▼ navigation key from the standby screen.**

 **When your phone memory is full, you may not be able to rename the files.**

## Record Voice

The Record Voice function allows you to record a sound file and send it as MMS. Or you may record a sound file and play it later.

### Display the record voice menu list screen

From **My data** display screen, highlight **Record voice** folder and press **Left Softkey** to view the submenu of the option in your phone.

Or you may enter **Accessory** menu display screen, highlight **Voice memo** and press **Left Softkey** to enter the submenu, and highlight again the **Record Voice** and press **Left Softkey** to confirm.

### Recording Voice

From **Record Voice** display menu, press **Left Softkey** to select **Options**. Press **Left Softkey** again to select **Add new**. Once you choose the option, a message shows: **Please start recording**. You may press **Right Softkey** to **Record** or press **Left Softkey** to see the detailed information of the sound file. To stop/pause recording, you may press **Left Softkey/Right Softkey**. To resume recording after selecting pause function, press **Right Softkey** to continue recording. Once you stop the recording, you may choose to either save or play the recording. Press **Left Softkey** to save the recording but you need to edit the name for the file first. After the editing is done, press **Left Softkey** to save the file.

### Record Voice option menu

Use ▲ or ▼ navigation keys to scroll through the list of sound files and press **Left Softkey** to display the **Options** menu:

#### Add new

Highlight **Add new** to create a new sound file.

#### Send as MMS

Highlight **Send as MMS** and press **Left Softkey** to display MMS editing screen with the selected sound file. Proceed with the MMS editing before sending it out.

#### Rename

Highlight **Rename** to change the name of the sound file.

#### Delete

Highlight **Delete** to delete the selected sound file.

### Delete all

Highlight **Delete All** to delete all the sound files in the folder.

### Info


Highlight **Info** to see the details of the sound file.

## Photos and pictures

The Photos and Pictures folders manage the photos and pictures in your phone respectively. You can choose to display and edit the images and animations that are either captured by the built-in camera or downloaded from the Internet. You can also attach the images and animations to the MMS you are sending out.

### Display the photos/pictures list screen

From **My data** display screen, highlight either **Photos** or **Pictures** folder and press **Left Softkey** to view the list of photos or pictures in your phone.

 **Alternatively, you can access the Photos folder by selecting Go to my photos in the Options menu for the camera after taking and saving a picture.**

### Selecting and displaying an image

To view a certain photo/picture from the Photos/Pictures list display screen, use the **▲** and **▼** navigation keys to highlight an image file you want to display and press **Left Softkey** to display the Options menu. Highlight **View** and press **Left Softkey** to display the picture. Press **Right Softkey** to return to the Photos/Pictures display list screen.

You can display the previous/next picture by pressing the **▲** and **▼** navigation keys.

### Photos/Pictures options menu

Use the **▲** and **▼** navigation keys to scroll through the list of photos and pictures and press **Left Softkey** to display the Options menu:

#### View

Highlight **View** and press **Left Softkey** to display the picture.

#### Send as MMS (not for preset wallpaper)

Highlight **Send as MMS** and press **Left Softkey** to display the MMS editing screen with the selected picture attached. Proceed with the MMS editing before sending it out.

#### Send via email (not for preset wallpaper)

Highlight **Send via email** and press **Left Softkey** to display the mail editing screen with the selected picture attached. Proceed with the mail editing before sending it out.

#### Set as wallpaper

Highlight **Set as wallpaper** and press **Left Softkey** to set the selected picture as the wallpaper for the standby screen. The phone returns to the Photos/Pictures display list screen.

### **Rename (not for preset wallpaper)**

You can use the **Rename** function to edit the names of the photos/pictures. Highlight **Rename** and press **Left Softkey**. Key in the new name for the picture and press **Left Softkey** to save the changes made.

 **You can only input "0-9", "a-z", "A-Z" and "\_" for filenames. Changing of text entry mode is not available in this menu.**

### **Delete (not for preset wallpaper)**

This option allows you to delete the highlighted photo/picture file. Highlight **Delete** and press **Left Softkey** to delete the file. When the confirmation message appears, press **Left Softkey** to confirm or press **Right Softkey** to cancel the deletion.

### **Delete all (not for preset wallpaper)**

This option allows you to delete all the photo/picture files in the folder. Highlight **Delete all** and press **Left Softkey** to delete all the files. When the confirmation message appears, press **Left Softkey** to confirm or press **Right Softkey** to cancel the deletion.

### **Info**

You can display the details of the selected image file using this function. The following details will be displayed:

- File name
- Resolution
- Bit depth
- Creation time
- File type
- File size

### **Copy (not for preset wallpaper)**

You can use the **copy** function to duplicate the highlighted photo/picture file. Highlight **copy** and press **Left Softkey** to duplicate the file.

### **Cut (not for preset wallpaper)**

You can use the **Cut** function to cut down the highlighted photo/picture file. Highlight **Cut** and press **Left Softkey** to cut down the file.

### **Paste**

You can use **Paste** function to paste the copied/cut photo/pictures to the desired folder. Highlight **Paste** and press **Left Softkey** to paste the file.

The Sounds folders manage the ringtones and other melodies in your phone.

- From My data display screen, highlight Sounds folder and press **Left Softkey** to view the list of ringtones/melodies in your phone.

 ***If voices or sounds are recorded in the folder when the user opens it, it sounds automatically.***

### Sounds option menu

The phone plays back the ringtone/melody that is highlighted from the list in the Sounds folder. Use the ▲ and ▼ navigation keys to highlight the desired ringtone/melody and press **Left Softkey** to display the Options menu:

#### **Send as MMS (for downloaded ringtone/melody)**

Highlight Send as MMS and press **Left Softkey** to send the selected ringtone/melody attached to an MMS.

#### **Send via iMail (for downloaded ringtone/melody)**

Highlight Send via iMail and press **Left Softkey** to send the selected ringtone/melody attached to an MMS.

#### **Set as ringtone (for preset and downloaded ringtone/melody)**

Highlight Set as ringtone and press **Left Softkey** to set the selected ringtone/melody as the default ringtone for the following type of calls:

- Any call
- Phonebook call
- Alarm
- Message
- Cell broadcast
- Friends, Colleagues, Family, Biz partner, and VIP

Highlight the type of call you want to set the ringtone and press **Left Softkey**. The phone returns to the Sounds list screen.

#### **Rename (for downloaded ringtone/melody)**

You can use the Rename function to edit the file name for the selected ringtone/melody. Highlight Rename and press **Left Softkey**. Key in the new name for the ringtone/melody and press **Left Softkey** to save the changes made.

#### **Paste (for preset and downloaded ringtone/melody)**

Highlight Paste and press **Left Softkey** to paste the copied/cut file

#### **Delete (for downloaded ringtone/melody)**

Highlight Delete and press **Left Softkey** to delete the selected ringtone/melody.

#### **Delete all (for downloaded ringtone/melody)**

Highlight Delete all and press **Left Softkey** to delete all the downloaded ringtone/melody.



### **Info (for preset and downloaded ringtone/melody)**

You can display the details of the selected ringtone/melody using this function. The following details will be displayed:


- File name
- Creation time
- File type
- File size

### ***Memory status***

This feature allows you to check the memory space in your phone. From **My data** display screen, highlight **Memory status** folder and press **Left Softkey** to view the details in your phone.

# Java™ application

Select Java™ from the main menu. Alternatively select Java™ application from the i-mode menu. After you selected the item, a list of Java™ applications is displayed.

 **Alternatively, you can start Java™ application by pressing and holding *Right Softkey* or *▼ navigation key* from the standby screen.**

Select Menu from the Java™ application, five options are offered:

Description Setting	Select to enable or disable the function.
Delete all	Delete all the information.
Storage status	Information such as Used bytes, Free bytes, and the storage of the chosen game is displayed.
Trace Info.	Select to delete Trace Info.
About	Other information about the Java™ application.

Select Option from the Java™ application, five options are offered:

Properties	Display the properties of the Java™ application.
Upgrade	Confirm if you would like to upgrade Java™ application.
Delete	Delete the Java™ application.
Network connecting	Connect to the Network/Do not connect to the Network/Confirm every application starts.
Auto start setting	Confirm to activate the Auto Start Setting.

## Accessory

From the main menu, select **Accessory** to access the various functions provided by your phone as listed below:

- Organizer (Scheduler, ToDo list, Notepad)
- Clock (Alarm clock, Auto off, Auto on, Countdown, Stopwatch)
- Calculator (Calculator, Currency conv.)
- Composer
- Voice memo (Record voice, Data rate)
- PC sync

### Scheduler

From the main menu, select **Accessory** > **Organizer** > **Scheduler**. The default will be the monthly display. Press the **Left Softkey** and select **Week** to view the calendar in week display.

 **There is a 20 seconds delay before the phone emits an alert tone for the scheduled appointment time.**

### Agenda

You can use the **Agenda** function in the calendar menu to key in your appointments. Time and date must be preset first before the calendar can work correctly. When the appointment time reaches, a signal tone can be heard.

 **Even if the phone has been switched off, the phone automatically switches itself on at the specified time if the Agenda function is turned on.**

**To register a new event in the agenda function, use the following procedure:**

- With the calendar displayed, press **Left Softkey** to display the **Options** menu, select **Agenda**.
- Select **<Add new>** to display the editing screen for the agenda.
- Use the **◀** and **▶** navigation keys to select the desired **type** of appointment that you are creating: **Memo, Call, Meeting mode**.
- Use **▼** navigation key to move down to the **Description** field. Key in the necessary details for this agenda.
- Use **▼** navigation key to move down to the **Status** field. Use the **◀** and **▶** navigation keys to change the status of the agenda, either to **Activate** or **Deactivate** it.
- Use **▼** navigation key to move down to the **Reoccurrence** field. Use the **◀** and **▶** navigation keys to change the reoccurrence of the agenda: **Once, Daily, Weekly, Month, Annual**.
- Edit the **Start date, Start time, End date, and End time** fields accordingly.
- Press **Left Softkey** to save agenda settings and return to the **Agenda** display screen.

 **If you miss an appointment alarm, you can check it by pressing **Right Softkey** from the standby screen when there is a note-shaped icon displayed in the **Softkey** area.**

## Option menus for existing agenda

An option menu is displayed when an existing agenda is selected and **Left Softkey** is pressed. The options are described below:

- **View**

Display the details of the selected agenda.

- **Edit**

Display an edit screen for the highlighted agenda. Use the ◀ and ▶ navigation keys to toggle between the different choices in the different fields to edit the agenda settings and use the ▲ and ▼ navigation keys to move along the different fields. Press **Left Softkey** to save the changes made and return to the list of agendas.

- **Add new**

Display a new entry screen.

- **Delete/Delete all**

To delete an existing agenda, highlight the agenda press **Left Softkey**, select **Delete**. A confirmation screen is displayed. Press **Left Softkey** to confirm the deletion or **Right Softkey** to cancel the action. To delete all existing agendas, select **Delete all**.

- **Capacity**

Display the maximum number of agendas (max = 50) allowed and the remaining capacity for new agendas.

## ToDo list

The ToDo list allows you to set up reminders and appointments for a particular time and day (up to 50 appointments can be stored).

### To register an event in the ToDo list, use the following procedure:

- From the main menu, select **Accessory > Organizer > ToDo list** to display ToDo list display screen with previously entered reminders/ appointments, if any.
- Highlight **<Add new>** and press **Left Softkey** to display the editing screen for the appointment.
- Use the ◀ and ▶ navigation keys to select the desired type of appointment that you are creating: **Memo, Call, Meeting mode**.
- Use the ▼ navigation key to move down to the **Description** field. Key in the necessary details for this appointment.
- Use the ▼ navigation key to move down to the **Status** field. Use the ◀ and ▶ navigation keys to change the status of the appointment, either to **Activate** or **Deactivate** it.
- Use ▼ navigation key to move down to the **Reoccurrence** field. Use the ◀ and ▶ navigation keys to change the reoccurrence of the appointment: **Once, Daily, Weekly, Month, Annual**.
- If you choose **Weekly**, you can toggle **On/Off**, the required days of the week by highlighting and pressing **Right Softkey**. To save the settings, press **Left Softkey**.
- Edit the **Start date, Start time, End date, and End time** fields accordingly.
- Press **Left Softkey** to save appointment settings and return to **ToDo list** display screen.

### Option menus for existing reminders/appointments

An option menu is displayed when an existing reminder/appointment is selected and **Left Softkey** is pressed. To access each option, highlight the option and press **Left Softkey** again. The options are described below:

- **View**

Display the details of the selected reminder/appointment.

- **Edit**

Display an edit screen for the highlighted reminder/appointment. Use the ◀ and ▶ navigation keys to toggle between the different choices in the different fields to edit the reminder/appointment settings and use the ▲ and ▼ navigation keys to move along the different fields. Press **Left Softkey** to save the changes made and return to the list of ToDo list.

- **Add new**

Display a new entry screen.

- **Delete/Delete all**

To delete an existing appointment, highlight the appointment, press **Left Softkey**, select **Delete**. A confirmation screen is displayed. Press **Left Softkey** to confirm the deletion or **Right Softkey** to cancel the action. To delete all existing appointments, select **Delete all**.

- **Capacity**

Display the maximum number of appointments (max = 50) allowed and the remaining capacity for new appointments.

## Notepad

The notepad application allows you to write text files and save them in your phone as reference.

From the main menu, select **Accessory > Organizer > Notepad**. Use ▲ and ▼ navigation keys to highlight the existing notes or highlight <Add new> to create a new note.


### Notepad option menus

Highlight an existing note and press **Left Softkey** to display the Options menu for the Notepad. The options are described below:

- **View:** Display the note for reading.
- **Edit:** Display an editing screen for the highlighted text note.
- **Add new:** Display a new entry screen.
- **Delete:** Delete the highlighted text note.
- **Delete all:** Delete all the existing text notes.
- **Send:** Send the note via SMS to a recipient (you may select a phone number from the phonebook list or enter a Recipient's number).
- **Capacity:** Display the memory left in your phone for saving other text notes. Up to a maximum of 10 notes can be saved.

## Alarm clock

The alarm will start ringing at the time you set (even after the phone is switched off).

 **When the alarm sounds, other events will just display on the screen until the alarm stops.**

- From the main menu, select **Accessory > Clock > Alarm clock**.
- Use **▲** and **▼** navigation keys to highlight one of the 4 time fields and press **Left Softkey** to display the Options menu.
- Select **Edit** to display the editing screen. Key in the time you want to activate the alarm clock in the Time field.
- Use **▼** navigation key to move to the next field to select the day(s) of the week to activate the alarm. Use **◀** and **▶** navigation keys to move to select the day(s) of the week to. Press **Right Softkey** to display a tick in the respective check box.
- Use **▼** navigation key to move to the Status field. Use **◀** and **▶** navigation keys or press **Right Softkey** to toggle between activating or deactivating the alarm.
- Each icon in the Alarm clock display screen indicates if the settings is activated/deactivated. An icon will appear on the LCD as well when activated.
- If necessary, use the **▼** navigation key to move to the Description field and key in the reason for the alarm.
- Press **Left Softkey** to save this alarm setting and return to the Alarm clock display screen.
- When the alarm sounds, press **Left Softkey** to turn off the alarm clock or press **Right Softkey** to pause the alarm clock, which keeps ringing every other 6 minutes. This resembles the snooze function. During the snooze period, you may press **Left Softkey** to stop the alarm clock or go to **Accessory > Clock > Alarm clock** to deactivate the alarm.

 **Even if the phone has been switched off, the phone automatically switches itself on at the specified time if the alarm is turned on.**

 **Once you set the time, the alarm will ring every day(s) of the week you have set until you deactivate the settings.**

## Auto off

When this function is activated, the phone will be automatically switched off at the pre-set time everyday.

- From the main menu, select **Accessory > Clock**. Highlight Auto off and press **Left Softkey**.
- Press **Right Softkey** or use **◀** and **▶** navigation keys to toggle the function On/Off.
- Use **▼** navigation key to move down to the Time field (when the function is toggled on) to set the auto off time.
- Press **Left Softkey** to save the settings and return to the Clock menu screen. A tick in the check box indicates that the function is activated.

## Auto on

When this function is activated, the phone will be automatically switched on at the pre-set time everyday.

- From the main menu, select **Accessory > Clock**. Highlight Auto on and press **Left Softkey**.
- Press **Right Softkey** or use **◀** and **▶** navigation keys to toggle the function On/Off.

- Use **▼** navigation key to move down to the **Time** field (when the function is toggled on) to set the auto on time.
- Press **Left Softkey** to save the settings and return to the **Clock** menu screen. A tick in the check box indicates that the function is activated.

## Countdown

After a preset time elapsed, the function will indicate last 3 seconds of the countdown timer by a beep tone. At the end of the countdown time, a special beep can be heard.

- From the main menu, select **Accessory > Clock > Countdown**.
- Press **Left Softkey** to set a desired duration for the countdown. Edit the countdown timer and press **Right Softkey** to save the setting. Press **Right Softkey** to start the countdown.
- To pause the countdown, press **Right Softkey**. Press **Right Softkey** again to continue with the countdown.
- To reset the countdown timers after pausing, press **Left Softkey**.

## Stopwatch

From the main menu, select **Accessory > Clock > Stopwatch**. A maximum of two timings can be registered with the stopwatch.

- Press **Left Softkey** to start the timing. To register the first timing, press **Left Softkey**. To register the next timing, press **Left Softkey** again.
- To register only one timing with the stopwatch, press **Left Softkey** to start timing and **Right Softkey** to stop.
- To reset all time counters, press **Left Softkey**.


## Calculator

You can perform addition, subtraction, multiplication and division of numbers with the calculator function. You can enter up to 8 digits. The calculator can display a result of up to 9 digits, with a maximum of 6 decimal places.

If a calculation results in a number exceeding the maximum, "Over range" appears in the calculation field.

### Calculator key

The following keys are assigned with different functions under the calculator:

- **▲** navigation key: Addition (+)
- **◀** navigation key: Subtraction (-)
- **▼** navigation key: Multiplication (x)
- **▶** navigation key: Division (÷)
- **Left Softkey**: Equals to (=)
- **Right Softkey**: Clear
- : Back to the standby screen

- # key: Decimal point (.)
- \* key: Negative (-)

### Activating calculator

To start the calculator function, use the following procedure:

- From the main menu, select **Accessory > Calculator > Calculator**.

### Terminating calculator

Press  key to return to the standby screen.

### Calculating

To calculate using the calculator, for example  $52 + 37$ , use the following procedure:

- Input **52** on Calculator.
- Press the **▲** navigation key.
- Input **37**.
- Press **Left Softkey**.
- The answer 89 appears in the calculation field.

### Deleting a digit

To delete a digit, press **Right Softkey**.

### Deleting all digits

- To delete all digits input, press and hold **Right Softkey**.

## Currency converter

From the main menu, select **Accessory > Calculator > Currency conv.** You are able to calculate the exchange rates between two currencies using this function:

### Rate setting

From the **Currency conv.** display screen, select **Rate setting**. Enter the exchange rate for the domestic currency and foreign currency. Press **#** to enter a decimal point. Press **Left Softkey** to calculate the conversion. Save the settings by pressing **Left Softkey**.

### Rate compute


From the **Currency conv.** display screen, select **Rate compute**. Use **▲** and **▼** navigation keys to move along the fields. Enter the sum to be converted at either domestic currency or foreign currency field. Press **Left Softkey** to Convert. The results will be displayed at the other field.



## Composer

From the main menu, select **Accessory > Composer** to display the list of preset melodies. Press **Left Softkey** on the selected preset melody to display the **Options** menu. Highlight **Composer** and press **Left Softkey** to display **Composed melody** screen. You will have the options to compose one main track and three sub tracks in each preset melody.

You can compose your own melodies (maximum of five) using the following keys in each track:

- Number keys **1** to **7**: Represent notes **C, D, E, F, G, A, B** in this order.
- **▲** and **▼** navigation keys: To move the keyed melody one note up or down.
- **\*** key: Increase/Decrease length of notes/rests.
- Number key **0**: Represents rest note.
- **#** key: Raises/lower the note by a semitone.
- After composing, press **Left Softkey** to select one of these available options: **Play/Tempo/Instrument/Save**.
- Press  key to exit the composed melody and press **Left Softkey** to select **Composer** again to edit other tracks.

## Voice memo

The **Voice memo** function allows you to record up to 50 seconds of sound/voice (at the lowest data rate) using your phone's microphone. You can also send the **Voice memo** as an MMS attachment.

From the main menu, select **Accessory > Voice memo**.

### Record voice

- Select **Record voice** to display the **Record voice** display screen.
- To add a new voice recording, press **Left Softkey** to display the **Options** menu. Highlight **Add new** to enter the recording mode.
- Press **Right Softkey** to start recording. To pause, press **Right Softkey**.
- Press **Left Softkey** to stop the recording.
- To play and listen to the recording, press **Right Softkey**.
- To save the recording, press **Left Softkey**, edit the title if necessary, and press **Left Softkey**.

### Data rate

- Select **Data rate** to display **Data rate** display screen.
- Highlight a desired value (the smaller the value, the longer the recording time allowed) for the data rate and press **Left Softkey** to confirm and turn on the radio button.

## PC sync

To transfer any stored data from the phone to the PC or from the PC to the phone, select **Accessory > PC sync** from the main menu. Press **Left Softkey** to start synchronization.

 *If you wish to synchronise (download/upload) data between PC and phone, you must start the PC sync application and stay at the application window. Otherwise, the connection will abort.*

## A

Accepting a Call .....	22
ADN .....	62
Agenda .....	74
Alarm clock .....	77
Alternate Line Service (ALS) .....	29
Any key answer .....	28
Auto answer .....	33
Auto network .....	39
Auto off .....	77
Auto on .....	77
auto redial .....	36

## B

Band .....	40
Bar calls .....	38
Brightness .....	34

## C

Calculator .....	78
Call diversion .....	35
Call list	
Dialed calls .....	26
Missed calls .....	26
Received calls .....	26
Call options .....	26
Call waiting .....	36
Calls .....	35
Camera	
Brightness .....	59

Default settings .....	61
Effect .....	61
Flicker control .....	61
Image quality .....	60
Photo size .....	60
Self timer .....	60
Twilight .....	60
Zoom .....	59
Cell broadcast .....	46, 48
Auto display .....	48
CB languages .....	48
Topic list .....	48
Change PINs .....	37
Changing the battery .....	20
Charge settings .....	27
Auto display .....	27
Currency .....	27
Display credit .....	27
Max cost .....	27
Charging the battery .....	20
Colour styles .....	34
Composer .....	80
Countdown .....	78
Currency converter .....	79

## D

Date format .....	30
Draft .....	44

## E

Earphone setting .....	33
Emergency services .....	6

## F

Factory settings .....	40
FAK (Fast Access Key) .....	30
Fast Dial .....	24
FDN .....	39, 63

## G

Group	
Add a phone contact .....	65
Assign a ring tone .....	66
Creating a group name .....	65
Groups .....	65

## H

Holding a call .....	23
----------------------	----

## I

Illumination .....	33
i-mode Service .....	49
Inbox .....	44
Info Tone .....	32
Inserting a SIM Card .....	17

## K

Key tone .....	32
----------------	----

Keylock/Auto key lock .....	25
-----------------------------	----

## L

Language .....	30
LCD Contrast .....	35

## M

Messages .....	44
Minute reminder .....	29
Missed calls .....	26
My data .....	68

## N

Network info .....	39
Notepad .....	76
Numeric input .....	43

## O

Outbox .....	44
--------------	----

## P

Password .....	16
Personalizing settings .....	28
Phone lock .....	38
Phone memory edit .....	64
Phone mode	
Car .....	31
Meeting .....	31
Normal .....	31
Pocket .....	31

Phonebook	Taking a picture .....	59
Delete all .....	Text Entry .....	41
Deleting a record .....	Time format .....	30
Photos .....	Time/charge .....	26
Pictures .....	Timezone .....	29
PIN code .....	ToDo list .....	75
PUK code .....	Topic list .....	48

## R

Received calls .....	26
Receiving Calls .....	22
Rejecting a call .....	22
Removing a SIM Card .....	18
Ring tones .....	49
Ringer setting .....	32
Ringer volume .....	32
Roaming .....	39

## S

Scheduler .....	74
Scratchpad number .....	67
Calling .....	67
Storing .....	67
SDN .....	62
Security settings .....	37
SIM memory edit .....	64
SMS via GPRS .....	47
Sounds .....	71
Stopwatch .....	78

## T

T9@ English text input .....	42
T9@ Preferred .....	42

## V

Vibrator .....	33
Voice mail .....	24
Voice volume .....	28
Volume control .....	25

## W

Wallpaper .....	33, 34
-----------------	--------