


## REMOTE CODING

THE REMOTE CODE CAN MEMORIZE UP TO TWO SEPARATE CODE NUMBERS FROM THE REMOTE CONTROL SIMPLY AND EASILY.


1. VALET MODE CODE LEARNING – TURN THE IGNITION ON AND THE VALET S/W ON. NEXT, PUSH THE DOOR PIN S/W THREE TIMES. THE ALARM WILL CHIRP ONCE. PRESS BUTTON 1 ON THE REMOTE CONTROL FOR ONE SECOND. THE ALARM SYSTEM WILL CHIRP ONCE AND THE PARKING LAMPS WILL FLASH TWICE.
2. REPEAT THE SAME PROCEDURE FOR THE 2ND REMOTE CODE.

F	CAR FINDER
1	Lock/Unlock
2	START
3	Trunk open

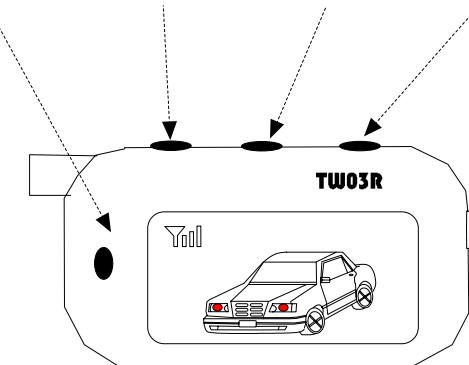

WHEN THE BATTERY ARE REPLACED, PLEASE  
PRESS BUTTON # 3 AND # F TO CHECK THE  
STATUS OF VEHICLE'S AND LCD DISPLAY'S

## LCD DISPLAY

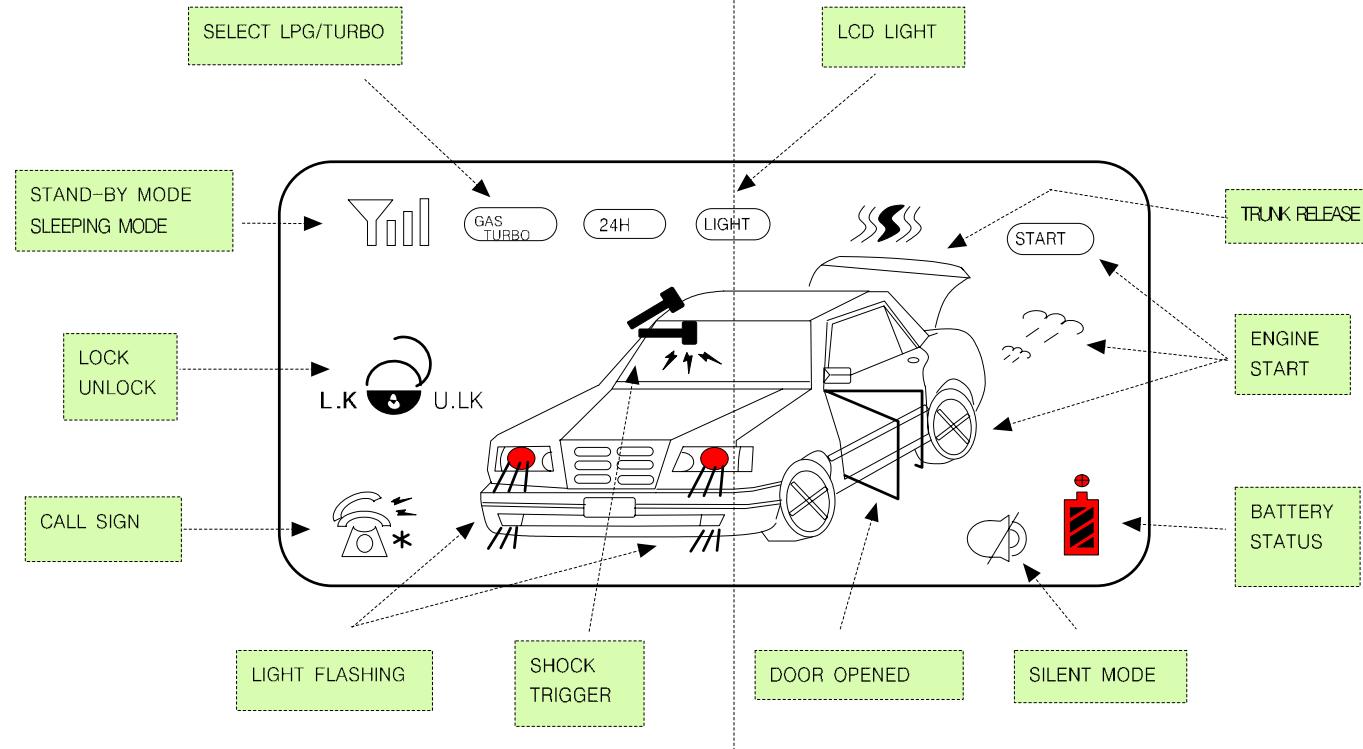

## BUTTON'S FEATURE

#	TIME	FEATURES
1	1"	ARM (LOCK) / DISARM (UNLOCK)
	3"	PANIC
2	1"	ENGINE START
3	2"	TRUNK RELEASE
	1"	TWO TIMES (SELECT STAND-BY MODE)
F	1"	CAR FINDER
	3"	LCD LIGHT ON / OFF
1 + 3	1"	SILENT MODE ON / OFF
1 + F	1"	SELECT LPG , TURBO
3 + F	1"	CHECK THE STATUS OF VEHICLE'S

## SYSTEM PROGRAMMING VIA REMOTE CONTROL

#	TIME	STATUS	1 CHIRP	2 CHIRPS (DEFAULT)
1	5"	IGNITION ON + VALET ON	ACTIVE ARM	PASSIVE ARM
2	3"	IGNITION ON	ENGINE RUN TIME (25 MINUTES)	ENGINE RUN TIME (15 MINUTES)
1 + 2	5"		SHORT START	STANDARD START
1 + 3	5"		AFTER 8' ENGINE START (DIESEL)	AFTER 2.5' ENGINE START (GASOLINE)

## ARMING / DISARMING OF SYSTEM

### 1. DOOR LOCK AND ARM

PRESS THE BUTTON#1 ON THE TRANSMITTER THEN THE SYSTEM WILL BE ARMED AND DOOR WILL BE LOCKED IMMEDIATELY WITH ONE CHIRP SOUND AND LIGHT FLASHING ONCE.

- ▶ LCD DISPLAY : ONE LIGHT FLASHING, ONE CHIRP SOUND
- ▶ WHEN THREE CHIRP SOUNDS -> IT MEANS THAT ALL DOORS ARE CLOSED COMPLETELY.

### 2. DOOR UNLOCK AND DISARM

PRESS THE BUTTON#1 ON THE TRANSMITTER THEN THE SYSTEM WILL BE DISARMED AND DOOR WILL BE UNLOCKED IMMEDIATELY WITH TWO CHIRP SOUND AND LIGHT FLASHING TWICE.

- ▶ LCD DISPLAY : TWO LIGHT FLASHING, TWO CHIRP SOUND
- ▶ WHEN FOUR CHIRP SOUNDS -> IT HAS HAPPENED UNAUTHORIZED ENTRY OR IMPACTS IN YOUR ABSENCE. SO PLEASE CHECK CAREFULLY TO YOUR CAR.

### 3. REMOTE PANIC OPERATION

WHEN THE CAR IS RUNNING OR PARKING, THE SYSTEM CAN SOUND EMERGENCY SIREN WITH FLASHING PARKING LIGHT BY PRESSING THE TRANSMITTER BUTTON #1 FOR 3 SECONDS TO SHUT PANIC OFF. PRESS THE TRANSMITTER BUTTON #1 AGAIN THEN THE SIREN WILL STOP.

- ▶ LCD DISPLAY : LIGHT FLASHING CONTINUOUSLY FOR 3 SECONDS IN 30".

## REMOTE START SYSTEM

### 1. FOR AUTOMATICAL TRANSMISSION

- PUT VEHICLE TRANSMISSION INTO NEUTRAL OR PARKING. PRESS THE TRANSMITTER BUTTON #2 FOR A SECOND, THEN THE ENGINE WILL BE STARTED WITH ONE CHIRP SOUND AND FLASHING PARKING LIGHT.

FOR THE NOTICE OF ENGINE START, SYSTEM WILL CHIRP (PARKING LIGHT) 3 TIMES. IF THE ENGINE FAILS TO START, SYSTEM WILL AUTOMATICALLY TRY UP TO THREE TIMES UNTIL THE ENGINE HAS STARTED. TO CUT OFF THE ENGINE START, PRESS THE TRANSMITTER BUTTON#1 TWICE.



## 2. FOR MANUAL TRANSMISSION

- ① PUT VEHICLE TRANSMISSION INTO NEUTRAL.
- ② PUSH BUTTON 2 ON REMOTE CONTROL. THE UNIT WILL CHIRP ONCE AND THE PARKING LIGHTS WILL FLASH.
- ③ TURN THE IGNITION TO THE OFF POSITION AND TAKE KEYS OUT OF THE IGNITION.
- ④ EXIT THE VEHICLE WHILE IT IS STILL RUNNING.
- ⑤ CLOSE THE DRIVER DOOR. THE UNIT WILL CHIRP.

IF IT IS NECESSARY TO TURN THE ENGINE OFF IMMEDIATELY WITHOUT DOING START RESERVATION, PUSH VALET S/W ON OR TAKE THE KEY OUT AT OPEN DOOR POSITION.

- ▶ LCD DISPLAY : LIGHT FLASHING ONCE AND ONE CHIRP. WHEN THE ENGINE IS STARTED, THE LIGHT FLASHES THREE TIMES AND CHIRPS 3 TIMES.
- ▶ WHEN THE ENGINE TURNED ON, THE LIGHT FLASHING CONTINUOUSLY FOR 8 SECONDS IN 15'. AND THE LED IS FLASHING THREE TIMES.

THE VEHICLE WILL REMOTE START AS LONG AS A DOOR HAS NOT BEEN OPENED.

## 3. AIR-CONDITION / HEATER OPERATION

FIRST OFF ALL MAKE THE AIR-CONDITION / HEATER SWITCH "ON" POSITION AND ENGINE IS STARTED, THEY WILL OPERATE AFTER 30 SECONDS.

## 4. LIMITED ENGINE START BY TRANSMITTER.

SYSTEM WILL SHUT OFF AUTOMATICALLY AFTER 15 MINUTES.

## 5. ARMING WHILE ENGINE START BY TRANSMITTER.

SYSTEM TRIGGERED BY DOOR THEN THE ENGINE WILL SHUT OFF AND THEN SIREN WILL SOUND.

## ACCESSORY FEATURES

### 1. CAR FINDER

- ① PRESS BUTTON 'F' FOR A SECOND.
- ② A LONG CHIRP 3 TIMES AND LIGHT FLASHING 3 TIMES.

### 2. VALET

- ① TURN THE IGNITION KEY 'ON' AND PUSH THE VALET S/W 'ON'.
- ② WHEN THE SYSTEM IS AT VALET MODE, L.E.D. IS TURNED TO RED LAMP CONTINUOUSLY.
- ③ ONLY THE KEYLESS ENTRY FEATURE OF THE SYSTEM WILL BE ACTIVATED.

### 3. TRUNK RELEASE

- ① PRESS BUTTON #3 FOR 2 SECONDS.
- ② THE TRUNK WILL BE OPENED.

### 4. SILENT MODE (PERMANENT CHIRP DELETE)

- ① PRESS BUTTON #1 AND # 3 FOR A SECOND.
- ② YOU CAN OPERATE THE ALARM SYSTEM WITHOUT CHIRP SOUND.

### 5. SILENT MODE (TEMPORARY CHIRP DELETE)

- ① PRESS BUTTON #3 AND THEN # 1 WITHIN 3 SECONDS.
- ② YOU CAN OPERATE THE ALARM SYSTEM WITHOUT CHIRP SOUND TEMPORARY

### 6. REMOTE LIGHT DISPLAY

- ① PRESS BUTTON #F FOR 3 SECONDS.
- ② LCD DISPLAYS THE SIGNS WITH BACK GROUND LIGHT.

## 7. TURBO FEATURE

### 1) FOR AUTOMATICAL TRANSMISSION

- ① AFTER DRIVING ALL, PRESS BUTTON #2 AT THE IGNITION TURN ON.  
(ONE CHIRP & ONE LIGHT FLASHING)
- ② IF THIS FEATURE IS ACTIVATED, EVEN IF THE KEY TAKEN OUT, THE IGNITION WILL BE TURNED ON IN 2 MINUTES.

### 2) FOR MANUAL TRANSMISSION

- ① IT IS THE SAME AS THE START RESERVATION'S WAY.
- ② IF THIS FEATURE IS ACTIVATED, EVEN IF THE KEY TAKEN OUT, THE IGNITION WILL BE TURNED ON IN 2 MINUTES.

AFTER LONG DRIVING, THIS FEATURE CAN BE USED TO PROTECT THE ENGINE.

## 8. CONFIRM THE VEHICLE'S STATUS.

- ① PRESS BUTTON # 3 AND #F FOR A SECOND.
- ② THE REMOTE CONTROLS WILL BE REPORTED THE CURRENT STATUS OF THE CAR'S.

## 9. PAGING OWNER

- ① IF SOMEONE WANT TO CALL THE OWNER OF THE VEHICLE'S , JUST KNOCK TO THE PAGING SENSOR IS LOCATED AT THE WINDOW.
- ② AND THEN THE REMOTE WILL BE SOUNDED THREE LONG CHIRPS.

## 10. STAND-BY MODE

- ① PRESS BUTTON #3 FOR A SECOND TWO TIMES, THE STAND-BY MODE WILL BE TURN ON/OFF.

**Caution :**

Any changes or modifications in construction of this device  
which are not expressly approved by the party responsible for  
compliance  
could void the users authority to operate the equipment.

**FCC ID : HH8DYTW03R (REMOTE)**

**HH8CYBORGGRFTRX2 (BASE)**

This device complies with part 15 of the FCC Rules. Operation  
is subject to the following two condition :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including  
interference that may cause undesired operation.

**DONG YANG SECURITY ELECTRONICS CO., LTD.**

435-6 NONHYUN-DONG, NAMDONG INDUSTRIAL COMPLEX  
45BLOCK 6LOT, INCHEON, KOREA.

**[www.goldenbat.com](http://www.goldenbat.com)**

E-mail ) [dytrade@goldenbat.com](mailto:dytrade@goldenbat.com)  
TEL) +82-32-814-8080/4  
FAX) +82-32-814-8085

MODEL : TWO-WAY CAR STARTER ALARM

**AUTOBEEP**

