



- Button 3 : Trunk Release
- Button 2 : Remote Start
- Button 1 : Arm(Door Lock) / Disarm(Door Unlock)

REMOTE CODING

THE REMOTE CODE CAN MEMORIZE UP TO TWO SEPARATE CODE NUMBERS FROM THE REMOTE CONTROL SIMPLY AND EASILY.

1. VALET MODE CODE LEARNING – TURN THE IGNITION ON AND THE VALET S/W ON. NEXT, PUSH THE DOOR PIN S/W THREE TIMES. THE ALARM WILL CHIRP ONCE. PRESS BUTTON 1 ON THE REMOTE CONTROL FOR ONE SECOND. THE ALARM SYSTEM WILL CHIRP ONCE AND THE PARKING LAMPS WILL FLASH TWICE.
2. REPEAT THE SAME PROCEDURE FOR THE 2ND REMOTE CODE.

ARMING / DISARMING

1. DOOR LOCK AND ARM – PRESS BUTTON # 1 OF THE REMOTE CONTROL ONE TIME. THE SIREN WILL CHIRP ONCE AND THE PARKING LIGHTS WILL FLASH ONE TIME. IF INSTALLED, THE VEHICLE'S DOORS WILL LOCK.
► WHEN THREE CHIRP SOUNDS -> IT MEANS THAT ALL DOORS ARE CLOSED COMPLETELY.
2. DOOR UNLOCK AND DISARM
– PRESS BUTTON #1 OF THE REMOTE CONTROL ONE TIME. THE SIREN WILL CHIRP TWICE AND THE PARKING LIGHTS WILL FLASH TWO TIMES. IF INSTALLED, THE VEHICLE'S DOORS WILL LOCK.
► WHEN FOUR CHIRP SOUNDS -> IT HAS HAPPENED UNAUTHORIZED ENTRY OR IMPACTS IN YOUR ABSENCE. SO PLEASE CHECK CAREFULLY TO YOUR CAR.
3. PANIC FEATURE
– THE ALARM MAY BE TRIGGERED VIA THE REMOTE CONTROL : SIMPLY PRESS BUTTON #1 FOR 3SECOND. THIS IS DONE TO ATTRACT ATTENTION TO YOUR VEHICLE. THE SIREN WILL SOUND FOR THIRTY SECONDS.

REMOTE START SYSTEM

1. FOR AUTOMATICAL TRANSMISSION

PUT VEHICLE TRANSMISSION INTO NEUTRAL OR PARKING. PRESS THE TRANSMITTER BUTTON #2 FOR A SECOND, THEN THE ENGINE WILL BE STARTED WITH ONE CHIRP SOUND AND FLASHING PARKING LIGHT.

FOR THE NOTICE OF ENGINE START, SYSTEM WILL CHIRP (PARKING LIGHT) 3 TIMES. IF THE ENGINE FAILS TO START, SYSTEM WILL AUTOMATICALLY TRY UP TO THREE TIMES UNTIL THE ENGINE HAS STARTED. TO CUT OFF THE ENGINE START, PRESS THE TRANSMITTER BUTTON#1 TWICE.

2. FOR MANUAL TRANSMISSION

- ① PUT VEHICLE TRANSMISSION INTO NEUTRAL.
- ② PUSH BUTTON 2 ON REMOTE CONTROL. THE UNIT WILL CHIRP ONCE AND THE PARKING LIGHTS WILL FLASH.
- ③ TURN THE IGNITION TO THE OFF POSITION AND TAKE KEYS OUT OF THE IGNITION.
- ④ EXIT THE VEHICLE WHILE IT IS STILL RUNNING.
- ⑤ CLOSE THE DRIVER DOOR. THE UNIT WILL CHIRP.

IF IT IS NECESSARY TO TURN THE ENGINE OFF IMMEDIATELY WITHOUT DOING START RESERVATION, PUSH VALET S/W ON OR TAKE THE KEY OUT AT OPEN DOOR POSITION.

THE VEHICLE WILL REMOTE START AS LONG AS A DOOR HAS NOT BEEN OPENED.

ACCESSORY FEATURES

1. VALET

- ① TURN THE IGNITION KEY 'ON' AND PUSH THE VALET S/W 'ON'.
- ② WHEN THE SYSTEM IS AT VALET MODE, L.E.D. IS TURNED TO RED LAMP CONTINUOUSLY.
- ③ ONLY THE KEYLESS ENTRY FEATURE OF THE SYSTEM WILL BE ACTIVATED.

2. TRUNK RELEASE

PRESS BUTTON #3 ON THE REMOTE CONTROL FOR APPROXIMATELY 2 SECONDS. THE VEHICLE'S TRUNK WILL OPEN.

3. SILENT MODE (TEMPORARY CHIRP DELETE)

- ① PRESS BUTTON #3 AND THEN # 1 WITHIN 3 SECONDS.
- ② YOU CAN OPERATE THE ALARM SYSTEM WITHOUT CHIRP SOUND TEMPORARY.

4. TURBO FEATURE

1) FOR AUTOMATICAL TRANSMISSION

- ① AFTER DRIVING ALL, PRESS BUTTON #2 AT THE IGNITION TURN ON.
(ONE CHIRP & ONE LIGHT FLASHING)

② IF THIS FEATURE IS ACTIVATED, EVEN IF THE KEY TAKEN OUT,
THE IGNITION WILL BE TURNED ON IN 2 MINUTES.

2) FOR MANUAL TRANSMISSION

① IT IS THE SAME AS THE START RESERVATION'S WAY.
② IF THIS FEATURE IS ACTIVATED, EVEN IF THE KEY TAKEN OUT,
THE IGNITION WILL BE TURNED ON IN 2 MINUTES.

AFTER LONG DRIVING, THIS FEATURE CAN BE USED TO PROTECT THE ENGINE.

Caution :

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

FCC ID : HH8DYTW03SS (REMOTE)
HH8CYBORGFRTRX2 (BASE)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two condition :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

DONG YANG SECURITY ELECTRONICS CO., LTD.

435-6 NONHYUN-DONG, NAMDONG INDUSTRIAL COMPLEX
45BLOCK 6LOT, INCHEON, KOREA.

www.goldenbat.com

E-mail) dytrade@goldenbat.com
TEL) +82-32-814-8080/4
FAX) +82-32-814-8085