 


## 2.4 GHz cordless keyboard and mouse combination product user's manual

### ● Packing Contains:

1. Cordless keyboard 1 pcs.
2. Cordless mouse 1 pcs.
3. Receiver 1 pcs.
4. AAA alkaline battery 4 pcs.

### ● Mouse Product Function:

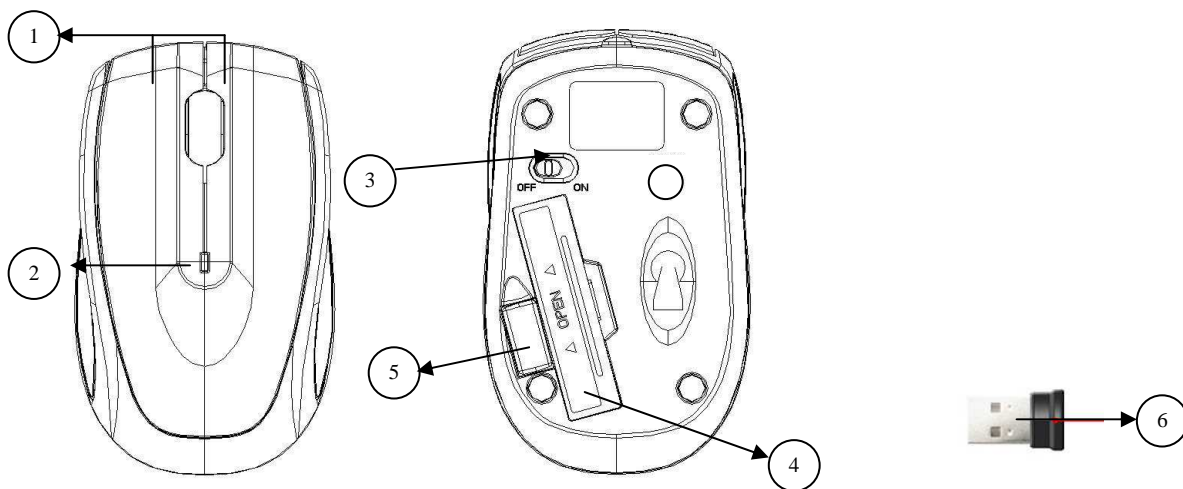

#### 1. Scrolling/Left Button

→ Press scrolling and left buttons simultaneously 1 second will switch mouse resolution. (3 models switch: 800 DPI → 1200 DPI → 1600 DPI).

#### 2. Low power battery indicator

→ The low power battery indicator to remind you to change the batteries when the red led light is sparking.

#### 3. Power on/off

→ Power on/off switch to maximize battery life.

#### 4. Battery case

→ Open battery case and follow the remark(+, -) to put batteries correctly.

 
 
#### 5. Receiver storage

→ You can keep your micro receiver here.

#### 6. Micro receiver

→ Plug into your PC for connecting the keyboard and mouse.

● **Keyboard Product Function:**

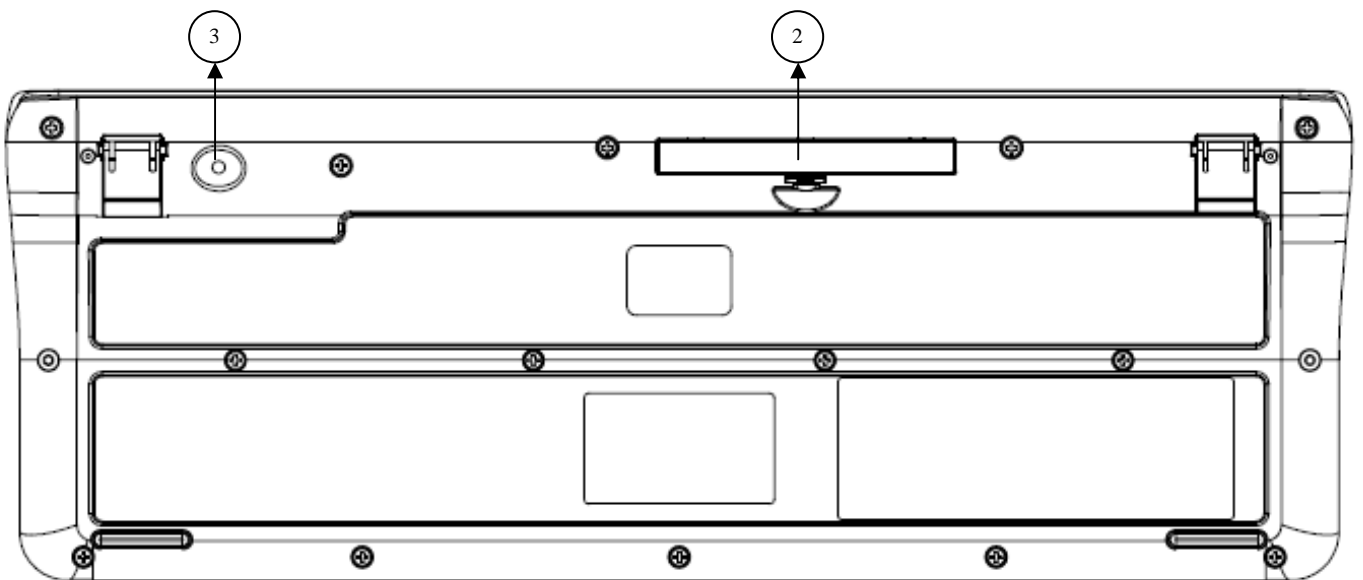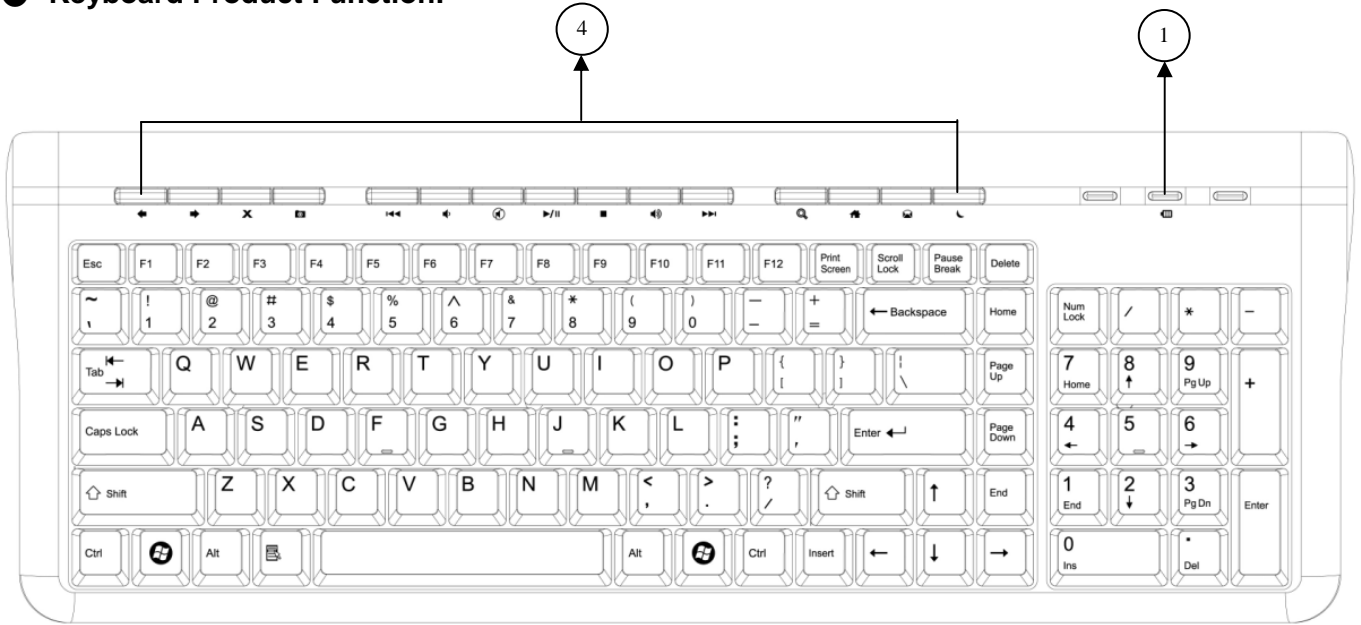

**1. Low power battery indicator**

→ The low power battery indicator to remind you to change the batteries when the red led light is sparking.

**2. Battery case**

→ Open battery case and follow the remark(+, -) to put batteries correctly.

**3. Keyboard ID pairing button**

→ Connect the keyboard and receiver.

**4. Hot key**



Back

Press this button to go to previous page















Forward

Press this button to go to next page



Stop

Press this button to stop current transmission

	Favorites	Press this button to bring up "My Favorite Window". Press this button again to close "My Favorite Window".
	Previous	Press this button to set media back by one track.
	-Volume	Press this button to decrease volume.
	Mute	Press this button to mute sound. Press it again to resume sound.
	Play/Pause	Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.
	Stop	Press this button to stop playing the media.
	+Volume	Press this button to increase volume.
	Next	Press this button to instruct the CD player to queue up beginning of the next track. During playback in a video file. Depress this button to cause the player to fast forward.
	Search	Press this button to bring up "Search Windows" for Web address Press this button again to close "Search Windows".
	Web/Home	Press this button to go to the default Home Page.
	Mail	Press this button to activate the e-mail system.
	Sleep	On computers with a power management program, the "Sleep" hot key enables you to: Start your screen saver / Log off Windows / Shut down Windows.

## ● Product operation sequence.

1. Insert batteries into your mouse and keyboard. Your mouse and keyboard supports by AAA type batteries.
  2. Turn on the mouse power.
  3. Plug the receiver into a USB port in your computer. The mouse and keyboard will connect with the receiver automatically. Please wait few seconds after the devices are searched.
  4. Move the mouse or click the keyboard. If they are working then the setting is completed. If the devices are not working, please pull and plug the receiver again.
- ※ When this product set up in the computer, the keyboard, mouse and receiver are pairing automatically. If not, please pair them by following steps:
- Mouse: Plug the receiver into a USB port in your computer and turn on the mouse power. Press scrolling and right buttons on the mouse simultaneously, the LED is going to flash and begin pairing. After LED stop to flash, mouse should be working.
- Keyboard: Plug the receiver into a USB port in your computer and press ID pairing button on the keyboard. The LED is going to flash and begin pairing. After LED stop to flash, keyboard should be working.
- ※ If the products were paired, press the ID pairing button would not pair again.

## ● System Requirements

1. IBM PC or compatible systems with USB host connector ◦
2. Windows XP/VISTA/7/8 ◦

## ● Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.