


RF Keyboard

Operation **Manual**

Hardware and Software Instructions

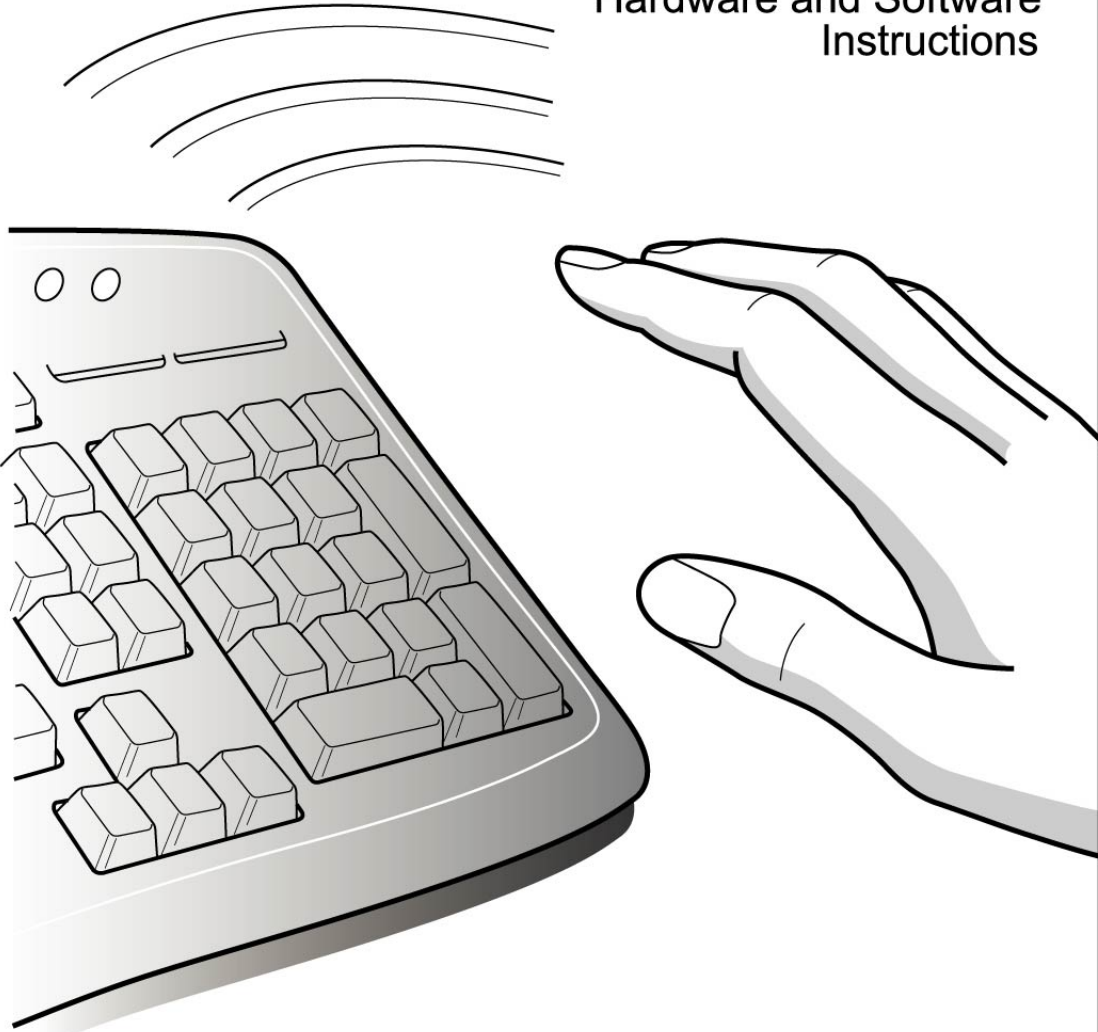

Windows® 95/98/2000/ME/NT/XP compatible

RF Keyboard User Guide

Thanks for Purchasing the "Wireless Keyboard" products, This guide gives you need to get started right away.

Hardware Installation

1. Battery Installation:
Open the KEYBOARD battery cap, insert the batteries, and put the cap back.
2. Turn off the computer; connect the Receiver connector to the computer then turn on computer.

Setup RF Keyboard random ID for use

1. Aim the front point of the Keyboard towards the Receiver.
2. Press the connect button from the Keyboard rear side.
3. Press the connect button on the Receiver then release.
(Please complete step2 to step3 within 15 seconds.)
4. Press the Keyboard "Num" Lock key, if you can find the Num indicator light of receiver is changing status, then setup keyboard is completed.

NOTE: If the Keyboard is not moving, please repeat the above steps.
Please re-setup the ID, when replace the battery.

Green function:

1. When the keyboard in static state, It will auto turn into sleep mode until the keyboard is moved.

Software Installation (Driver)

- Insert the CD/Driver.
- The Driver will auto enter the setup mode.
- Select "KEYBOARD"
- Click the "Multimedia Keyboard" option under "KEYBOARD only"
- Click the "KD/KL/KM/KF/KU/KR Series" option under Multimedia Keyboard
- Click on the appropriate item for setup.
- Follow the setups indicated in the screen to complete the keyboard setup.
- Restart your computer system.

Un-Installation:

If you want to remove the Driver: Please go to window's taskbar → click the Start → Setup → Control desk → Add/Remove program. → Find file KEMailKB and click Add/Remove → Confirm File Deletion, → click YES.

Environment

To avoid environmental influence the effective distance between the transmitter and receiver, please noted:

1. Do not put the transmitter and receiver on metal cabinet or desk.
2. Keep the distance between keyboard, and CRT monitor in 15-20 (cm).
3. Keep a distance of more than 1.0 m to avoid interference if there are other RF devices in use.

Troubleshooting

If the Products don't work well, please follow the steps as below:

1. Check the Keyboard if connected well with computer.
2. Check pole of the battery if loaded exactly.
3. Reset: Follow the setup of "Software Installation"

Changes or modifications are not expressly approved by the manufacturer could void the user's authority to operate the equipment. Changes or modifications to the device may void FCC and CE compliance. Infrequently used radio links should be tested regularly to protect against undetected interference or fault.