

# RF Keyboard & Mouse User Manual

## PRODUCT LIST

When you have opened the package, please make sure that all accessories are included as below:

- Wireless Keyboard ×1
- Wireless Mouse ×1
- Receiver ×1
- Driver Disk ×1
- User's instructional Guide ×1
- Alkaline Batteries of size AA ×3 (for keyboard)
- Ni-MH Batteries of size AAA ×2 (for Mouse)

In case of missing or damage of the above accessories, please contact your purchased dealer immediately.

## BATTERY INSTALLATION

Open the battery cap , which is on keyboard's or mouse's reverse side , place batteries, and put the cap back. Every time after having changed batteries , please reset up mouse ,or keyboard, or mouse and keyboard depending on which unit you have changed batteries. For re-setup , please follow the setup of "SETUP FOR USE ".

## HARDWARE INSTALLATION

Shut down your computer system.

Connect the green connector of the receiver to the PS2 connection port of the computer , or connect the purple connector of the receiver to the PS2 connection port , or connect the black USB connector of the receiver to the USB connection port on the computer.

Turn on your computer system.

## SOFTWARE INSTALLATION (DRIVER)

Insert the CD/Driver into CD-ROM.

The computer will into the setup up screen .

Select "KEYBOARD + MOUSE 2 IN 1"

Click on the appropriate item to setup.

Follow the setups indicated in the screen to complete the setup.

## SETUP FOR USE

### 1. MOUSE

#### 1.1 Aim the front point of the mouse at receiver.

**PRESS THE BUTTON ON THE REAR SIDE OF MOUSE AND RELEASE, THEN PRESS THE CONNECTOR BUTTON ON THE RECEIVER AND RELEASE WITHIN 15 SECONDS.**

Move the mouse and the cursor is moving then the setup of mouse is completed .If the cursor is not moving , please repeat the above setup.

### 2. KEYBOARD

#### 2.1 PRESS THE BUTTON ON THE REAR SIDE OF KEYBOARD AND RELEASE, THEN PRESS THE CONNECTOR BUTTON ON THE RECEIVER AND RELEASE WITHIN 15 SECONDS.

Press the "Num Lock "key , you can find the Num indicator light of receiver is changing status.

The setup of keyboard is completed. If not, please repeat the steps.

## MOUSE BUTTON FUNCTION SETUP

### 1. Get into setup from the control desk or directly click into the mouse pattern show in right-down corner of the screen . It shows the functions as following:

**Button :** setup for habit of using right or left hand, adjustment of the speed of continuously pressing twice the mouse buttons, adjustment of numbers of column for each rolling.

**Mouse Marking :** to set up the pattern or mouse marking.

**Wheel :** to set up the functions of hot key, zooming ,and rolling of auto-turning.

**Motion** : to set up the moving speed of mouse sign, the length of the dragging tail, and non-border, etc.

2. After the function is set u, press “Yes” to store the new setup.

## **TROUBLESHOOTING**

If the mouse or keyboard doesn't function well, please follow the steps below:

1. Check if the connector of USB or PS/2 port is well connected or not.
2. heck if the positive(+) and negative(-) pole of the battery is put correctly. If the power is low, the mouse will become sluggish or slow.
3. Reset: Follow the setup of “Setup for use”.

## **HARDWARE MAINTENANCE AND CLEANING**

When the mouse doesn't move smoothly or its speed is not normal, please clean the rolling ball of he mouse. The steps are as follows:

1. Follow the arrow direction (open with clockwise direction, and close with counterclockwise direction) to turn the rolling ball cap, which is under the mouse, to take out the ball.
2. Wipe the ball with a clean cloth dampen with clean water or alcohol, and wipe the dust inside the mouse with a dry clean cloth. After the cleaning is done, put back the ball and the cap.  
(Caution: never clean with organic dissolvent,)

## **ENVIRONMENT**

To avoid environmental interference, which will reduce the effective distance, it should be noted below for the mouse and receiver:

1. Do not put the mouse and receiver on metal cabinet or metal desk. It's better not having metal or interference source around, which affect the RF communication, and reduce the communication distance.
2. The ideal for the mouse and receiver is having 15-20 cm distant from computers or, in any open place.
3. Keep a distance of more than 1.5m to avoid interference if there are other RF devices in using.

## **HOW TO REMOVE THE DRIVER**

-From the windows taskbar, click the Start, then select Setup, Control desk, Add/Remove program. Find the file USB wireless Mouse and click Add/Remove.

-in the window Confirm File Deletion, click YES.

For any problem in using this device, please reach to the Customer Service Center through the e-mail n the website. A response will be forwarded by e-mail to you very soon.



CAUTION :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



CAUTION :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CAUTION :

The manufacturer is not responsible for any radio or TV Interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.