

Operational Description of the equipment

1. Connecting with Computer:

The first time you take out this mouse and receiver from the packing, Factory Preset ID enables Plug and Play function.

Plug the Receiver into PC USB Port. Under Win2000 or higher, wait for the OS to detect the RF device.



Under Win98 or lower, installation of driver for the device is necessary.



Insert the batteries into the mouse and move it for a while, then it starts working.

2. Inserting Batteries:

A. Push the battery cover compartment backward and open it.



B. Insert 2 AAA batteries into the compartment with correct orientation.



B. Slide the battery cover into the compartment and close the cover.



3. ID Link:

When Factory ID has been changed or wish to be changed, link ID as below:

A. Press the ID button on the bottom of the mouse.



B. Press the ID button on the top of the receiver. If the led on it starts blinking rapidly, ID Link is OK.



! ID linking should be completed within 10 seconds or connection would be failed

PRODUCT	Wireless Optical Mouse
MODEL NO.	AXM-607
SERIAL NO.	98543

RF Mouse Transmitter

WORKING FREQUENCY	27.045MHz
CHANNEL NUMBER	1
ID NUMBERS	256
RF OUTPUT POWER	-4dBm±2dBm
DEVIATION	6KHz±2KHz
MODULATION METHOD	FSK
POWER REQUIREMENTS	3.0V, AAA size battery 2 pieces
CURRENT DISSIPATION	<35mA
STANDBY MODE CURRENT	5±1mA
SLEEPING MODE CURRENT	0.63mA
TRANSMITTING ANGLE	360°
WORKING DISTANCE	1.0 meter (Min.)
LOW BATTERY	2.0V