

Table of Contents

1.	VOICE DONGLE SPECIFICATION	3
2.	INSTALLATION STEPS	.3
3.	VOICE DONGLE SETTING	4
4.	WARRANTY POLICY	.5

1. Voice Dongle Specification

 
Operating Voltage		
Operating Humidity	95 % MAX	
Operating Current	<900 mA at DC 5V	
Storage Temperature	-40°C to 85 °C	
Operating Temperature	-20°C to 85 °C	
Sound Pressure (min.)	80dB@30cm	
Operating Frequency	2.4GHz	
Transmission Power	4 dBm MAX	
Weight	10 ± 1 g	
Operating Voltage	5V	

2. Installation Steps

 Press the red button voice dongle, long press 1.5 seconds, hear "beep" enter Bluetooth pairing mode.



2.APP click "re-scan"button and click voice dongle(TPMS_Dongle_sn), show "TPMS_Dongle_sn Connected".



3.click write button, when you hear
"Voice Dongle Setup Complete" show
"Voice dongle Setting OK " to get started.

3. Voice Dongle Setting



Voice Dongle Setting:

- 1. Press the red voice dongle button for 1.5 seconds. When you hear "beep," you will go into the Bluetooth pairing mode (LED : flicker of Red and Blue light). (Pic 2)
- 2. Enter menu ->click "Dongle" function ->click "TPMS_Dongle_sn" (random serial number), "TPMS_Dongle_sn Connected" will be shown in blue color. (Pic 3)
- iOS version: The APP will automatically download the settings when you hear "Setup completed." You can start using after "Voice dongle Setting OK" is displayed.
 Android version: Please click write. The APP will automatically download the settings when you hear "Setup completed." When "Dongle Setting OK" is displayed, you can start using.

Mute/ Un-Mute: Press the red button to mute. Press the red button again or wait 10 minutes for the mute function to cancel automatically.

4. Warranty Policy

Thank you for buying this product and giving us support. From the date of purchase, we provide a one-year warranty for the product, protecting the client's interest by providing product quality assurance. During the warranty period, under normal operation and in the event of a faulty product, the company is willing to repair the faulty product or have it replaced, enabling you to get the guarantee and demonstrating the company's responsible attitude toward products. But the product warranty must meet the following conditions :

- 1. Defective products need to be provided to local dealer to confirm purchase date and cause of defect.
- 2. Products must be operated correctly, as indicated in the user manual.
- 3. Product has not been disassembled by yourself.
- 4. The main cause of product failure is due to manufacture issues.

Disclaimer:

This product is only to be used as precautionary warning and provides to user as a convenient secondary safety equipment. Please follow the standard installation procedures or ask a qualified tire shop to install the product. If the tire has been damaged or traffic accident resulting from improper driving behavior occurs, the company will not be responsible for any civil or criminal liabilities.

Other relevant latest information of SYSGRATION TPMS is available at our website (<u>http://www.sysgration.com/</u>) and our Facebook Page (<u>http://www.facebook.com/sysgration</u>) for latest information.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

. Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.5 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 0.5 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.