

Locking/Unlocking the doors

INSTRUCTIONS

When you push the 'Lock' button on the transmitter, all the doors can be locked from outside the vehicle.

Make sure all the doors are locked when you leave the vehicle.

When you push the 'Unlock' button on the transmitter once, the driver side door can be unlocked, and when you push the 'Unlock' button twice, all the doors can be unlocked from outside the vehicle.

(If applicable)

When you push the 'Panic' button on the transmitter, alarms can be operated/unoperated from outside the vehicle.

(If applicable)

When you push the 'Trunk' button on the transmitter, the car trunk lid can be opened from outside the vehicle.

(If applicable)

When you push the 'Back Window' button on the transmitter, the back window can be opened from outside the vehicle.

(If applicable)

When you push the 'Back Door' button on the transmitter, the back door can be opened or closed from outside the vehicle.

(If applicable)

When you push the 'Right slide door' button on the transmitter, the right slide door can be opened or closed from outside the vehicle.

(If applicable)

When you push the 'Left slide door' button on the transmitter, the left slide door can be opened or closed from outside the vehicle.

NOTE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.