## Manual Requirement of FCC

Our product (DECS001) is one of vehicle parts, which is installed in the passenger seat. We will supply the user's manual that include statements and instructions in accordance with FCC requirements.

# NOTE

This device compiles with Part 18 of the FCC Rules.

This device may cause interference.

If this device causes interference,

please consult the nearest

SUBARU dealer for maintenance of the system.

#### Seat, seatbelt and SRS airbags 1-39

WARNING

#### SUBARU advanced frontal airbag system

Your vehicle is equipped with a SUBARU advanced frontal airbag system that complies with the new advanced frontal airbag requirements in the amended Federal Motor Vehicle Safety Standard (FMVSS) No. 208.

The SUBARU advanced frontal airbag system automatically determines the deployment force of the driver's SRS frontal airbag at the time of deployment as well as whether or not to activate the front passenger's SRS frontal airbag and, if activated, the deployment force of the SRS frontal airbag at the time of deployment.

Your vehicle has warning labels on the driver's and front passenger's sun visors beginning with the phrase "EVEN WITH ADVANCED AIR BAGS" and a tag attached to the glove box lid beginning with the phrase "Even with Advanced Air Bags". Make sure that you carefully read the instructions on the warning labels and tag.

Always wear your seatbelt. The SUBARU advanced frontal airbag system is a supplemental restraint system and must be used in combination with a seatbelt. All occupants should wear a seatbelt or be seated in an appropriate child restraint

#### system.

The driver's SRS frontal airbag is stowed in the center portion of the steering wheel. The front passenger's SRS frontal airbag is stowed near the top of the dashboard under an "SRS AIRBAG" mark. Also, the driver's knee airbag is stowed in the bottom of the steering column.


In a moderate to severe frontal collision, the following components deploy.

- SRS frontal airbag for driver
- SRS frontal airbag for front passenger
- Knee airbag for driver

These components supplement the seatbelts by reducing the impact to the occupant's head, chest and knees.



NEVER INSTALL A REARWARD FA-CING CHILD SEAT IN THE FRONT SEAT. DOING SO RISKS SERIOUS INJURY OR DEATH TO THE CHILD BY PLACING THE CHILD'S HEAD TOO CLOSE TO THE SRS AIRBAG.

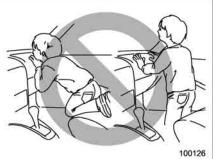


## 

Never allow a child to stand up, or to kneel on the front passenger's seat. The SRS airbag deploys with considerable force and can injure or even kill the child.


- CONTINUED -

## **1-40** Seat, seatbelt and SRS airbags

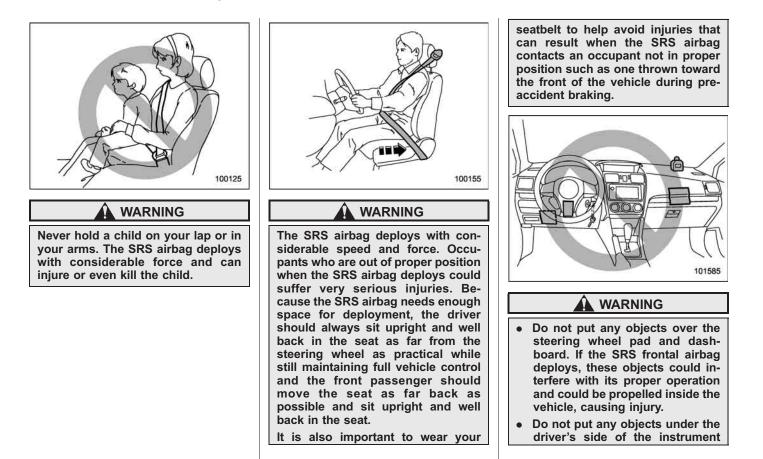

panel. If the knee airbag deploys, those objects could interfere with its proper operation and could be propelled inside the vehicle, causing injury.

 The key must not be attached to heavy, sharp or hard accessories, or another key. If the knee airbag deploys, those objects could interfere with its proper operation and could be propelled inside the vehicle and cause injury.

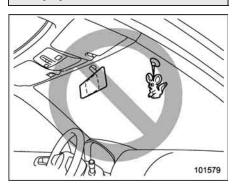

## 

Do not attach accessories to the windshield, or fit an extra-wide mir-

ror over the rear view mirror. If the SRS airbag deploys, those objects could become projectiles that could seriously injure vehicle occupants.

#### ▼ Driver's SRS frontal airbag

The driver's SRS frontal airbag uses a dual stage inflator. The inflator operates in different ways depending on the severity of impact.

Have the system inspected by your SUBARU dealer immediately if the SRS airbag system warning light illuminates.

## NOTE

The driver's SRS side airbag and SRS curtain airbag are not controlled by the SUBARU advanced frontal airbag system.

#### Front passenger's SRS frontal airbag

The front passenger's SRS frontal airbag uses a dual stage inflator. The inflator operates in different ways depending on the severity of impact.

The occupant detection system sensor is installed under the seat upholstery and monitors the position and posture of the front passenger. Using this information, the occupant detection system determines

#### Seat, seatbelt and SRS airbags **1-41**

whether the front passenger's SRS frontal impact airbag should be deployed or not. The occupant detection system may not inflate the front passenger's SRS frontal airbag even when the driver's SRS frontal airbag deploys. This is normal. In this case, although the front passenger's SRS frontal airbag does not operate, the front passenger's seatbelt pretensioner operates with the driver's seatbelt pretensioner. For details about the seatbelt pretensioner, refer to "sourd Front seatbelt pretensioners" @1-20.

Observe the following precautions. Failure to do so may prevent the SUBARU advanced frontal airbag system from functioning correctly or cause the system to fail.

• Do not apply any strong impact to the front passenger's seat.

• Do not spill liquid on the front passenger's seat. If liquid is spilled, wipe it off immediately.

• Do not remove or disassemble the front passenger's seat.

• Do not install any accessory (such as an audio amplifier) other than a genuine SUBARU accessory under the front passenger's seat.

• Do not place anything (shoes, umbrella, etc.) under the front passenger's seat.

- CONTINUED -

### **1-42** Seat, seatbelt and SRS airbags

• Do not place a magnet near the seatbelt buckle.

If the seatbelt buckle switch and/or front passenger's occupant detection system have failed, the SRS airbag system warning light will illuminate. Have the system inspected by your SUBARU dealer immediately if the SRS airbag system warning light illuminates.

If your vehicle has sustained impact, this may affect the proper function of the SUBARU advanced frontal airbag system. Have your vehicle inspected at your SUBARU dealer. Do not use the front passenger's seat while driving the vehicle to your SUBARU dealer.

## NOTE

The front passenger's SRS side airbag and SRS curtain airbag are not controlled by the SUBARU advanced frontal airbag system.

 Passenger's frontal airbag ON and OFF indicators

Refer to "solveos Front passenger's frontal airbag ON and OFF indicators" @3-11.

#### ▼ Occupant detection system

The occupant detection system sensor is installed under the seat upholstery and monitors the position and posture of the front passenger. Using this information, the occupant detection system determines whether the front passenger's SRS frontal impact airbag should be deployed or not. If the front passenger's seat cushion is wet, this may adversely affect the ability of the system to determine deployment. If the seat cushion is wet, the front passenger should stop sitting on the front passenger's seat. Wipe off water from the seat immediately, let the seat dry naturally and then check the airbag warning light as follows.

• If the airbag warning light illuminates, keep the seat dry until the warning light turns off. If the airbag warning light stays on even when the seat has dried, do not allow anyone to sit on the front passenger's seat and have the system checked by your SUBARU dealer.

• If the airbag warning light does not illuminate, check that the airbag ON/OFF indicator light works properly. If the indicator light does not work properly, do not allow anyone to sit on the front passenger's seat and have the system checked by your SUBARU dealer.

Also, if luggage or electronic devices are placed on the front passenger's seat, this may adversely affect the ability of the system to determine deployment. This may prevent the airbag ON/OFF indicator light from working properly. Check that the airbag ON/OFF indicator light works properly.

When the OFF indicator light turns off and the ON indicator light illuminates, the front passenger's airbag may deploy during a collision. Remove luggage and electronic devices from the front passenger's seat.

## NOTE

This device compiles with Part 18 of the FCC Rules. This device may cause interference. If this device causes interference, please consult the nearest SUBARU dealer for maintenance of the system.

A copy of the original declaration of conformity can be found in chapter 13.

#### Conditions in which front passenger's SRS frontal airbag is not activated

The front passenger's SRS frontal airbag will not be activated when any of the following conditions are met regarding the front passenger's seat:

• The seat is empty.

• The seat is equipped with a rearward facing child restraint system and an infant is restrained with it. (See WARNING that follows.)

• The seat is equipped with a forward

facing child restraint system and a small child is restrained with it. (See WARNING that follows.)

• The seat is equipped with a booster seat and a small child is in the booster seat. (See WARNING that follows.)

- The seat is relieved of the occupant load for a time exceeding the predetermined monitoring time period.
- The seat is occupied by a child who has outgrown a child restraint system (See WARNING that follows.) or by a small adult.

 The front passenger's occupant detection system is malfunctioning.

#### 

NEVER INSTALL A REARWARD FA-CING CHILD SEAT IN THE FRONT PASSENGER'S SEAT EVEN IF THE FRONT PASSENGER'S SRS FRON-TAL AIRBAG IS DEACTIVATED. Be sure to install it in the REAR seat in a correct manner. Also, it is strongly recommended that any forward facing child seat or booster seat be installed in the REAR seat, and that even children who have outgrown a child restraint system be also seated in the REAR seat. This is because children sitting in the front passenger's seat may be killed or severely injured should the front passenger's SRS frontal airbag deploy. REAR seats are the safest place for children.

When the front passenger's seat is occupied by a child, observe the following precautions. Failure to do so may increase the load on the front passenger's seat, activating the front passenger's SRS frontal airbag even though that seat is occupied by a child.

- Do not place any article on the seat other than the child occupant and a child restraint system.
- Do not place more than one child on the seat.
- ▽ If the front passenger's frontal airbag ON indicator illuminates and the OFF indicator turns off even when an infant or a small child is in a child restraint system (including booster seat)

Turn the ignition switch to the <sup>SU1AD02040</sup> position if the front passenger's frontal airbag ON indicator illuminates and the OFF indicator turns off even when an infant or a small child is in a child restraint system (including booster seat). Remove the child restraint system from the seat. By Seat, seatbelt and SRS airbags **1-43** 

referring to the child restraint manufacturer's recommendations as well as the child restraint system installation procedures in "soliegChild restraint systems" \$71-23, correctly install the child restraint system. Turn the ignition switch to the "ON" position and make sure that the front passenger's frontal airbag ON indicator turns off and the OFF indicator illuminates.

If still the ON indicator remains illuminated while the OFF indicator turns off, take the following actions.

• Ensure that no article is placed on the seat other than the child restraint system and the child occupant.

• Ensure that the backward-forward position and seatback of front passenger's seat are locked into place securely by moving the seat back and forth.

If the ON indicator still remains illuminated while the OFF indicator turns off after taking relevant corrective actions described above, relocate the child restraint system to the rear seat and immediately contact your SUBARU dealer for an inspection.

#### NOTE

When a child who has outgrown a child restraint system or a small adult is seated in the front passenger's seat,

- CONTINUED -

#### **1-44** Seat, seatbelt and SRS airbags

the SUBARU advanced frontal airbag system may or may not activate the front passenger's SRS frontal airbag depending on the occupant's seating posture. If the front passenger's SRS frontal airbag is activated (the ON indicator remains illuminated while the OFF indicator turns off), take the following actions.

• Ensure that no article is placed on the seat other than the occupant.

If the ON indicator still remains illuminated while the OFF indicator turns off despite the fact that the actions noted above have been taken, seat the child/ small adult in the rear seat and immediately contact your SUBARU dealer for an inspection. Even if the system has passed the dealer inspection, it is recommended that on subsequent trips the child/small adult always take the rear seat.

Children who have outgrown a child restraint system should always wear the seatbelt irrespective of whether the airbag is deactivated or activated.

 Conditions in which front passenger's SRS frontal airbag is activated

The front passenger's SRS frontal airbag will be activated for deployment upon impact when any of the following condi-

tions are met regarding the front passenger's seat.

- When the seat is occupied by an adult.
  When a heavy article is placed on the seat.
- ✓ If the passenger's frontal airbag OFF indicator illuminates and the ON indicator turns off even when the front passenger's seat is occupied by an adult

This can be caused by the adult incorrectly sitting in the front passenger's seat. Turn the ignition switch to the "LOCK" position. Ask the front passenger to set the seatback to the upright position, sit up straight in the center of the seat cushion, correctly fasten the seatbelt, position his/ her legs out forward, and adjust the seat to the rearmost position. Turn the ignition switch to the "ON" position. If the OFF indicator remains illuminated while the ON indicator remains off, take the following actions.

• Turn the ignition switch to the "LOCK" position.

• Make sure that you do not use a blanket, seat cushion, seat cover, seat heater or massager, etc.

• If wearing excessive layers of clothing, the front passenger should remove any unnecessary items before sitting in the front passenger seat, or should sit in a rear seat.

• Next, turn the ignition switch to the "ON" position and wait 6 seconds to allow the system to complete self-checking. Following the system check, both indicators turn off for 2 seconds. Now, the ON indicator should illuminate while the OFF indicator remains off.

If the OFF indicator still remains illuminated while the ON indicator remains off, ask the occupant to move to the rear seat and immediately contact your SUBARU dealer for an inspection.

 How to contact the vehicle manufacturer concerning modifications for persons with disabilities that may affect the advanced air bag system (U.S. only)

Changing or moving any parts of the front seats, rear seat, seatbelts, front bumper, front side frame, radiator panel, instrument panel, combination meter, steering wheel, steering column, tire, suspension or floor panel can affect the operation of the SUBARU advanced airbag system. If you have any questions, you may contact the following SUBARU distributors.

<Continental U.S., Alaska and the District of Columbia>

Seat, seatbelt and SRS airbags 1-45

Subaru of America, Inc. Customer Dealer Services Department P.O. Box 6000 Cherry Hill, NJ 08034-6000 1-800-SUBARU3 (1-800-782-2783)

#### <Hawaii>

Servco Subaru Inc., dba Subaru Hawaii 2850 Pukoloa Street, Suite 202, Honolulu, HI 96819 808-839-2273


#### <Guam>

Shen's Corporation dba Prestige Automobile 491, East Marine Drive, Route 1 Dededo, Guam 671-633-2698

<Puerto Rico>

**Trebol Motors** P.O. Box 11204, San Juan, Puerto Rico 00910 787-793-2828

There are currently no SUBARU distributors in any other U.S. territories. If you are in such an area, please contact the SUBARU distributor or dealer from which you bought your vehicle.

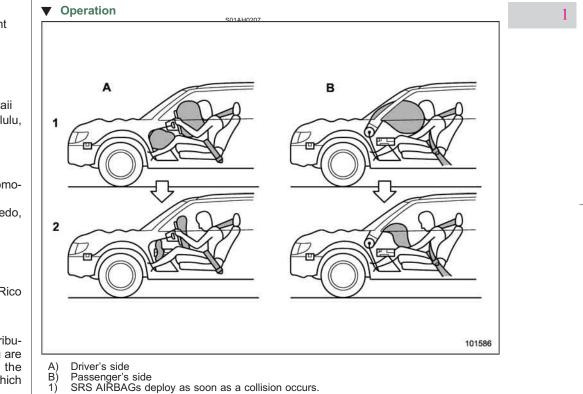

- 1)
- After deployment, SRS AIRBAGs start to deflate immediately so that the driver's vision is not 2) obstructed.

- CONTINUED -