

Radiated Emission

Host EUT: S4M

Antenna install type: Antenna permanently attached to the host EUT antenna port.

Front View



Rear View



Antenna install type: Antenna permanently attached to the host EUT antenna port with external coaxial cable

Front View



Rear View



Host EUT: ZM600

Antenna install type: Antenna permanently attached to the host EUT antenna port.

Front View



Rear View



Antenna install type: Antenna permanently attached to the host EUT antenna port with external coaxial cable

Front View



Rear View



Host EUT: ZM400

Antenna install type: Antenna permanently attached to the host EUT antenna port.

Front View



Rear View



Antenna install type: Antenna permanently attached to the host EUT antenna port with external coaxial cable

Front View



Rear View



Host EUT: 110XiIII Plus

Antenna install type: Antenna permanently attached to the host EUT antenna port.

Front View



Rear View



Antenna install type: Antenna permanently attached to the host EUT antenna port with external coaxial cable

Front View



Rear View



Conducted Emission
Front View

