




HOST PRINTER MODEL: RW4-PS

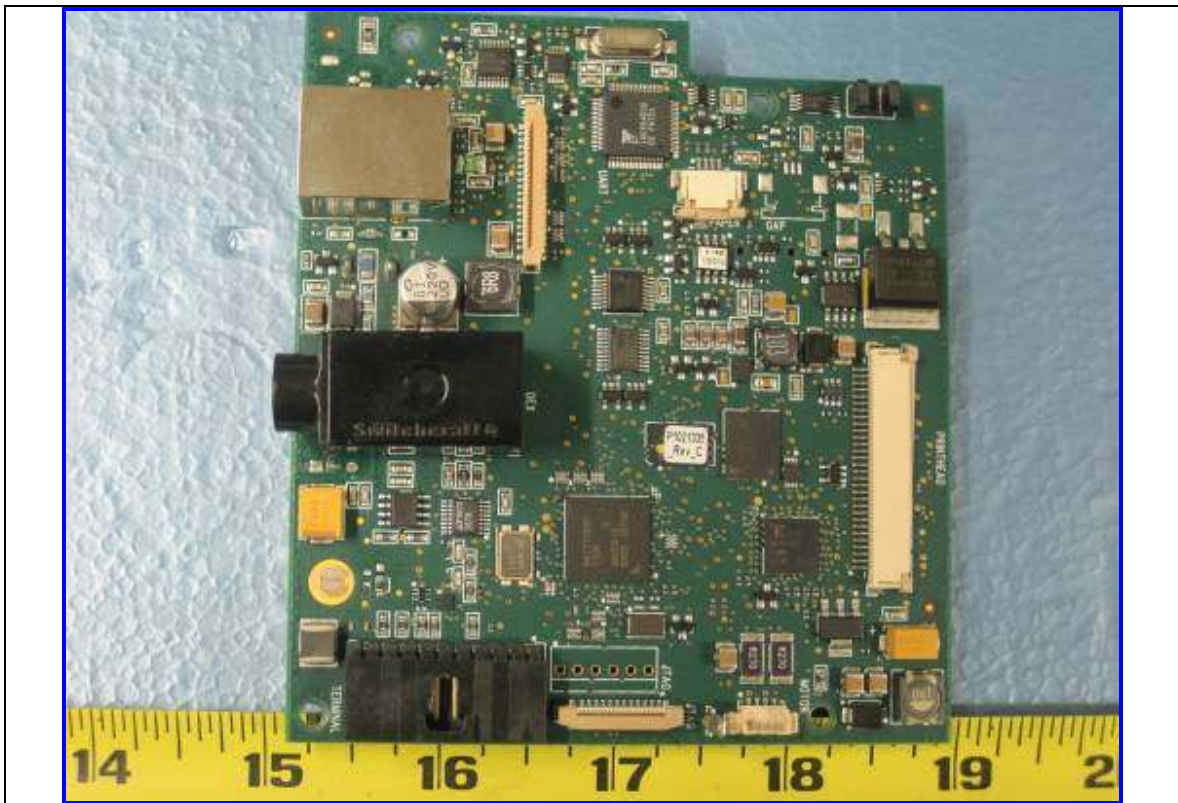


HOST: Main PCBA Component View

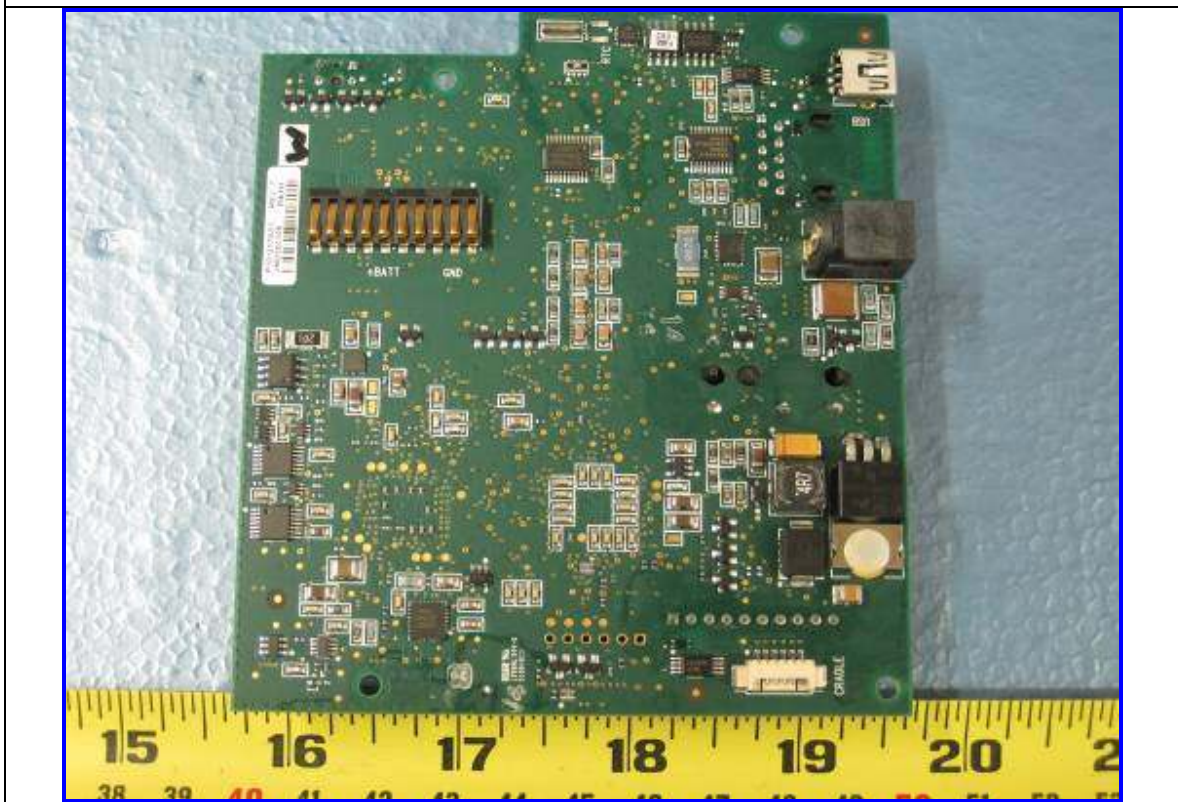


HOST: Main PCBA Solder View

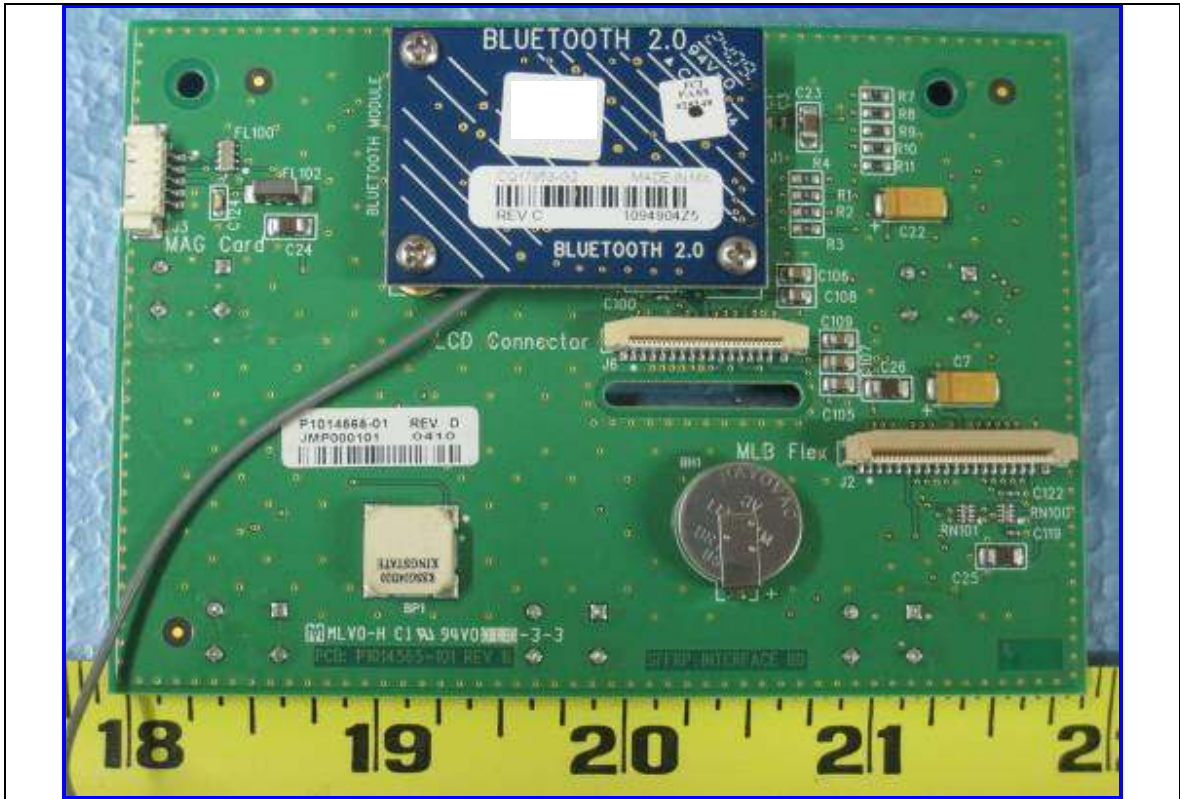


HOST: Sub-PCBA with RF Module Component View

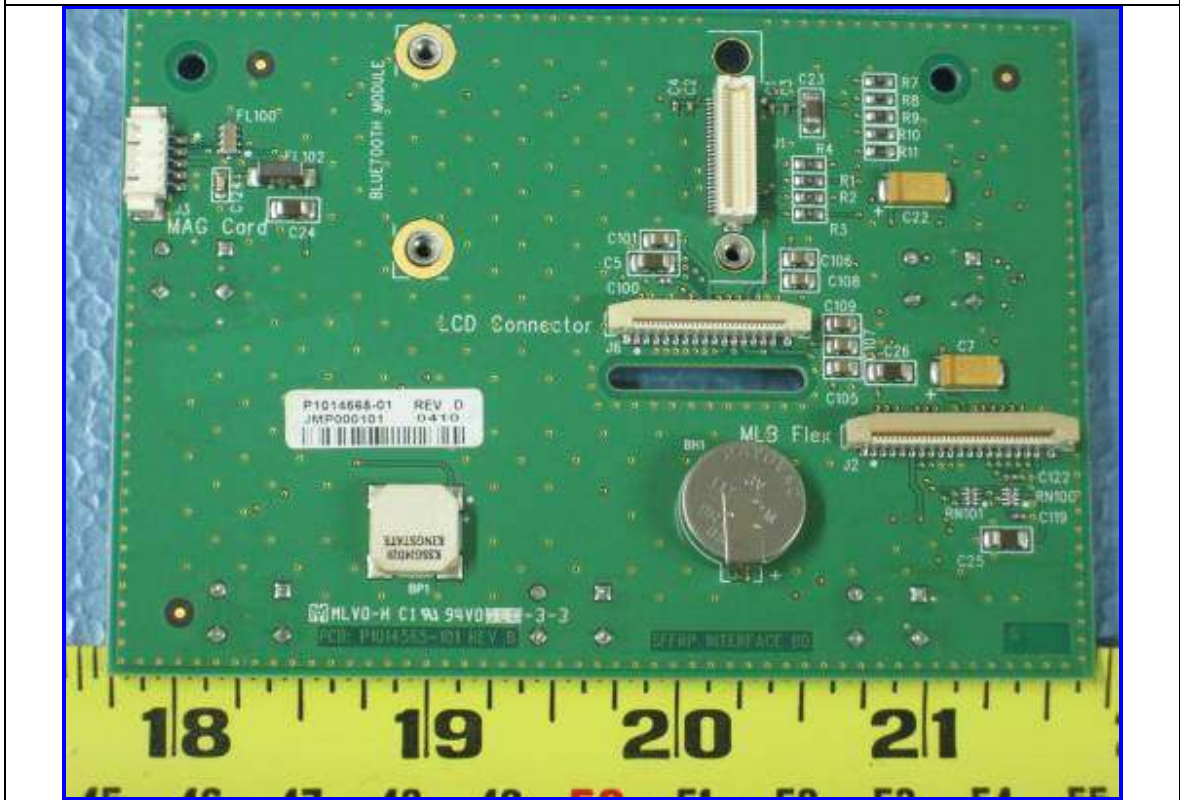


HOST: Sub-PCBA without RF Module Component View

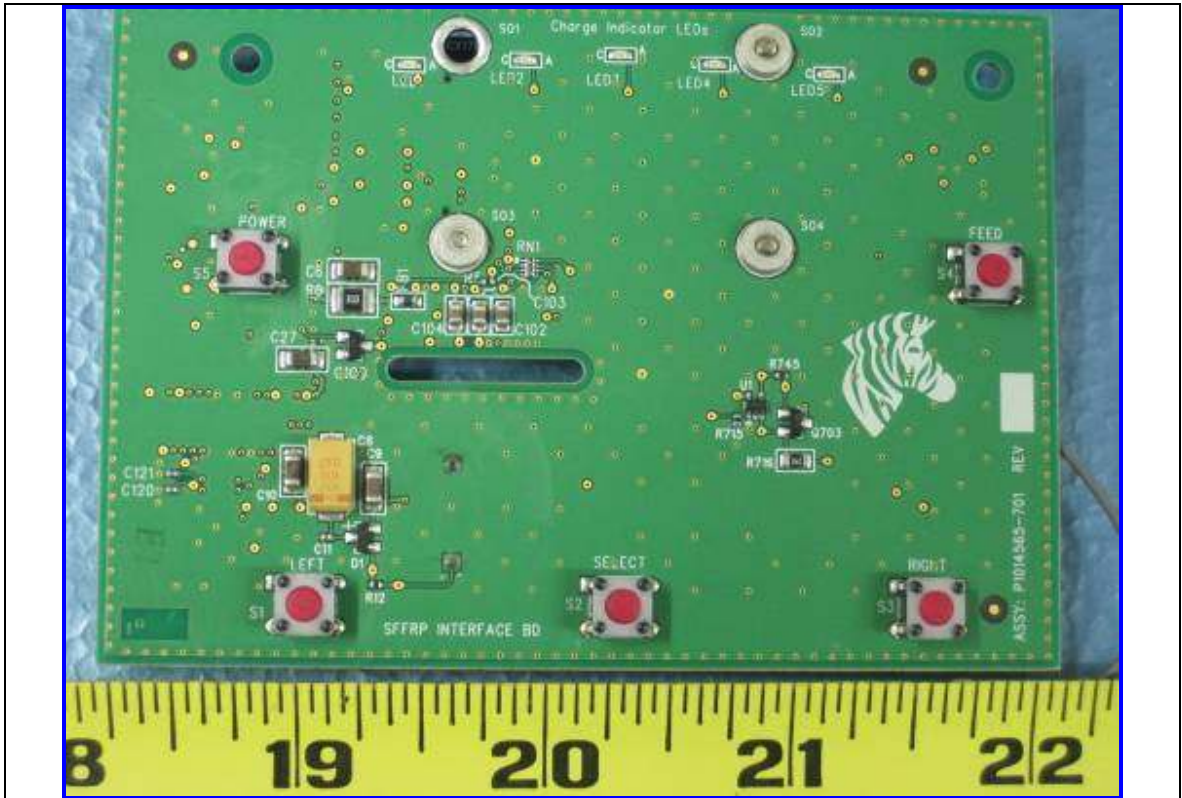


HOST: Sub-PCBA Solder View

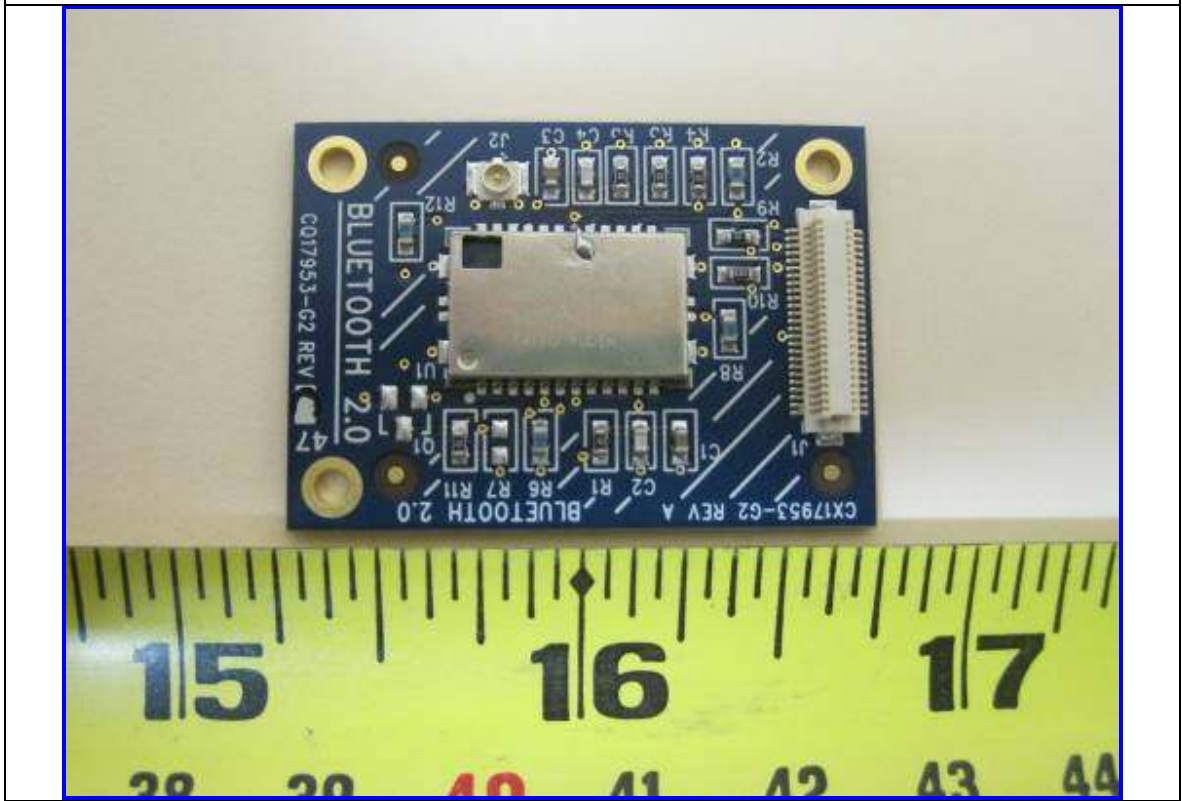

EUT RF Module Shield ON Component View

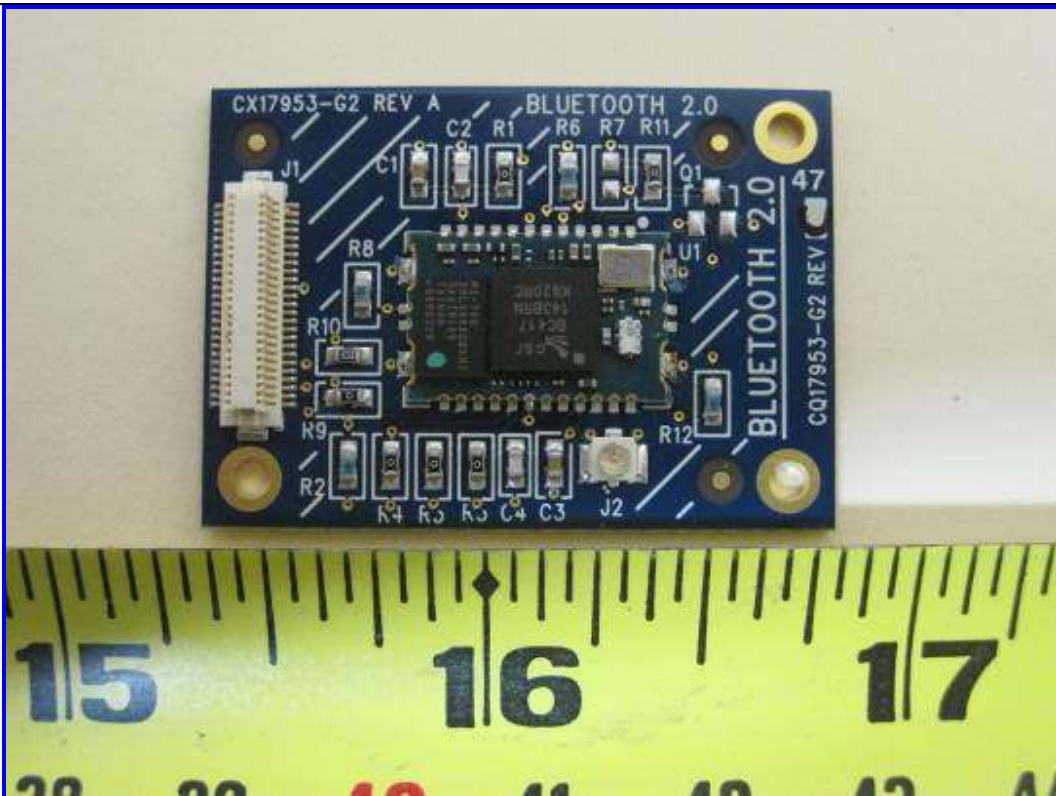

EUT RF Module Shield OFF Component View

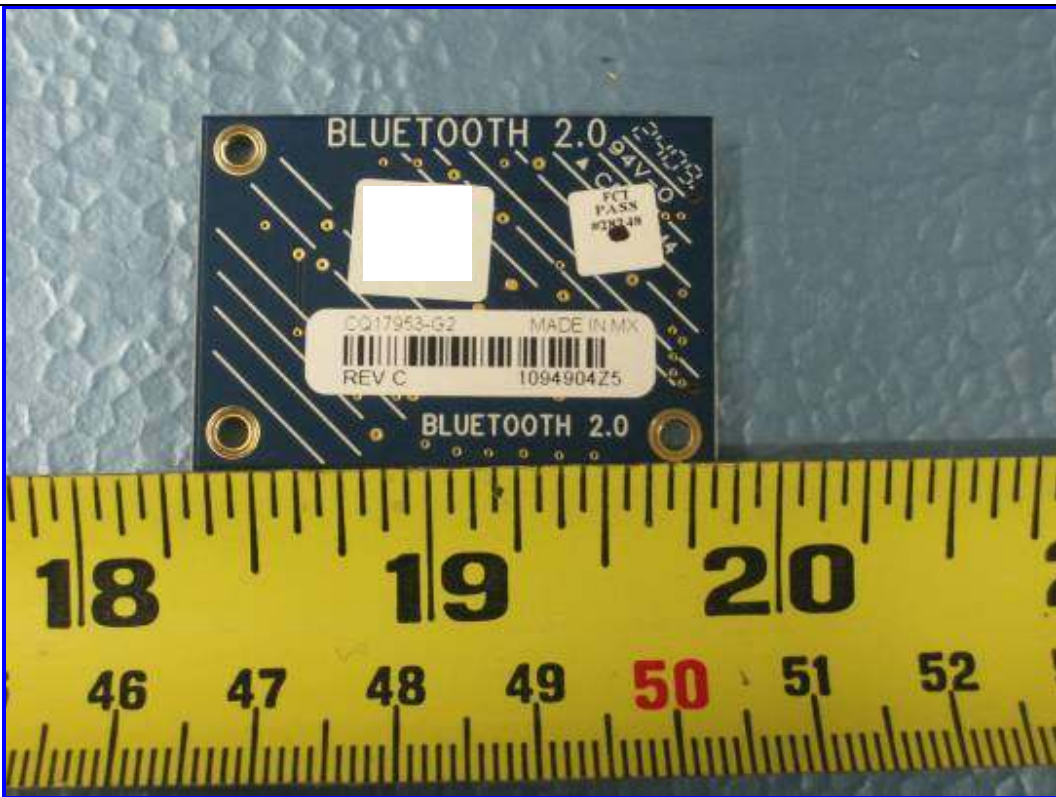

EUT RF Module Solder View




EUT: Antenna Board Component View



EUT: Antenna Board Solder View



HOST: LCD Front View

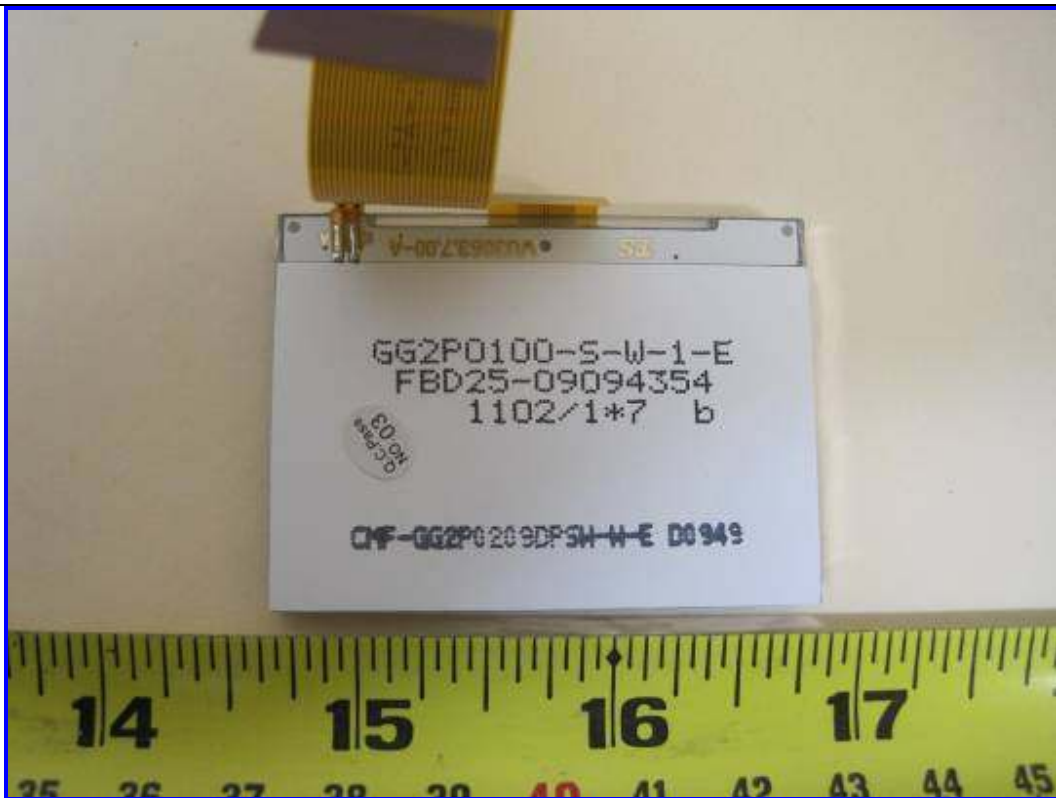

HOST: LCD Back View