

HOST EUT -iMZ220




EUT - Top View



EUT - Back View



EUT - Front View

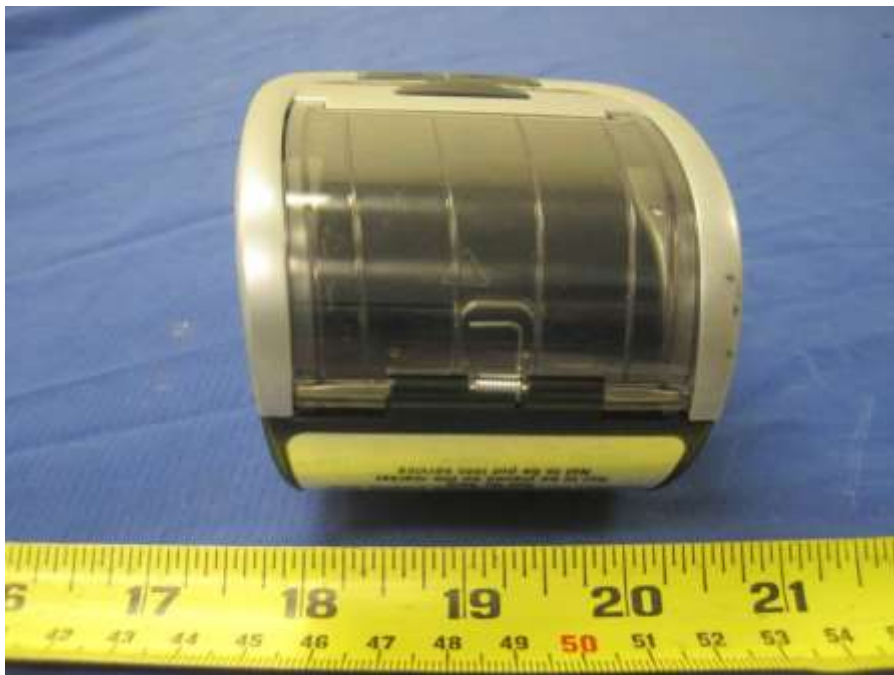

EUT - Rear View



Antenna location.
locate right
underneath top
housing

Separation
between antenna
and belt clip is 5cm

EUT - Right View



EUT - Left View

HOST EUT –iMZ320



EUT - Top View



EUT - Back View




EUT - Front View



EUT - Rear View



EUT - Right View

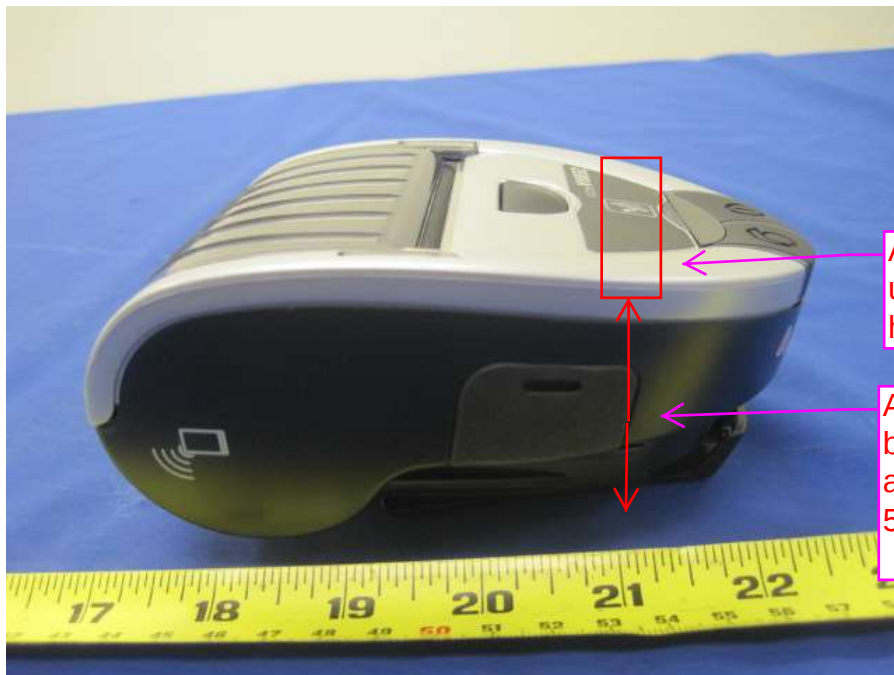

Antenna Location,
underneath top
housing

Antenna separation
between antenna
and belt clip =
5.5cm

EUT - Left View


Host EUT Accessories



Power Supply -1



Power Supply -2

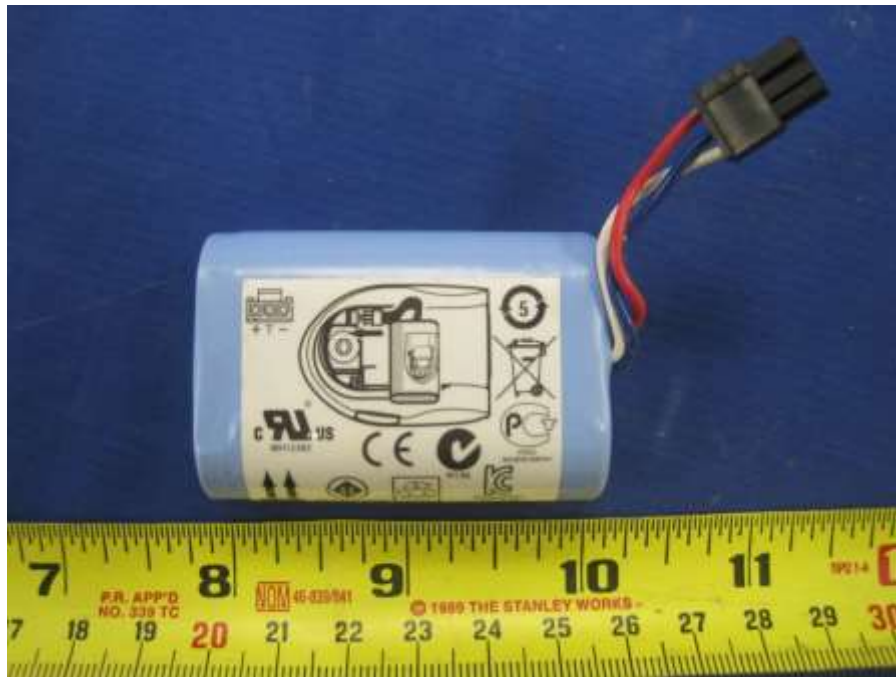

Battery View- Top



Battery View- Bottom