

The default frequency hop table has 53 entries spaced 466kHz apart. The default table is shown below:

Hop Table Entry # Frequency in kHz

1	927233
2	903900
3	920234
4	905767
5	923500
6	909033
7	917900
8	909967
9	921167
10	917434
11	902967
12	920700
13	907633
14	913234
15	924900
16	904367
17	919300
18	914634
19	923033
20	918834
21	925367
22	909500
23	908567
24	926300
25	913701
26	904834
27	906234
28	916034
29	915101
30	923967
31	922100
32	906700
33	916501
34	918367
35	910900
36	916967
37	907167
38	926767
39	912767
40	911833
41	910433
42	903434
43	914167
44	911367
45	921634
46	925833
47	915567
48	908100
49	912301
50	922567
51	924433
52	919767
53	905300

Table 3: Default frequency hop table values.