

ACTION MAN WALKIE TALKIE INSTRUCTIONS

OPERATION

1. On / Off
2. Talk Switch
3. Microphone / Speaker

SWITCHING ON

Switch the units on by push ① to the left until it clicks.

TRANSMITTING / RECEIVING

To transmit and receive both units must be switched on.
Two people cannot talk at the same time so you must decide who goes first.

To Talk

Press and hold in the large talk switch ② while you speak.
Hold the walkie talkie unit 2 to 3 inches from your mouth and talk directly into the microphone ③.
Say "Over" when you have finished and release the talk switch ②.
Listen to your friend's message by holding the speaker ③ on the walkie talkie unit to your ear.
When you hear "Over" press the talk switch ② and talk again.
Say "Over and Out" when you have finished your conversation completely.

To Receive

Make sure the talk switch ② is not pressed in.
Hold the walkie talkie speaker ③ to your ear and listen.


COMMUNICATIONS

The following are some common communication phrases:

Phrase	Meaning
COME IN PLEASE	Please respond
10-4	Message received
ROGER	Message received and understood
SAY AGAIN	Your message was not understood
OVER	That was the end of my message please reply
OVER AND OUT	End of conversation

SWITCHING OFF

To turn the units off, push ① to the right until it "clicks" off.
Always turn the units off when not in use as this will extend the battery life.

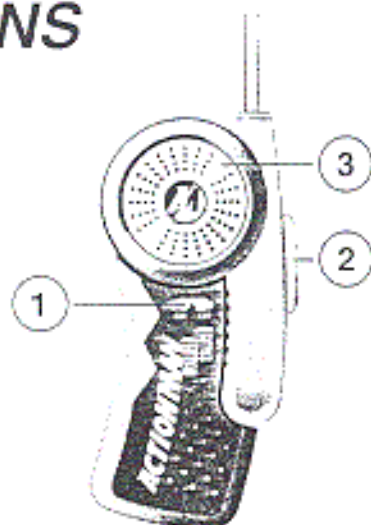

CONDITIONS THAT CAN AFFECT OPERATION

There are certain conditions which can affect the operation of radio equipment. The range of this Walkie Talkie Set is approximately 50 metres in "open field" conditions although the range can vary depending on the environment in which it is used.

- Tall Buildings and Trees
- Metal Clad Building
- Fluorescent Lighting
- Computers
- TV Sets
- Electric Drills
- Hot and Cold Temperature

TROUBLE SHOOTING

Problem	Solution
Fading Message / Interference	Move away from buildings and trees and any other of the items mentioned above. Reduce the distance between the walkie talkie units. Keep the aerial pointing as vertically as possible. The person transmitting should talk slowly and clearly into the microphone ③ holding the unit 2 to 3 inches from their mouth. The person receiving should hold the speaker close to their ear.
No Message	Check that both units are switched on. Make sure that the volume is high enough. Check that the batteries are not dead and replace if necessary. Make sure that the person receiving is not pressing the Talk Switch. Make sure that the person transmitting is pressing the Talk Switch.

CAUTION

- DO NOT IMMERSE IN WATER OR USE IN DAMP OR WET CONDITIONS
- DO NOT PUT EITHER UNIT NEXT TO HEAT SOURCES SUCH AS RADIATORS OR LEAVE EXPOSED TO THE SUN IN CAR WINDOWS ETC.
- DO NOT DISASSEMBLE. THERE ARE NO USER SERVICEABLE PARTS INSIDE.


INSERTING THE BATTERIES

Each unit requires one 6LR61 or 9V size battery (not included).
Remove the battery cover and place the battery into the compartment as indicated. Refit the battery cover.

TO ENSURE PROPER FUNCTION :

- DO NOT MIX OLD AND NEW BATTERIES.
- DO NOT MIX ALKALINE, STANDARD OR RECHARGEABLE BATTERIES.
- BATTERY INSTALLATION SHOULD BE DONE BY AN ADULT.
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED (IF REMOVABLE).
- RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION (IF REMOVABLE).
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

you would like further help with your Action Man Walkie Talkie please call the Tiger Electronics consumer Helpline on 01789 842995.

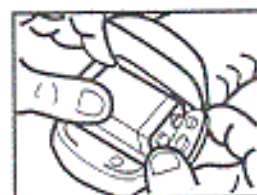

TIGER ELECTRONICS, INC.

FCC ID: I54-12013

EXHIBIT #: 4