

G.I. JOE WALKIE TALKIE (66986)
OPERATION MANUAL

TO OPERATE:

1. To turn on the walkie-talkie, turn the ON/OFF VOLUME dial to the ON position.
2. Slowly adjust the ON/OFF VOLUME dial to the desired listening level.
3. To send a message, press and hold the TALK button with the microphone about 4" from your mouth. Speak directly into the speaker/microphone in a normal voice.
4. Your voice will trans it up to 100 feet in areas with clear reception.
5. To receive a message, release the TALK button.
6. To turn off the walkie-talkie, turn the ON/OFF VOLUME dial unit til clicks into the OFF position.

"THE FOLLOWING FACTORRS CAN AFFECT THE PERFORMANCE AND OPERATING RANGE OF THE WALKIE TALKIE: COMPUTERS, ACTIVE ELECTRONIC EQUIPMENT, FLUORESCENT LIGHTS AND TALL BUILDINGS."

CAUTION:

1. If your walkie-talkie does not operate properly, try a new set of batteries.
2. After use, always turn off the walkie-talkie.
3. Do not touch antenna with your fingers or hand, while you are using walkie-talkie.
It will cause weak transmissions.
4. Your walkie-talkie set has been fully adjusted prior to shipment from the factory.
Do not touch the internal parts other than to replace battery.
5. To prevent damage, do not expose the walkie-talkie to rain or moisture.

To ensure proper function:

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard or rechargeable batteries.
3. Battery installation should be done by an adult.
4. Non-rechargeable batteries are not to be recharged.
5. Rechargeable batteries are to be removed from the toy before being charged (if removable).
6. Rechargeable batteries are only to be changed under adult supervision.
7. Only batteries of the same or equivalent type as recommended are to be used.
8. Batteries are to be inserted with the correct polarity, and follow the toy and battery

manufacturer's instructions.

9. Exhausted batteries are to be removed from the toy.
10. The supply terminals are not to be short-circuited.

BATTERY INSTALLATION:

Slide the ON/OFF SWITCH to OFF position. Open the battery compartment unit on the back of the unit by pushing in the direction of the arrow and lift. Insert one 9V (6LR61) battery, making sure to correctly connect the positive and negative terminals. Replace the battery compartment door and slide until you feel it lock into place. Each unit requires its own battery.

REMARK:

"Modifications not authorized by the manufacturer may void users authority to operate this d

NOTE:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.