

Hatching A Surprise Pet Egg

1. Press the **B Button** to start the process. You will hear instructions in the voice of Barbie telling you what to do.
2. Put the Surprise Pet Egg into the incubator (match arrow on egg to line on base) if you want to hatch a new pet.
3. Depending on Barbie's suggestion, press the **Heart Button** to heal the egg, the **Feeding Button** to feed it, the **Music Button** to play music, the **Heatlamp Button** to heat the egg or the **MIC Button** to talk to the egg.
4. Repeat until the egg shell opens then you can see the Pet you've hatched.
5. To re-hatch a pet, place a pet in the egg and close it. Place in the incubator as in step 2.

TIP: Is there something in the egg? Shake it find out!

Playing with your hatched Surprise Pet

1. Place a pet on swing and you will hear a swing sound effect.
2. Place a pet on the slide and you will hear a falling sound effect.
3. Once the pet slides into the swimming pool, you will hear its crying sound and sound effect.
4. To feed your pet, bring it into the feeding area, you will hear the pet's sound and then feeding sounds.
5. To give your pet a drink, bring it to the drinking fountain and press down on the drinking fountain. You will hear drinking sounds.

Maintenance

It is important to keep the Barbie "Love 'N' Care" Surprise Pets Playset as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Keep the Barbie Playset away from direct sunlight or sources of excessive heat.

Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

Place the Barbie Playset on a level surface away from sources of direct sunlight or excessive heat.

Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.

If the toy is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS**. Please also visit our website: www.toptoysonline.com.

Troubleshooting

If improper operation occurs, switch the power on/off button which located on the bottom of the unit to off and wait a while then switch it on again.

If the toy still does not play, check the batteries. It is most likely weak and needs to be replaced with new batteries.

If the unit still does not work after changing the batteries, make sure you have installed it properly, which the + and - polarities match up with the diagram printed inside the battery compartment.

If there is a distorted or fuzzy sound, the batteries may be weak. Replace with new batteries.

If problems persist, do not attempt to repair the toy yourself. See the warranty for factory service information.

One Year Limited Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$6.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$6.00.
4. Send the unit prepaid to the Factory Service Center listed below.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the factory service center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to:
Consumer Repair Department
KIDdesigns Inc. 1330 Goodyear Drive
El Paso, TX 79936-6420

BARBIE is a trademark owned by
and used under license from
Mattel, Inc. © 2006 Mattel, Inc. All Rights Reserved.
Manufactured and Distributed by KIDdesigns, Inc.
Rahway, NJ 07065-5024

Barbie™

Model BE-139
"Love 'N' Care"
Surprise Pets Playset



3+

Important Message to Consumers

Thank you for purchasing one of the Barbie® brand's many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you understand the safe and proper way to use this product, and to help give it the long-lasting life that Barbie® branded products are designed for.

Keep these instructions for future reference as they contain important information.

Installing the Batteries

ATTENTION: Batteries should only be installed by an adult.

The unit comes with 4 "AA" (R6) batteries already installed. These batteries should be replaced with fresh batteries. To replace the batteries, follow these instructions:

1. The battery compartment is located on the bottom of the toy. Use a Phillips screwdriver to open the battery compartment door.
2. Install 4 "AA" (R6) size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
3. Close the battery compartment door and tighten the battery door screw.

For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries are only to be recharged under adult supervision (if removable)
- Rechargeable batteries are to be removed from the toy before being charged. (if removable)
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item is not going to be needed for an extended period of time (approximately 30 days or more) to prevent leakage or damage to the unit.

 
 
 
FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

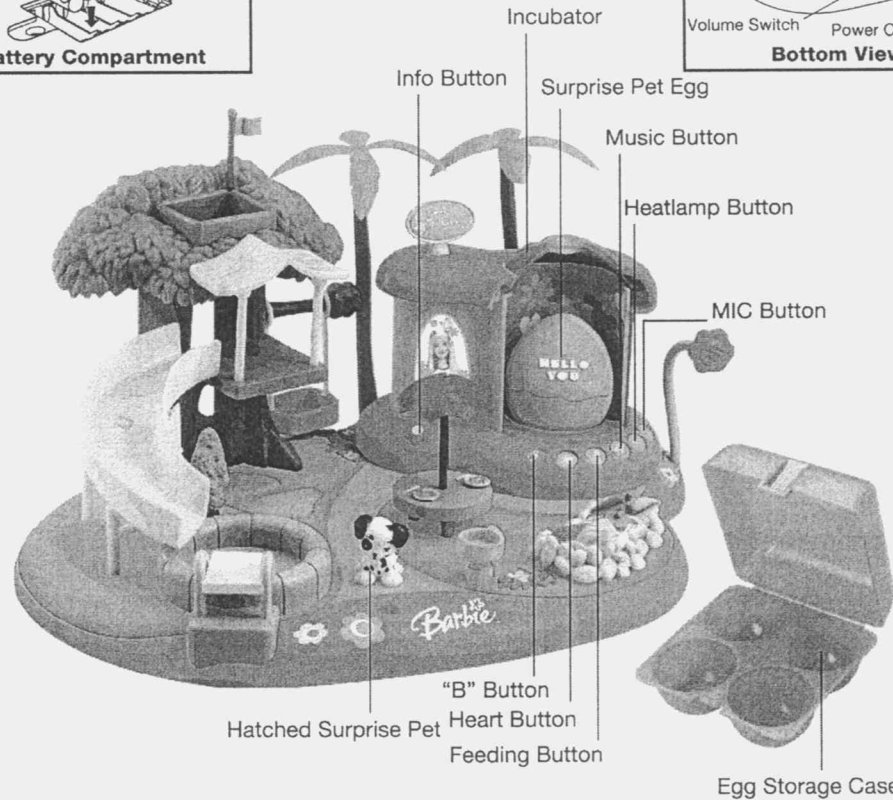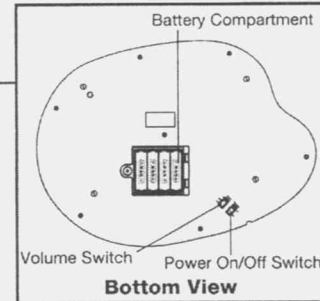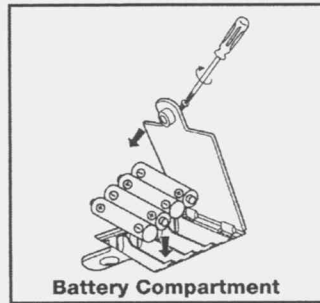

Playset Assembly

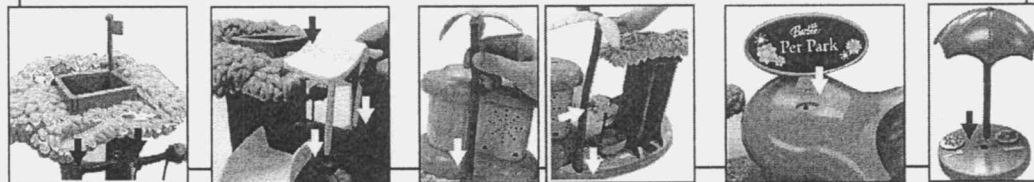 

Playset Assembly

Your Surprise Pet Playset comes complete with everything you need to start having fun fast, but first you need to assemble a few items.

- 1 **Tree House Top:** Place the three pegs of the green treehouse top piece into the matching holes at the top of the treehouse elevator.
- 2 **Treehouse Roof Supports** Insert the two roof supports by placing the notched ends into the holes on the platform and the other ends into the holes on the Treehouse roof.
- 3 **Trees** Place the tree with the post and the slot in its base in the hole on the play park base next to the swing, fitting the post into the end of the tree limb holding the swing. Place the other tree in the base behind the incubator.
- 4 **Play Park Sign** Place the play park sign in the slot on top of Barbie's information booth.
- 5 **Flag** Place the flag in the hole on the back corner of the treehouse top.

Adjusting the Volume

Use the **Volume Switch** located on the bottom the unit for Hi, Mid or Low volume setting.

Playing with the Barbie Playset

The Barbie "Love 'N' Care" Surprise Pets Playset is a fun toy that lets you hatch Surprise Pets, take care of them and play with them. Your set comes with one Surprise Pet. You can collect others wherever toys are sold and store them in the egg storage case that comes with your set.

Turning the Playset On/Off - Make sure batteries are installed. To turn on the unit, switch the **Power On/Off Switch** on the bottom of the unit to ON. To switch it off, set the switch to OFF. To save batteries, the Barbie Playset will automatically enter sleep mode if there is no input for about 10 minutes. Once in sleep mode, you must press the **Info Button** or turn on the unit again to wake it up.

Info Button - When you press the Info Button, Barbie will give you important information about hatching and playing with your pets.



Barbie™

Barbie™

Collect Them All!

Which Pet Will You Hatch?

"Love 'N' Care"
 Surprise Pets

Who will hatch next? A puppy? A kitten? It's a surprise! Barbie® teaches you how to hatch your pet in the "Love 'N' Care" Surprise Pets Playset (sold separately). You'll have hours of fun, playing with your new friend and giving it lots of love!



Barbie.com™

*Barbie™ Love 'N' Care Surprise Pets Playset Required to Hatch Egg



3+ BE-040

Barbie™



Contains small parts.

Toying with great ideas™

Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5024
 KIDdesigns, Inc., P.O. Box 2008 Warrington CV9 9WH England.
 Manufactured in China.

CONSUMER INFORMATION

KIDdesigns Inc.
 1299 Main Street
 Rahway, NJ 07065-5024
 1-888-TOP-TOYS
 www.toptoysonline.com

PRODUCT: Love 'N' Care Surprise Pets
 WARRANTY: One-Year limited warranty. Details inside. Valid only in U.S.A.
 AGE GRADE: Ages 3 and over
 REQUIRES: Barbie™ Surprise Pets Playset Hatches Egg.
 CONTENTS: One egg with surprise pet inside.
 Product specifications and colors may vary from photo. Packaging should be kept as it contains important information.



0 92298 90776 5

BARBIE and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. © 2006 Mattel, Inc. All Rights Reserved.

Patent Pending

BE-040 FCC statement

color: Black

June 26, 2006

size: 148W x 60H

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.