

 
## Unpacking and Setup

1. Remove the product and all packing materials from the carton.
2. Save packing materials in case the unit needs to be returned for service. If you do dispose of the packing materials, please do so properly.
3. Remove any feature labels, fact tags, or clear protective films from the front or top of the unit, if applicable. Do not remove any warning labels from the back or bottom of the unit.
4. Place the unit on a level surface, away from direct sunlight and sources of excess dust, dirt, heat, water, moisture, vibrations, and strong magnetic fields.
5. Protect your furniture when placing the unit on natural wood or wood with a lacquered or coated finish. A cloth or other protective material should be placed between the unit and the furniture.

**This unit operates on either AC or battery power. When AC cord is plugged in, battery power will not be used. During battery-powered use, detach AC cord from back of Boombox.**

**Note: Power source installation should always be performed by an adult.**

## Battery Installation

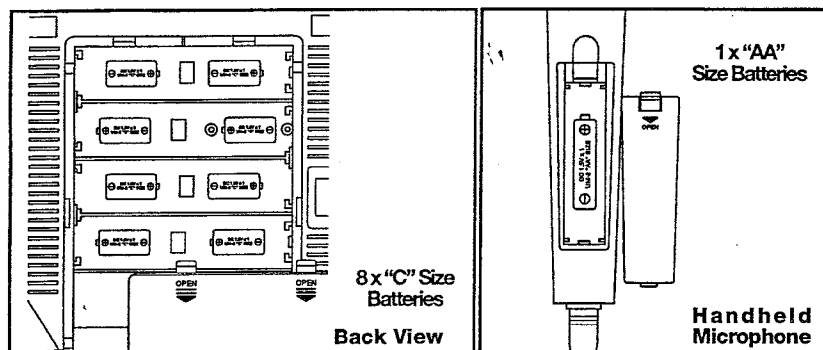


### For the Best Possible Battery Performance:

- We recommend the use of alkaline batteries for longer life.
- Different types of batteries or new and used batteries are not to be mixed.
- Only use batteries of the same or equivalent type as recommended.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the clock before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item is not going to be needed for an extended period of time to prevent battery leakage or damage.

## Power Cord Installation

 
- 1 Connect the AC cord into the AC Jack, then plug the AC cord into outlet.
- 2 To prevent shock, match wide blade of plug to wide slot. Fully insert.

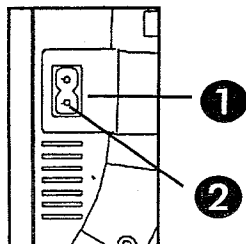

# Barbie™

Model BE-479
 
## CDG Karaoke Tape Recorder with Wireless Microphones

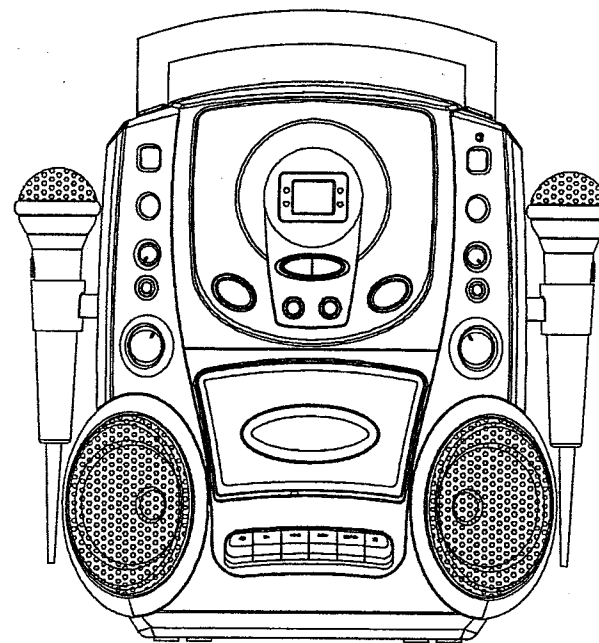

### Important Message to Consumers

Thank you for purchasing one of the Barbie™ brand's many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions, which will help you understand and explain the safe and proper way to use this toy, and to help give it the long-lasting life for which Barbie™ branded products are designed. Please keep this booklet for future reference as it contains important information.

**WARNING: Wireless devices such as remote control toys, cordless phones, and baby monitors may cause interference with the wireless microphones used on this unit. Should such interference occur, either turn off the interfering devices or set this unit up in a location where such interference does not occur.**

---

## Consumer Safety Guide

---

### IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be set up or used near water. For example: near a bathtub, washbowl, sink, laundry tub, swimming pool, or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** – This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of your polarized plug by forcing the plug into the outlet.
6. **Power Cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** – The unit should be cleaned only as recommended by the manufacturer. See the Maintenance section of this manual for cleaning instructions.
8. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
9. **Attachments** – Do not use attachments not recommended by the manufacturer.
10. **Lightning and Power Surge Protection** – Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
11. **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
12. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cord or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. unit exhibits a marked change in performance or does not operate normally.
13. **Antenna** – Do not connect an external antenna to the unit.
14. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged to prevent damage or corrosion.
15. **Servicing** – User should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

---

## 90-Day Limited Warranty

---

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$10.00 (\$30.00 if after warranty period).
4. Send the unit prepaid to the Factory Service Center listed below.

Consumer Repair Department  
**KIDdesigns Inc.**  
1401 Pullman Drive, Suite A  
El Paso, Texas 79936

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes or compact discs (if applicable); (iv) the cost of shipping this product to the factory service center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

*BARBIE is a trademark owned by and used under license from Mattel, Inc. © 2003 Mattel, Inc. All Rights Reserved.*

*Manufactured and Distributed by KIDdesigns, Inc., Rahway, NJ 07065*

Printed in China

BE479-053003-0

---

## Questions or Comments

---

For product registration, special offers, and information about this and other KIDdesigns products, please visit our website:

**[www.toptoysonline.com](http://www.toptoysonline.com)**



**CAUTION**  
**RISK OF ELECTRIC SHOCK.**  
**DO NOT OPEN.**



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK OF UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**



*The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.*



*The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.*

The symbols above are located at the bottom of the cabinet.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot. Fully insert.

**ATTENTION:** Pour éviter les choc électriques. Introduire la lame la plus large de la fiche dans la borne correspondante de la prises et pousser jusqu'au fond.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

Modifying or tampering with your system's internal components can cause a malfunction and might invalidate the system's warranty and void your FCC authorization to operate it. If your system is not performing as it should, call 1-800-TOP-TOYS for assistance.

## Laser Safety

This unit employs a laser. Only a qualified person should remove the cover or attempt to service this device, because of possible eye injury.

**CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**DANGER:** INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED, AVOID DIRECT EXPOSURE TO BEAM.

 
**CAUTION:** HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

## Unpacking and

1. Remove the product and all packing materials, please do so properly.
2. Save packing materials in case the unit is damaged, please do so properly.
3. Remove any feature labels, fact tags, etc. Do not remove any warning labels from the unit. Place the unit on a level surface, away from moisture, vibrations, and strong magnetic fields.
4. Place the unit on a level surface, away from moisture, vibrations, and strong magnetic fields.
5. Protect your furniture when placing the unit. Use a cloth or other protective material to prevent scratches.

**This unit operates on either AC or battery power. Do not use. During battery-power operation, the unit must be used on a battery pack.**  
**Note:** Power source installation should be done by a qualified technician.

## Battery Installation

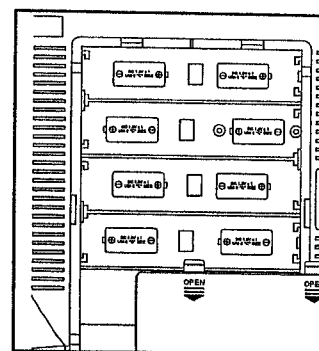

### For the Best Possible Battery Performance

- We recommend the use of alkaline batteries.
- Different types of batteries or new and old batteries should not be mixed.
- Only use batteries of the same or equal capacity.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the compartment.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the compartment when fully charged.
- The supply terminals are not to be shorted.
- Batteries should be removed if the unit is not used for a long period to prevent battery leakage or damage.

## Power Cord Installation

1. Connect the AC cord into the AC Jack, then plug the AC cord into outlet.
2. To prevent shock, match wide blade of plug to wide slot. Fully insert.

*Fee.  
Please confirm the wordmap.*

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

Modifying or tampering with your system's internal components can cause a malfunction and might invalidate the system's warranty and void your FCC authorization to operate it. If your system is not performing as it should, call 1-800-TOP-TOYS for assistance.

## Laser Safety

This unit employs a laser. Only a qualified person should remove the cover or attempt to service this device, because of possible eye injury.

**CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**DANGER:** INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED, AVOID DIRECT EXPOSURE TO BEAM.

**CAUTION:** HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

## For the Best Possible Battery Perform

- We recommend the use of alkaline batteries.
- Different types of batteries or new and old batteries should not be mixed.
- Only use batteries of the same or equivalent type.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the unit when fully charged.
- The supply terminals are not to be shorted.
- Batteries should be removed if they leak to prevent battery leakage or damage.

## Power Cord Ins

- 1 Connect the AC cord into the AC Jack, then plug the AC cord into outlet.
- 2 To prevent shock, match wide blade of plug to wide slot. Fully insert.

## Maintenance

- It is important to keep the CDG Karaoke Tape Recorder as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.
- Do not allow particles or liquids to enter the casing. Be especially careful when the CD door is open. Never touch the optical lens, or look at it when it is in use. Periodically use a commercially available CD lens cleaner.
- If cassette sound "drops out" (works intermittently) or excessive noise occurs, clean the tape player heads with a cotton swab moistened with isopropyl alcohol, or use a commercially available tape head cleaner.

## Troubleshooting Guide

Problem	Probable Cause	Remedy
Unit does not play or record properly during battery use	Batteries are weak or exhausted	Replace batteries with eight new "C" batteries
	Incorrect battery placement	Remove batteries and install as shown in battery compartment
	AC cord still plugged into back of unit	Detach AC cord from back of unit when not in use for AC power
Unit does not play or record properly during AC power use	Disconnected from outlet	Check all connections
	Outlet has no power or is switched off	Do not use on an outlet controlled by wall switch
CD sound breaks up, skips, or does not play	Batteries are weak	Replace batteries
	Dirty lens	Clean with a commercial lens cleaner
	Dirty CD	Clean with an available commercial CD cleaner
	Badly scratched CD	CD needs to be replaced
Tape Play/Record buttons do not work	Tape improperly loaded	Check if tape is loaded and door completely shut
Unit is on but there is low or no volume	Main volume turned down	Use thumbwheel to raise volume
	Optional headphones connected to jacks	Disconnect headphones
Shrilling noise	Mic too close to speakers	Hold mic from speakers
	Mic/music volume too loud	Lower volume or adjust mic/music mix level

## Consumer Safety

 
### IMPORTANT SAFETY

When used in the directed manner, this unit is safe. However, improper use may result in personal safety. Please read all safety and operating instructions carefully and keep them handy for future reference.

1. **Water and Moisture** – The unit should not be used in a bathtub, washbowl, sink, laundry room, or other areas where water is present.
2. **Ventilation** – The unit should be used in a well-ventilated area. Do not block ventilation openings as a bookcase or cabinet, that may restrict airflow.
3. **Heat** – The unit should be situated away from stoves or other appliances (including space heaters) that produce heat.
4. **Power Sources** – The unit should be used in a well-ventilated area. Do not use in a room with a power outlet that is controlled by a wall switch.
5. **Grounding or Polarization** – The unit should be plugged into a three-pronged line plug (a plug having one blade wider than the other two) into a power outlet only one way. If the plug still fails to fit, you should not defeat the safety purpose of your power cord.
6. **Power Cord Protection** – Power cord should not be walked on or pinched by its own weight. Keep clear area from where the cord exits the unit.
7. **Cleaning** – The unit should be cleaned with a soft cloth. See the Maintenance section of this manual for more information.
8. **Objects and Liquid Entry** – Care should be taken to prevent objects from falling into or liquids from being spilled into any openings or vents.
9. **Attachments** – Do not use attachments that are not recommended by the manufacturer.
10. **Lightning and Power Surge Protection** – The antenna or cable system should not be used for long periods of time. This will protect the unit from line surges.
11. **Overloading** – Do not overload wall outlets. This can result in a risk of fire or electrical shock.
12. **Damage Requiring Service** – When:
  - A. the power supply cord or plug is damaged
  - B. objects have fallen into or liquid has been spilled into the unit
  - C. the unit has been exposed to rain or moisture
  - D. the unit has been dropped or tilted
  - E. the unit exhibits a marked change in performance
13. **Antenna** – Do not connect an external antenna to the unit.
14. **Periods of Nonuse** – If the unit is not used for a month or longer, the power cord should be disconnected from the unit.
15. **Servicing** – User should not attempt to service the unit. Servicing should be referred to qualified service personnel.

## Connecting the Unit to a Television

This unit comes with a CDG disc that plays Karaoke songs with lyrics on any TV. Follow the below instructions to connect the unit to a TV.

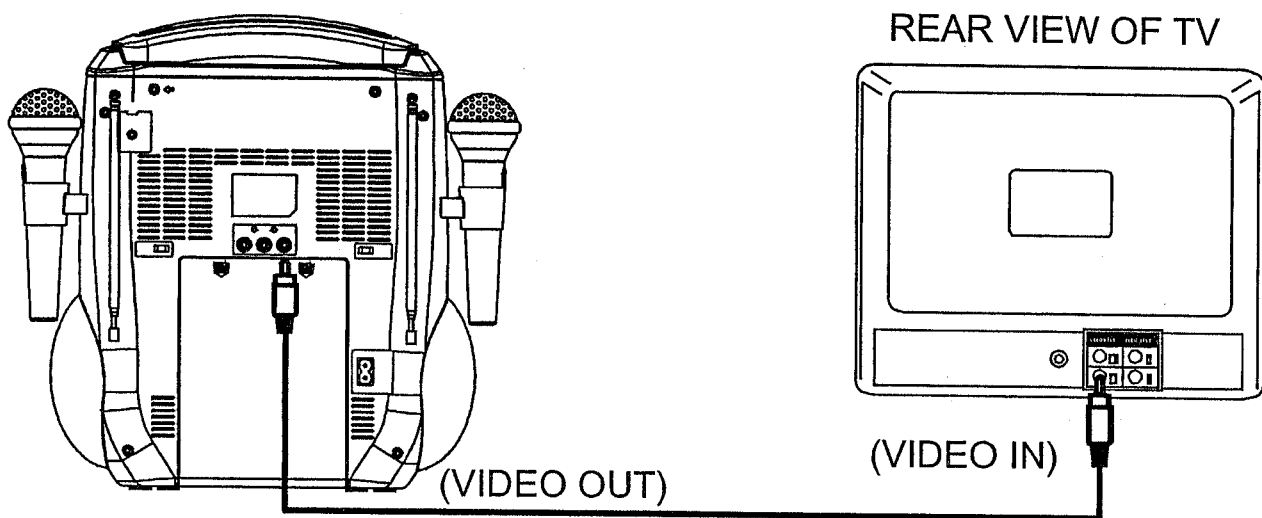

### **ATTENTION! Connection to a TV should only be performed by an adult.**

 
- Before connecting the unit to a TV, be sure that both have been unplugged.
- Besides these instructions, please also refer to the TV's instruction manual regarding any instructions specific to that model.
- When properly connected, the TV will both broadcast audio and display video features contained on any CDG disc.
- If the TV features only one audio input, a "Y" connector (not included) may be needed for connection.
- If the TV does not feature a "Video In" jack, an RF Modulator (not included) may be used.
- The TV's audio modes may need to be adjusted for best broadcast.

**ATTENTION! Connection to a TV should only be performed by an adult.**

- Before connecting the unit to a TV, be sure that both have been unplugged.
- Besides these instructions, please also refer to the TV's instruction manual regarding any instructions specific to that model.
- When properly connected, the TV will both broadcast audio and display video features contained on any CDG disc.
- If the TV features only one audio input, a "Y" connector (not included) may be needed for connection.
- If the TV does not feature a "Video In" jack, an RF Modulator (not included) may be used.
- The TV's audio modes may need to be adjusted for best broadcast.

## **Connecting the Unit to a TV and Stereo**

Connecting the unit to a stereo and TV will allow the audio to be broadcast through the stereo while displaying CDG features on the TV screen.

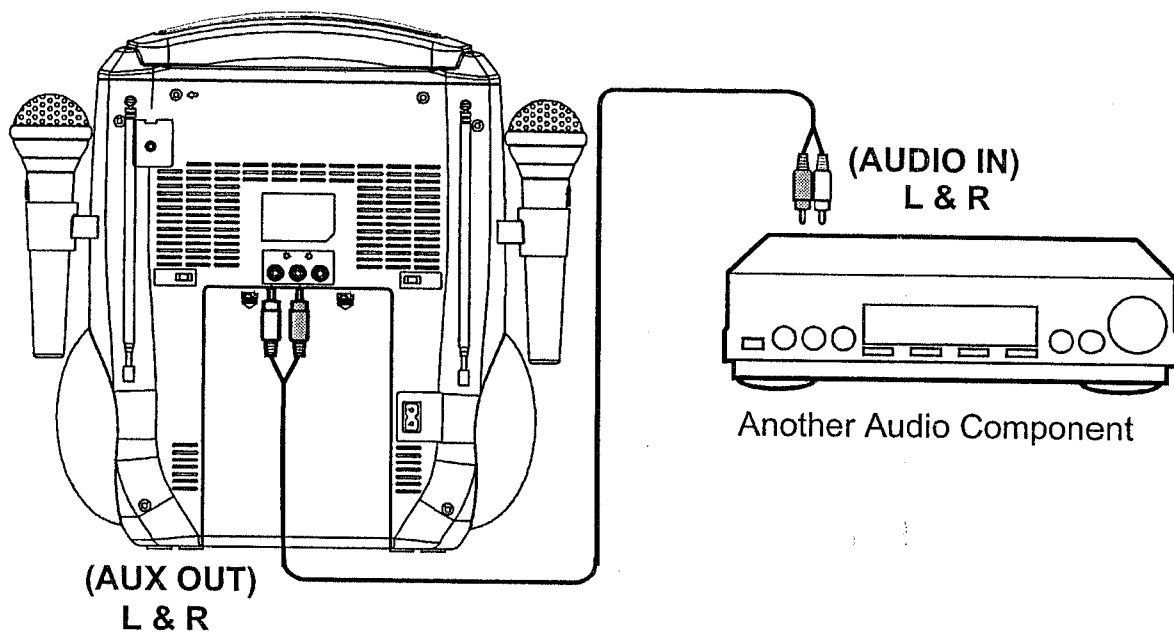

**ATTENTION! Connection to a TV/Stereo should only be performed by an adult.**

- Before connecting to a TV and stereo, be sure that all have been unplugged.
- Besides these instructions, please also refer to the instruction manuals of the TV and stereo regarding any instructions specific to those models.
- When properly connected, the unit's sound will be broadcast through the stereo while the TV screen will display the CDG disc's video features.
- If the TV features only one audio input, a "Y" connector (not included) may be needed for connection.
- If the TV does not feature a "Video In" jack, an RF Modulator (not included) may be used.
- The stereo's audio modes may need to be adjusted for best broadcast.

# Playing Compact Discs and Cassettes

**CD Door Button**  
Press to open door and insert/remove CD. Press again to close.

**Echo Button**  
Press and lock for echo sound effects.

**CD Reverse Button**  
Press to go to previous track. While CD is playing, press and hold for high-speed scan. (High-speed scan will not work for CDG discs.)

**CD Stop Button**  
Press to turn off CD.

**Repeat One/All Functions**  
While CD plays, press **Repeat Button**:

- Once to activate Repeat One Song (Repeat LED on display will blink).
- Again to activate Repeat Entire CD (Repeat LED will stay lit).
- Again to turn off all Repeat functions (Repeat LED will shut off).

**Random Button**  
To play CD tracks in random order, start playing CD by pressing the Random Button. Random LED will light

**Tape Record Button**  
When CD Power is on, insert CD and blank tape to record CD onto tape. Press button to start CD play from Track 1 and recording. See next page for mic recording info.

**Tape Play Button**  
Press to play prerecorded tapes.

**LCD Display with LED Indicators**

- Two-digit CD track listing.
- LED Indicators outside display: CDG; Random; Repeat; Play.

**Power LED**  
Lights when power is on.

**CD/Tape Power Button**  
Press and lock to turn CD player power on. Release to turn power off, and to use tape player.

**Bass Boost Button**  
Press and lock in for added bass sound for CD's and tapes.

**CD Forward Button**  
Press to advance to next track. While CD is playing, press and hold for high-speed scan. (High-speed scan will not work for CDG discs.)

**CD Play/Pause Button**  
Press to:

 
- Start playing CD
- Pause CD while playing
- Restart CD while paused

**Volume Thumbwheel**  
Rotate to raise or lower volume.

**Tape Pause Button**  
Press to pause tape playing. Press again to resume playing.


**Tape Stop/Eject Button**  
Press to stop tape playing. Press to open compartment.

**Tape Rewind/Fast Forward Buttons**  
Press buttons to rewind or fast-forward tapes. Press the Stop Button when fully rewound/advanced.

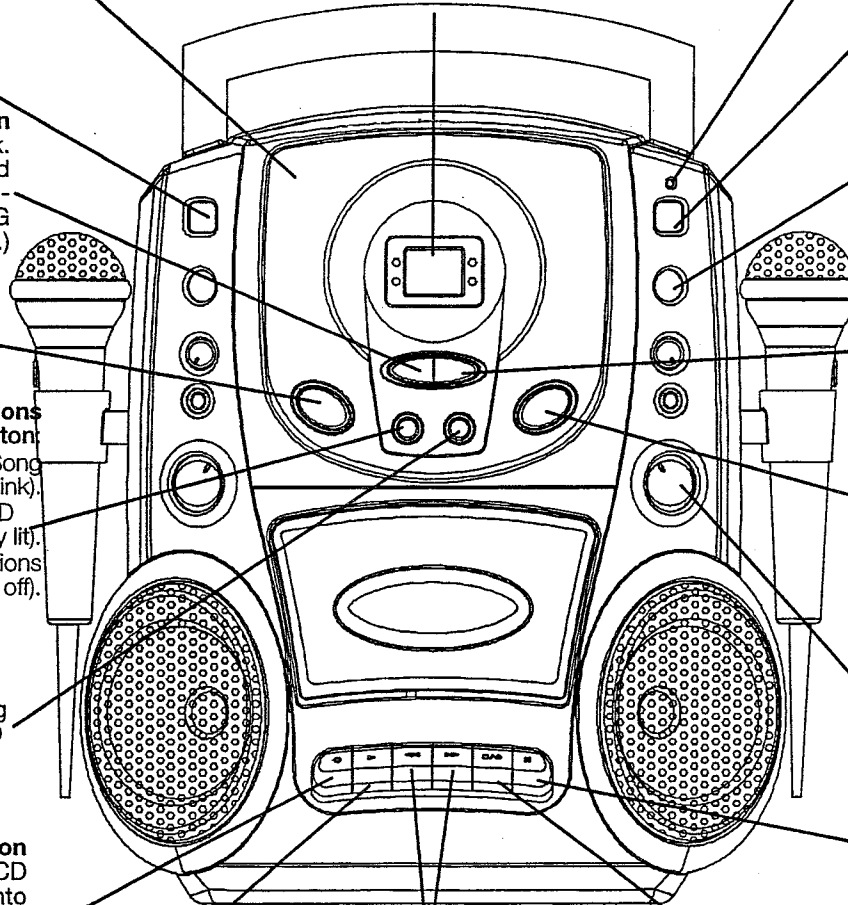

on  
ics

 
OF TV

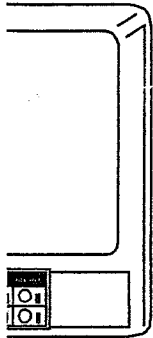

an adult.  
plugged.  
a manual  
display  
ted) may  
ncluded)  
odcast.

ereo

 broadcast  
V screen.

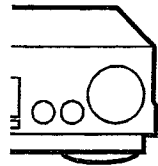

ponent

by an adult.  
unplugged.  
manuals of  
se models.  
through the  
o features.  
luded) may  
it included)  
broadcast.

# Using the Karaoke and Microphone Functions

**Microphone Antennas**  
(Located on back of unit.)  
Extend antennas fully for best reception and broadcast.

**Microphone 1 Level**  
Rotate thumbwheel to adjust volume reception level for Microphone 1.

**Microphone Jack**  
An optional, corded microphone may be plugged into Mic Jack.

**Microphone 1**  
Slide On/Off Switch to "On" to use. Slide to "Off" when finished.

For best results, do not hold mic too close to mouth or speaker.

Note: Both "Mic 1" and "Mic 2" are labeled above On/Off switch.

**Music/Vocal Balance**  
Rotate thumbwheel to adjust music and vocal output levels when playing Karaoke CD's.

## Sing-Along Karaoke and PA

- Play a CD or cassette as instructed.
- For "Public Address" mic use, turn on CD Power but do not load/play CD.
- Slide Mic Switch to "On" and sing or speak into mic.
- Rotate Mic Level and Music/Vocal Balance thumbwheels for best results.

**Playing Karaoke CD's and CDG Discs**  
To play Karaoke CD's, follow the instructions in the Playing Compact Discs section. See the Connecting Unit to a TV/Stereo section for instructions on connecting this unit to a TV for CDG features.

**CD/Tape Power Button**  
Press and lock to turn CD player power on. Release to turn power off, and to use tape player.


**Microphone 2 Level**  
Rotate thumbwheel to adjust volume reception level for Microphone 2.

**Microphone 2**  
Slide On/Off Switch to "On" to use. Slide to "Off" when finished.

For best results, do not hold mic too close to mouth or speaker.

**Microphone Jack**  
An optional, corded microphone may be plugged into Mic Jack.

 **Volume Thumbwheel**  
Rotate to raise or lower volume.

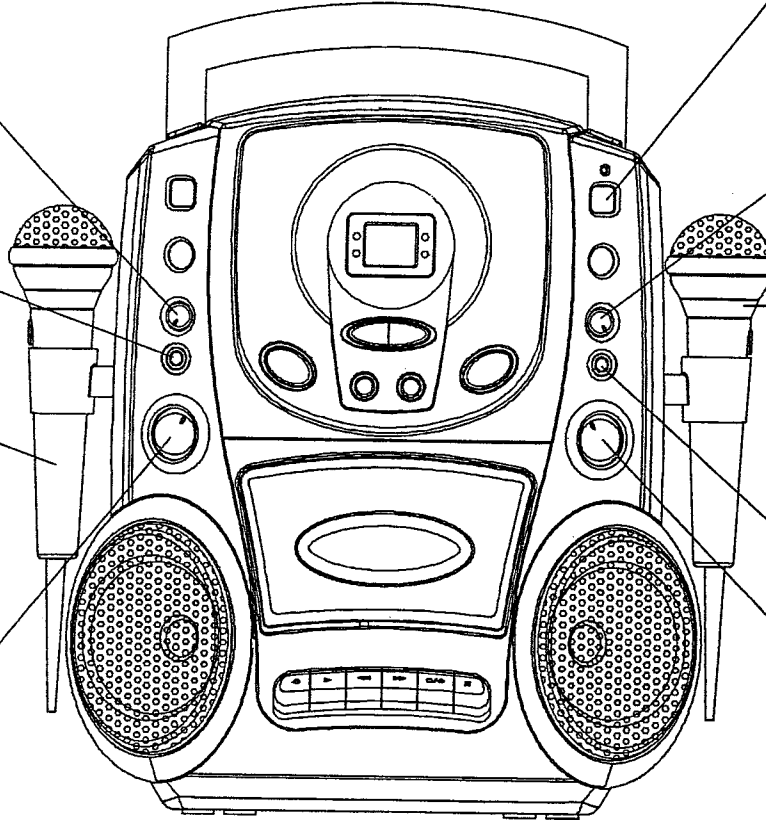

## Recording from Handheld Mic

- Set Power Button to unlocked position.
- Insert the blank tape included in the package (or any blank tape) into player.
- Press Tape Record Button (Tape Play will also engage) to begin recording.
- Slide Mic Switch to "On" and sing or speak into the microphone.
- Press the Tape Stop/Eject Button to stop taping. Press and release the Power Button to turn off unit power.

## Recording from CD and Mic

- Press and lock the Power Button.
- Insert a CD into CD player and a blank tape into cassette player.
- Press Tape Record Button (Tape Play will also engage) to begin recording.
- Slide Mic Switch to "On" and sing along with the music.
- Press the Tape Stop/Eject Button to stop taping. Press and release the Power Button to turn off unit power.