

Instruction Manual of Model 0091 - Binocular Walkie Talkie with Megaphone

A) Battery Installation

Open the battery door with "+" screwdriver, insert 1 pc 9V (6F22) or equivalent battery and close the door.

B) Operation for Walkie Talkie

- 1) Pull out the microphone (#9) at the bottom.
- 2) Select Walkie Talkie mode (#3).
- 3) Turn the HI/LO/OFF switch (#2) for adjusting the sound level.
- 4) Press PTT button (#5) from transmitting, speaking clearly in a normal voice.
- 5) Release PTT button (#5) for receiving.
- 6) While pushing PTT (#5) & CALL (#6) buttons together momentarily for transmitting secret code.

C) Operation for Megaphone

- 1) Select Broadcast mode (#3).
- 2) Pull out the microphone (#9) at the bottom.
- 3) Turn the HI/LO/OFF switch (#2) for adjusting the sound level.
- 4) To transmit a message, speaks clearly towards the microphone (#9).



D) Operation of Binocular

- 1) Point to the object and look through from eye piece (#8).
- 2) Turn the Dial (#11) at the bottom for focusing.

CAUTION

- 1) YOUR BINOCULAR WALKIE TALKIE HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY.
- 2) WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERY.
- 3) AFTER USE, ALWAYS RETURN HI/LO/OFF BUTTON TO OFF POSITION.
- 4) KEEP YOUR SET IN A DRY AND CLEAN PLACE.

NOTE : THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY.

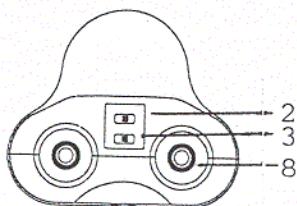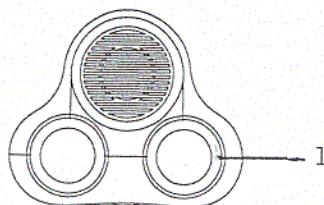

- (1) Binocular
- (2) HI/LO/OFF switch
- (3) WT/Broadcast switch
- (4) Speaker
- (5) PTT button
- (6) CALL button
- (7) Antenna
- (8) Eyepiece
- (9) Microphone
- (10) Battery Door
- (11) Dial for focusing
- (12) Necklace

FIG. 2

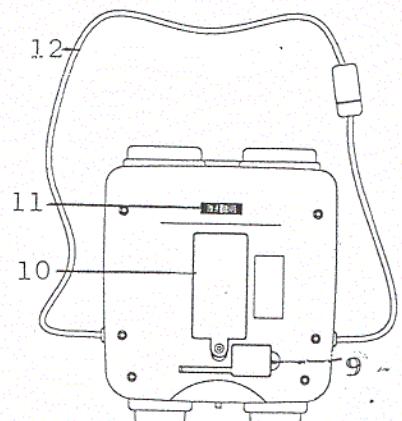


FIG. 4

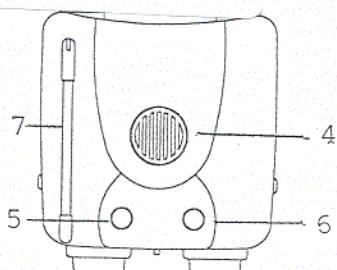


FIG. 3

LOYAL TECHNOLOGY CO., LTD.
FCC ID: ICK-0091
JOB #: 329BH0
EXHIBIT #: 10