

A)

Battery Installation

Open the battery door with "+" screwdriver, insert 1 pc 9V (6F22) or equivalent battery and close the door.

B)

Operation for Walkie Talkie

- 1) Pull out the microphone (#10) at the bottom.
- 2) Select Walkie Talkie mode (#4).
- 3) Turn the HI/LO/OFF switch (#3) for adjusting the sound level.
- 4) Press PTT button (#6) for transmitting, speaking clearly in a normal voice.
- 5) Release PTT button (#6) for receiving.
- 6) While pushing PTT (#6) & CALL (#7) buttons together momentarily for transmitting secret code.

C)

Operation for Listening Device

- 1) Select Listening Device mode (#4).
- 2) Plug in the headphone plug.
- 3) Turn the HI/LO/OFF switch (#3) for adjusting the sound level.
- 4) Point the receiving dish (#1) in the direction of the sound to be heard, you are now in listening.

D)

Operation of Binocular

- 1) Point to the object and look through from eye piece (#9).
- 2) Turn the Dial (#12) at the bottom for focusing.

CAUTION

- 1) YOUR BINOCULAR WALKIE TALKIE HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY.
- 2) WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERY.
- 3) AFTER USE, ALWAYS RETURN HI/LO/OFF BUTTON TO OFF POSITION.
- 4) KEEP YOUR SET IN A DRY AND CLEAN PLACE.

NOTE : THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY.

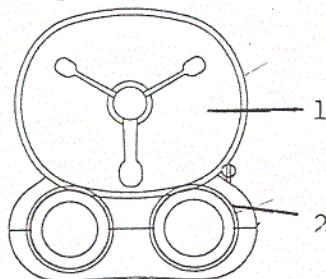


FIG. 1

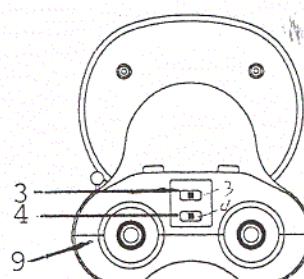


FIG. 2

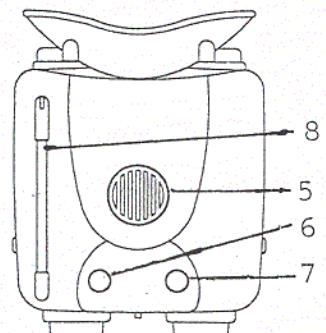


FIG. 3

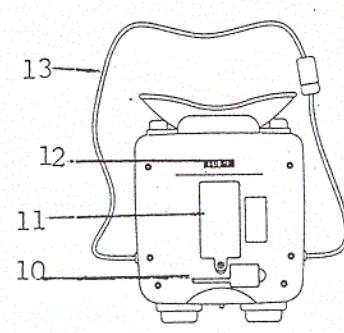


FIG. 4

- (1) Receiving Dish
- (2) Binocular
- (3) HI/LO/OFF switch
- (4) WT/Listen switch
- (5) Speaker
- (6) PTT button
- (7) CALL button
- (8) Antenna
- (9) Eyepiece
- (10) Microphone
- (11) Battery Door
- (12) Dial for focusing
- (13) Necklace