


LOYAL TECHNOLOGY COMPANY LIMITED
MODEL NO. VD-137 - INSTRUCTION MENU



ENGLISH

1. ADJUSTABLE HEADBAND
2. MICROPHONE
3. HEADPHONE
4. FLEXIBLE ANTENNA
5. OFF/LO/Hi VOLUME SELECTOR
6. BATTERY COMPARTMENT

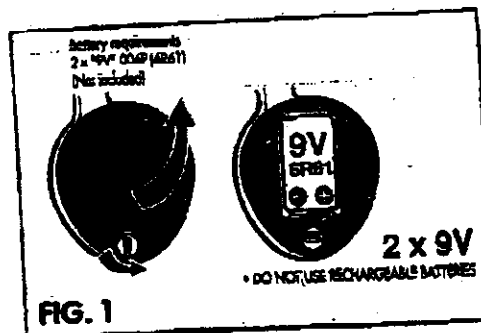

ENGLISH

INTRODUCTION
SUPER HEADSET TWO WAVE COMMUNICATION SYSTEM IS JUST LIKE A CORDLESS TELEPHONE. IT ENABLES BOTH PARTIES TO TALK AT THE SAME TIME. ITS HEADSET STYLE ALLOWS YOUR HANDS TO BE FREE FOR OTHER ACTIVITIES.

1. SLIDE OPEN BATTERY DOOR AND INSERT 2 X 9V BATTERIES AS INDICATED. FIG. 1
2. SELECT LOW OR HIGH VOLUME BY USING THE SELECTOR SWITCH SITUATED AT THE SIDE OF YOUR COMMUNICATION SYSTEM. YOUR COMMUNICATION SYSTEM IS NOW READY TO OPERATE.
3. WHEN TRANSMITTING, SPEAK CLEARLY IN A NORMAL VOICE.
4. ADJUST HEADSET COMFORTABLY ON YOUR HEAD. SEE FIG. 2 FOR EXAMPLE.
5. IN THE EVENT OF INTERFERENCE CAUSED BY OTHER RADIO SIGNALS IN THE VICINITY, MOVE TO A DIFFERENT LOCATION.
6. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERIES.
7. AFTER USE, ALWAYS TURN THE SELECTOR SWITCH TO OFF POSITION.

WARNING:

- YOUR COMMUNICATION SYSTEM HAS BEEN FULLY ADJUSTED PRIOR TO SHIPPING FROM THE FACTORY. BE SURE NOT TO TOUCH INTERNAL COMPONENTS OTHER THAN REPLACING BATTERIES.
- THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ATTENTION! HOW TO USE BATTERIES

- PLEASE RESPECT THE CORRECT SIZES AND --
- DO NOT TRY TO RECHARGE BATTERIES, NOR TO OPEN THEM.
- DO NOT THROW THEM INTO THE FIRE.
- DO NOT MIX OLD AND NEW BATTERIES.
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
- USE ONLY THE BATTERY TYPES AS RECOMMENDED.
- REPLACE ALL BATTERIES AT THE SAME TIME OF SAME TYPE/BRAND.
- DO NOT SHORT-CIRCUIT THE BATTERY CONTACTS.
- REMOVE EXHAUSTED BATTERIES FROM THE KIT.