

Instruction Manual




WARNING:

CHOKING HAZARD – small parts

Not for children under 3 years.

Functions and Controls

1. Safe, Flexible Antenna
2. Game / Off / WT Switch
3. Push-to-talk Button
4. Speaker / Microphone
5. Rotate Key ↗ ↘
6. LCD Display
7. Direction Key Up ↑ & Down ↓
8. Direction Key Left ← & Right →
9. Melody Volume Control Key (On / Off)
10. Phase Key
11. Reset Switch
12. Belt Clip
13. Battery Door Screw
14. Battery Door

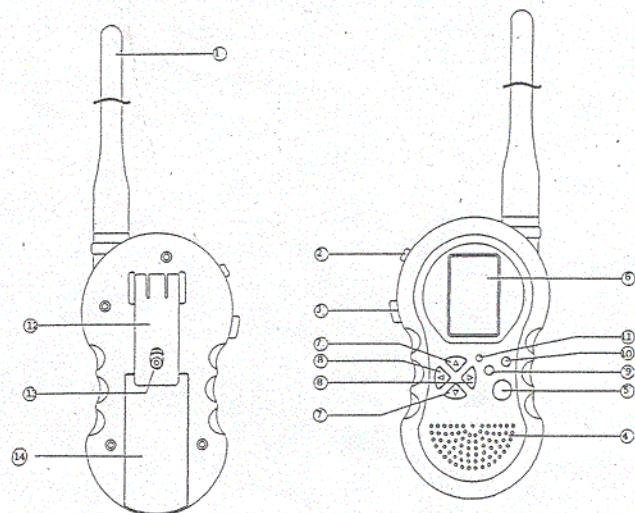

Battery Installation

This Game Walkie Talkie Set is operated using with two standard DC 9v (Eveready #522 or equivalent) size batteries (one battery for each handset).

1. Open the battery door with '+' screwdriver. Follow the polarity diagram inside the battery compartment; connect one 6 F22 9V battery. Close the battery door.
2. If the unit is not to be used for an extended period of time, remove the batteries. Old and leaking batteries can cause damage to the unit and may void the warranty.

Operation of Walkie Talkie

1. Switch the unit 'On' by sliding the Game / Off / WT Switch and move to the 'WT' position to activate your unit.
2. This handset is equipped with a Paging Code Button. Press the Paging Code Button & Push-to-talk Switch at the same time to transmit a paging message, Follow the Morse Code for your personal message.
3. To transmit a message, Push Push-to-talk Switch & talk clearly to the Speaker / Microphone towards your mouth about 6 – 7cm far.
4. To receive a message, release the Push-to-talk Switch & put the speaker towards your ear about 10 cm far.
5. To switch off the unit, slide Game / Off / WT Switch and move to the 'Off' position.

Convert to Game Station

1. Switch the unit 'On' by sliding the Game / Off / WT Switch and move to the 'Game' position to activate game.
2. Hold the unit-face up towards your eyes about 10–12 cm far. Keep your thumbs upwards.
3. Press any keys of game keyboard, Then your unit is ready to play.
4. If you stop to play the game more than 3 minutes, the unit will be automatically switch to sleep mode.
5. To restart on the game, Push Game / Off / WT Switch to 'Off' position. Wait 1 minute and Push Game / Off / WT Switch to 'On' position. If not, Use pointer to push the Reset Switch.

Operation of Game Station: This instruction is for reference. It may vary from the chip 'IC' version

1. Game Selection: - Press Rotate Key to select the games from A, B ~ I.
- Press Direction Key Up  & Down  to select the games stages from (A~E) 2 stages, (F~G) 26 stages, (H~I) 28 stages. There are total 118 combination.
2. Game Speed: - Press Direction Key Right  to select speed from 1~15.
3. Game Level: - Press Direction Key left  to select level from 1~15 (for E~I only).
4. Game Melody: - Press Melody Volume Control Key (On / Off) to obtain desired sound level.

Care and Maintenance

1. Clean your unit with a damp (never wet) cloth, solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. When the sound of the unit becomes weak, it is the time to replace batteries.
5. After use, Always put the switch at 'Off' position to save the power.
6. If the unit is not to be use for an extended period of time, remove the batteries.

Warning

1. Do not try to replace any parts by opening the units.
2. Do not force the LCD Display. It may damage your units.
3. Do not try to reset your unit by taking off the battery. It may damage your units.
4. Do not try to use metal objects to short the battery connector, It may damage your units.

COMPLIANCE WITH FCC REGULATIONS

This equipment has been tested and found to comply with the limits for a Radio Transceiver, pursuant to Part 15 Subpart C of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful, interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorientate or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

NOTE: - THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS

TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY.

- SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

Loyal Technology Co., Ltd.

JOB #: 66AU1

FCCID: ICK-WT-268G

頁 1 - 2(B)

EXHIBIT : 3c