


Model No. WT-325

#### Functions and Controls

- 1) Ball Pen
- 2) Ball Pen Switch
- 3) Ball Pen Clip
- 4) Earphone Jack
- 5) Power On / Off Switch
- 6) Battery Door
- 7) Earphone
- 8) Microphone
- 9) Ear - Hanger

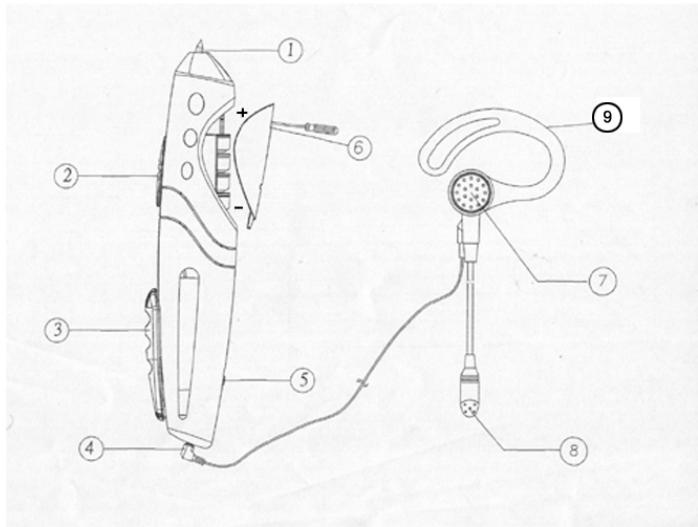

#### Battery Installation

This device is operated by using 4 pcs standard LR44 batteries (DC1.5V Button Cell).

- 1) Open the Battery Door (#6) with (+) screwdriver. Close the battery door after installation of battery.
- 2) If the device is not to be used for an extended period of time, remove the battery.
- 3) Old and leaking batteries can cause damage to the unit and may void the warranty.
- 4) Do not use rechargeable batteries.
- 5) Do not mix old and new batteries.
- 6) Only batteries of the same or equivalent type as recommended are to be used.
- 7) Non-rechargeable batteries are not to be recharged.
- 8) Rechargeable batteries are to be removed from the toy before being charge (if removable).
- 9) Rechargeable batteries are only to be charged under adult supervision (if removable).
- 10) Batteries are to be inserted with the correct polarity.
- 11) The supply terminals are not to be short - circuited.

#### Operations of your Pen type Walkie Talkies

- 1) Put the Earphone on your left ear with Ear-Hanger (#9).
- 2) Plug the Earphone Jack (#4).
- 3) Adjust the Microphone (#8) towards your mouth.
- 4) Turn on the Power Switch (#5) to "On" position.
- 5) For transmission of message, speak clearly with the Microphone(#8).
- 6) When one player transmits message, the receiver cannot talk simultaneously.

#### Operations of using Ball Pen

Simply push the Ball Pen Switch (#2).

#### Care and Maintenance

- 1) Clean your set with a damp (never wet) cloth, solvent or detergent should never be used.
- 2) Avoid leaving your set in direct sunlight or in hot, humid or dusty places.
- 3) When the sound of the set becomes weak, it is the time to replace the batteries.

#### NOTE :

- 1) THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THE EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY.
- 2) SPECIFICATIONS AND COLORS OF CONTENTS MAY VARY FROM PHOTO.
- 3) SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.
- 4) PACKAGING HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.