



Manufacturer of Custom Keyboard and Interface Panels

Restaurant Kitchen Keypad - User Instructions
FCC ID: IHU-M3740

Page 1 of 1

Battery Installation instructions:

The transmitter is powered from two AA batteries. The battery cover can be removed by sliding the plastic battery cover off of the plastic enclosure. An arrow molded into the battery cover shows the direction that the battery cover slides off the enclosure. Install the two AA batteries in series with the polarity shown on the label inside the enclosure. After installing the batteries, reinstall the battery cover.

Operation:

There is not an on/off switch for the transmitter. The transmitter is ready for use once the batteries are installed. When it is time to replace the batteries, the transmitter will beep whenever a key is pressed.

Please refer to the Kitchen Video System documentation for a description of how the system software uses the data from the transmitter unit.

Regulatory Statements

Compliance Statement (Part 15.19)

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning (Part 15.21)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TG3 Electronics

4615 70th Avenue/Kenosha/WI 53144 ◆ PH 262/652/2626 ◆ FX 262/652/2121 ◆ www.tg3electronics.com