

INSTRUCTIONS

TO OPERATE

1. Switch the ON/OFF VOLUME control ON by sliding upwards.
2. To transmit, press the 'PUSH TO TALK' button with the microphone about 4" from your mouth. Speak in a normal voice.
3. To receive, release the 'PUSH TO TALK' button.
4. After you have finished using the walkie talkie switch the ON/OFF volume control OFF by sliding the control downward.

CAUTION:

1. If your walkie talkie does not operate properly try a new set of batteries since your batteries may be defective or have low voltage even though they appear to be new.
2. After use always return the ON/OFF control switch to the OFF position.
3. Do not touch antenna with your fingers or hand. It will cause weak transmission.
4. Your walkie talkie set has been fully adjusted prior to shipment from the factory. Do not touch the internal parts other than replacing the battery.
5. Manufacturer recommends alkaline batteries for maximum performance.
6. To prevent damage. Do not expose the set to rain or moisture.
7. Modifications not authorized by the manufacturer may void users authority to operate this device.