

## SLIDER WALKIE TALKIES™ SLIDE UP ACTION

## TO OPERATE


- 1. You can use the walkie talkies in the slide up position or the down position.
- 2. Switch the ON/OFF VOLUME control ON by sliding upwards.
- 3. To transmit, press the 'PUSH TO TALK' button with the mic about 4" from your mouth. Speak in a normal voice.
- 4. To receive, release the 'PUSH TO TALK' button.
- 5. After you have finished using the walkie talkie switch the ON/OFF volume control OFF by sliding the control downward.

## **CAUTION:**

- 1. If your walkie talkie does not operate properly try a new set of batteries since your batteries may be defective or have low voltage even though they appear
- 2. After use always return the ON/OFF control switch to the OFF position.
- 3. Do not touch antenna with your fingers or hand. It will cause weak transmission.
- 4. Your walkie talkie set has been fully adjusted prior to shipment from the factory. Do not touch the internal parts other than replacing the battery.
- 5. Manufacturer recommends alkaline batteries for maximum performance.
- 6. To prevent damage. Do not expose the set to rain or moisture.

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER.

7. Modifications not authorized by the manufacturer should not be made.

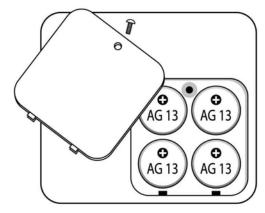

## **BATTERY REPLACEMENT**

EACH UNIT REQUIRES 4 "AG13" BATTERIES (INCLUDED). ALWAYS REPLACE ALL FOUR BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION. NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TY INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE EQUIPMENT SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THIS COUPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED OF PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIALE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON THE USER IS SNOQURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES

\*\*REPORENCE OR BE OCCENTED THE RECEIVING ANTERIES.

RECORDENT OF RELOCATE THE RECEIVING ANTENNE.
INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
CONNECT THE COUPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
CONSULT THE DEALER OR AN EXPERIENCE RADIO/TV TECHNICIAN FOR HELP.



KAWASAKI® IS A TRADEMARK LICENSED BY KAWASAKI MOTORS CORP., U.S.A.,
WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT. CONSUMER INQUIRIES SHOULD BE DIRECTED TO

because kidz like toyz KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549

For Product Questions Call 1-877-KIDZTOY (877-543-9869) Ask for CUSTOMER SERVICE. Only in the U.S. and CANADA

**MADE IN CHINA**