
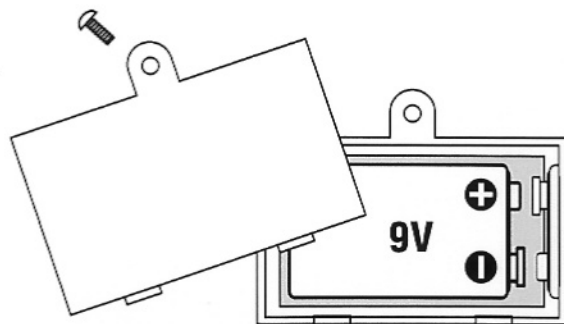


AGES 5 & UP

# KT 1000 LONG RANGE WALKIE TALKIES

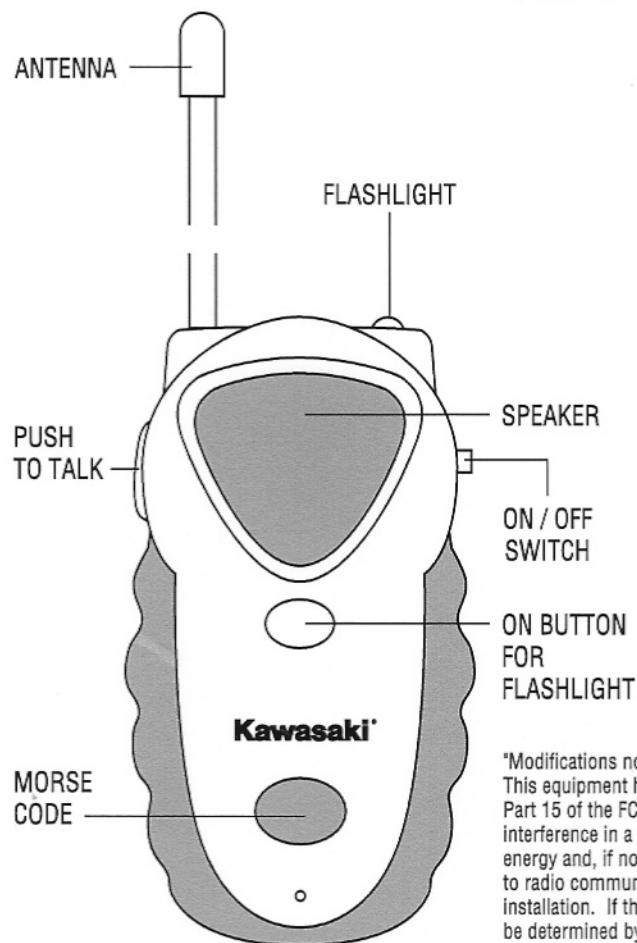

## BATTERY REPLACEMENT

REMOVE THE BELT CLIP BY PULLING THE TAB IN THE MIDDLE PORTION OF THE BELT CLIP AND SLIDING IT UP AND OFF THE UNIT. REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. EACH UNIT REQUIRES 1-9V BATTERY (NOT INCLUDED). ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

"Modifications not authorized by the manufacturer may void users authority to operate this device" This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## TO OPERATE

- Switch the **ON/OFF VOLUME** control **ON** by sliding upwards.
- To transmit, press the **PUSH TO TALK** button with the speaker about 4" from your mouth.
- To receive a message, release the **PUSH TO TALK** Button.
- To transmit a code, press and hold the **PUSH TO TALK** Button and tap the **MORSE CODE** Button to transmit the desired code characters.
- After you have finished using the walkie talkie, switch the **ON/OFF VOLUME** control **OFF** by sliding downward.
- To use the flashlight press the **ON** button to use the flashlight. The flashlight turns **OFF** when you release the button.

## CAUTION:

- Operation performance may be affected by surrounding structures and equipment. For best results, use the walkie talkies in an open area.
- If your walkie talkies are not operating properly, install a new battery. The manufacturer recommends alkaline batteries for maximum performance.
- Always turn the walkie talkies **"OFF"** when you are finished using them.
- To prevent damage, do not expose them to rain or moisture.
- Do not touch the antenna with your fingers or hand, it may cause weak transmission.
- Your walkie talkies have been set and fully adjusted by the manufacturer prior to shipping. Do not touch internal parts other than replacing the battery.
- Modifications not authorized by the manufacturer may void users authority for this device.



because kidz like toyz

KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549

Please visit us on the web at  
[www.kidztoyz.com](http://www.kidztoyz.com)

For Product Questions,  
Call 1-877-KIDZTOYZ (877-543-9869)  
Ask for CUSTOMER SERVICE.  
Only in the U.S. and CANADA

MADE IN CHINA  
ITEM NO. 22297

# Kawasaki

Kawasaki Motors Corp., U.S.A.

OFFICIAL \* LICENSED \* PRODUCT

87-11504-45628

KAWASAKI® IS A TRADEMARK LICENSED BY  
KAWASAKI MOTORS CORP., U.S.A.,  
WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT.  
CONSUMER INQUIRIES SHOULD BE DIRECTED TO  
KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD,  
SUITE 203, MT. KISCO, NEW YORK 10549