

PARTY DJ


HOW TO USE YOUR PARTY DJ

You can use the Party DJ with a FM radio or without. The Party DJ comes with a built in speaker.

1. Turn the right gray knob to the ON position. The power light will light up and LIVE will illuminate.
2. To amplify your voice through a FM radio, push the yellow lever up to the FM position.
3. Use any good FM radio. Turn your radio on and face the radio towards you. Adjust the radio volume to a LOW LEVEL. Place the microphone on the Party DJ near the radio. Hold the microphone about 2 inches (5.08cm) from your mouth and speak in a normal voice while tuning your radio to 100 MHz on the FM dial. The volume for the microphone can be adjusted by turning the gray knob on the left-hand side. After you hear your voice come through the radio move about 5 feet (152.4cm) away while someone tunes the radio to the best reception. When using the Party DJ more than 10 feet (304.8cm) away it may be necessary to increase the volume on the radio and adjust the tuning dial again for the best reception.
4. To be your own DJ without the radio, push the yellow lever back down to the speaker position. When you speak into the microphone, your voice will amplify through the speaker.
5. To personalize your DJ style, while speaking into the microphone, press the 3 yellow levers to hear laughing, cheering and drum sounds.
6. Put a cassette tape into the cassette player and while the songs are playing, you can sing into the microphone and your voice will be amplified through the speaker or through the FM radio. You will also be able to hear the 3 fun sounds through the speaker or radio.
7. You may adjust the volume of your voice or the tape with the gray knob on the right hand side.
8. When you are finished playing with the Party DJ please turn it off by using the gray knob on the right hand side. The power LED will fade. Be sure to turn your radio off as well.

IMPORTANT NOTES

- This microphone is for use with FM radios only and will not work on the AM band.
- The tuning range of your FM Microphone is 100 on the FM dial.
- The reception of the Microphone may be affected by the environment i.e. metal structure or the movement of people between the Microphone and the radio. The reception is also affected by the condition of the Microphone and/or radio batteries.
- If the Microphone is not to be used for an extended period, remove the batteries from the set.
- For the best result, the manufacturer recommends the use of alkaline batteries.
- To prevent damage do not expose the set to rain or moisture.
- Modifications not authorized by the manufacturer may void users authority to operate this device.

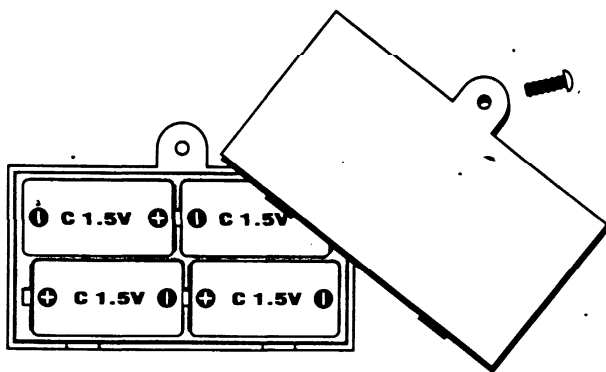

BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. THIS UNIT REQUIRES 4 "C" BATTERIES (NOT INCLUDED). ALWAYS REPLACE ALL FOUR BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.



because kidz like toyz
KIDZ TOYZ, INC. WHITE PLAINS, N.Y. 10605

Please visit us on the web at: www.kidztoyz.net

MADE IN CHINA
ITEM NO. 70055